

Manual boXer

 


Content:

1. Technical specifications.....	3
2. Terms of use	4
3. Menu scheme	5
4. Settings	6
5. Consignment content.....	6
6. Safety instruction	7
7. Warranty.....	9
8. Maintenance.....	10
9. Contact	11



1. Technical specification

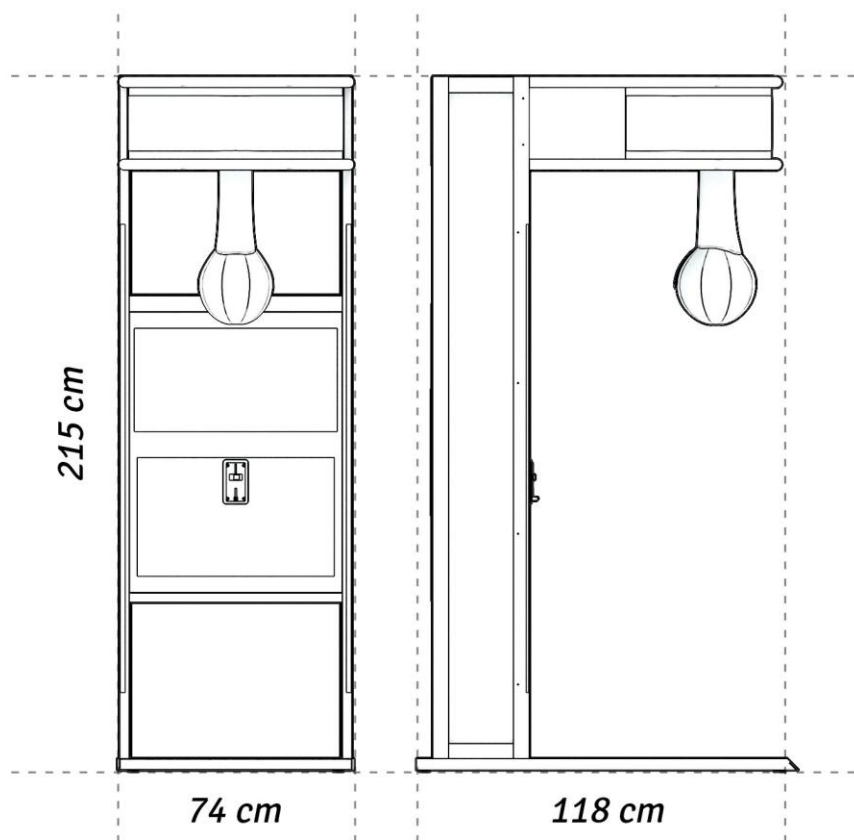

Dimensions of the device: **74 cm x 118 cm x 215 cm**

Weight: **190 kg**

Input voltage: 220/110V

Power: 100 W

2. Terms of use

BoXer is a machine that measures the force of impact, intended for one user. The aim of the game is to hit the punched ball as hard as possible and obtain the highest possible score

 
 
Please read the instructions and follow the rules contained therein. The warranty does not cover damage resulting from improper use of the device

Read the instructions beforehand.

Always make sure the machine is unplugged before you do any maintenance. Only authorized staff may carry out any work on the machine. Under no circumstances should any plug or connector be pulled out or disconnected when the power is on. Make sure the plug and socket are properly grounded. Protect the mains cable against any damage. Oil and acid can damage the cable. Use proper extension cables and do not overload power sockets. Use only original spare parts.



3. Menu scheme

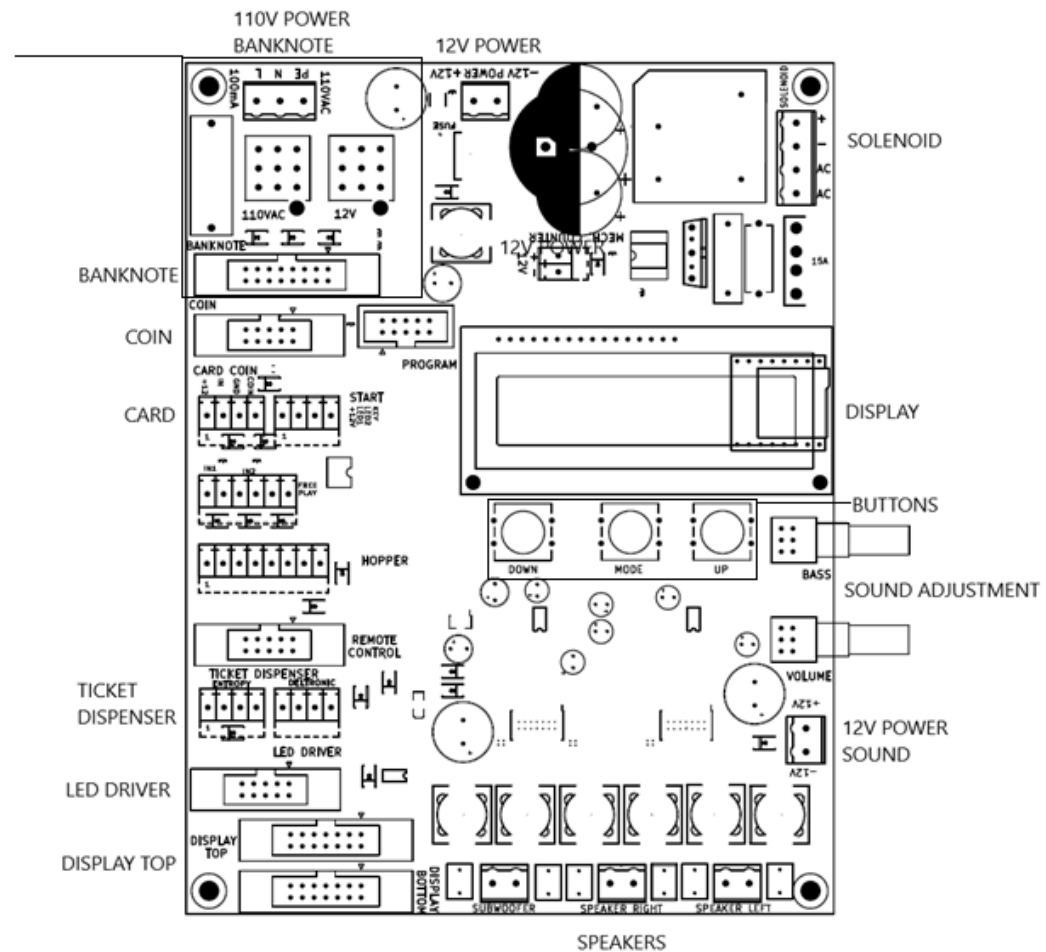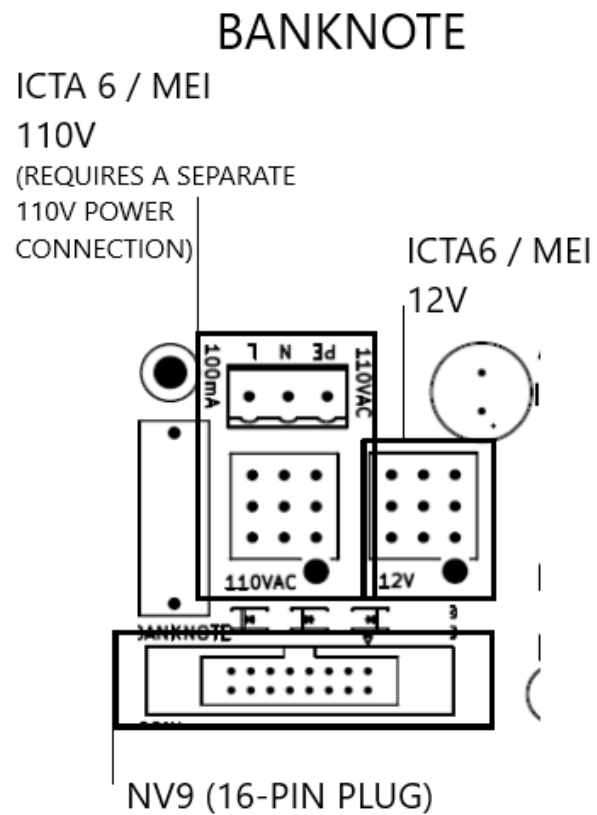

4. Settings

Menu Motherboard boXer					Comments
To go to the mainbvoard menu, hold down the middle "MODE" button and enter the code "0000" by clicking the mode button					
Start/impulse	2	<1 "free-play"			after how many smallest coins the device starts
Coin/impulse	0,5				the smallest coin
Bonus coin	Imp4. Credit 1	Imp1. Credit 0	Imp1. Credit 0	Imp1. Credit 0	Set Bonus
Bonus record	1				credit bonus for breaking the record
Record The points start decreasing after 3 minutes, with the reduction continuing gradually for up to 90 minutes	Current	500			current record
	Minimum	400			minimum record
	Maximal	1490			maximum record
	Record reduce every	3min			time after which the record is lowered
	Record reduce by	1			points by which the record is to be lowered
	Record reduce through	90min			period in which the record is to be lowered
	Record tuning	25			points by which it should randomly lower the maximum record
Demo	Volume 25	Time 10min	demo music		
Tickets	Ticket/Record 0	Points/Ticket 0	Ticket/Credit 0	number of tickets per record/points/credits	
Measur. Sensitivi	100%				sensitivity of the force measurement sensor
Number of git's	6				
Clear counts	NO / YES				
Set default	NO / YES				
Change code	0***				
Language	Polsk / English / Deutsch				
Exit	Exit (acceptance of introduced changes)				



Consignment content

- Device
- Set of keys (panel of coin acceptor)
- Power cable (cashbox)

5. Safety instruction

The manufacturer recommends fixing the device to the ground for proper functioning and operation. Designate the places where the device will be located. The equipment has holes that allow it to be attached to the ground.

Before starting the installation, be sure to read the safety instructions included in this manual. It is necessary to check the technical condition of electrical devices and installations (condition of insulation of wires and cables, plugs, switches, sockets), neutralization and earthing, condition of fire protection. Check the technical condition of the current protections.

Most work accidents are caused by disregard or non-compliance with basic safety regulations. Accidents can be avoided by anticipating possible life or health-threatening situations and strictly following the safety procedures. Always make sure that the conditions and technical condition of the device allow for safe operation for the user and nearby third parties.

IMPORTANT!

- The product is not intended for rehabilitation purposes.
- Use the device only for its intended purpose.
- Any other use of the device is prohibited and may be dangerous. The manufacturer is not responsible for any damages or injuries caused by improper use of the equipment.
- The equipment has been manufactured with safety standards. Potential injury hazards have been ruled out.



- It is recommended to insure the purchased equipment. A policy against accidents can protect you against serious financial consequences of the damage caused.

To avoid injuries and / or accidents, follow these simple rules:

- Persons under 18 years of age, meeting the above criteria of appropriate height, should only use the device under the supervision of an adult.
- Regularly check that all bolts and nuts are tightened and that the handles are properly fastened.

The safety of the equipment can only be guaranteed if it is subject to regular inspections and controls.

- Always use the equipment for its intended purpose. If during use any part proves to be defective or makes disturbing sounds, stop using the device and have the device serviced. A damaged device must not be used.
- Replace any damaged parts immediately and do not use the equipment until it is repaired. You should also pay attention to possible material consumption. Safe use of the equipment can only be ensured if the wearing parts are regularly checked carefully.
- Avoid high temperatures, humidity and contact with water.
- There must be at least 1.5m of free space.
- Place the equipment on a solid and level surface. Use floor protection under the machine. Place the appliance on a straight, stable and hard surface. For safety reasons, 1.5 m of free space on each side for safe use should be left around the device.
- Do not train immediately before or after a meal.
- Do not stand on the housing.
- Do not use while under the influence of drugs or alcohol.
- The safe and effective use of the device can only be ensured when it is maintained and used properly, as described in the manual.
- TRANSPORT: Be especially careful when lifting and moving the device. Only transport the device with a forklift or hand pallet truck.
- It is forbidden to hit the leather parts with hard or sharp objects.
- The pads should not be cleaned with chemical agents - it is recommended to use a damp cloth to clean the surface.
- ELECTRICAL NOTES:

The hardware requires a proper power source to operate. For your own safety as well as the safety of others, please make sure the power source is correct



before turning on the device. Any source of power above or below the level can cause significant damage to the equipment and / or user.

This product must be earthed. If the machine fails, grounding provides a path of least resistance from electric current to reduce the risk of electric shock. This product is equipped with an earthed plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Incorrect connection of the equipment may present a risk of electric shock. Check with a qualified electrician or serviceman if you are not sure that the appliance is properly grounded. Do not modify the plug provided with the product. If it does not fit the outlet, have a proper outlet installed by a qualified electrician. Make sure that the machine is connected to an outlet with the same plug configuration. Do not use an adapter for this product

- After use, this product cannot be disposed of as household waste, but must be taken to a collection point for used electrical and electronic equipment. The materials can be recycled according to their labeling. By recycling, material recycling or other forms of using old appliances, you contribute to the protection of our environment.

6. Warranty

Terms of warranty:

- The warranty period is 1 year from the date of sale, if the device was purchased by a customer who runs a business.
- The warranty period is 2 years from the date of sale, if the device was purchased by a customer who does not run a business
- The condition of the warranty is the presentation of the warranty card signed by the manufacturer and a description, photos or video of the failure
- The warranty card includes, among others machine serial number, date of sale, buyer data, manufacturer's company signature. (take care of the condition of the aforementioned document - illegibility of the document excludes the warranty)
- Damaged parts should be sent to the service .
- Any damage caused knowingly by the user is not the responsibility of the manufacturer.



- The manufacturer is not responsible for damage caused by a natural disaster (storm, lightning, hail, etc.), random accidents, improper use and incorrect operation.
- The manufacturer is not responsible for damage in transit
- The manufacturer is not responsible for damage caused by use by players (scratches, bumps, dents, bends, etc.)
- Replacing parts in the device does not extend the warranty period (the warranty covers all free repairs / replacements for a period of 1/2 years, depending on the above-mentioned).
- The manufacturer is not responsible in any way for the time when the device is not functioning during the warranty period.
- The manufacturer is not responsible in any way for damage to property or personal damage caused by improper use of the device.
- The warranty covers a device that has not been modified or has not been repaired by itself without consulting service.
- The warranty covers only the buyer of the device (continued sale excludes the warranty granted for the machine)
- The manufacturer has the right to refuse to repair under the warranty if the customer has outstanding payments with the manufacturer

Repair after the warranty period:

- It is recommended to repair the device only at the manufacturer's. The cost of repair and replacement parts is covered by the customer.

8. Maintenance

- For cleaning, use a damp cloth without harsh cleaning agents. Protect the computer from moisture.
- Parts that come into contact with sweat need only be cleaned with a damp cloth.
- Just wipe the screen with a wet towel, and then wipe dry with a microfiber cloth, lightly polishing any streaks. A badly dirty screen may need to be cleaned again or washed first with water and a little washing-up liquid. It is important that the towel is clean and free from dirt that could scratch the screen.
- Regularly check all parts of the device and the tightness of all screws and connections.
- Report any damaged parts to our service center for replacement. The equipment must not be used until it has been repaired.

