



IMPORTANT



Be Sure
to Read this
Manual
Before Use



To UNIS Parts And
Service/Manuals



UNIS TECHNOLOGY

NOTE: Some portions of assembly may require additional assistance.

Operation Manual

Notice: Check www.unispartsandservice.com/manuals for current manuals and updates.

WE ARE HERE TO ASSIST For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

www.unispartsandservice.com

When contacting Service, you will need the following information
and the name of your authorized distributor.

INDOOR MACHINE	
NAME: Emoji Bash GMP	MAX POWER: 1000W
MODEL: A-532	MIN POWER: 450W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC110V~	DATE:
Guangdong UNIS Technology Co.,Ltd.	

INDOOR MACHINE	
NAME: Emoji Bash EU	MAX POWER: 1000W
MODEL: A-533	MIN POWER: 450W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC220V-240V~	DATE:
Guangdong UNIS Technology Co.,Ltd.	

CONTENT

IMPORTANT SAFETY INSTRUCTIONS	3
1. SPECIFICATIONS	5
2. CONTENTS OF THE ACCESSORY KIT	6
3. PART NAME	7
4. SET UP & INSTALLATION	8
5. HOW TO PLAY	14
6. GAME OPTION	15
7. TROUBLESHOOTINGS	20
8. MAINTENANCE & INSPECTION	23
9. OVERALL CONSTRUCTION	24
10. WIRING DIAGRAM	60

Thank you for purchasing **Emoji Bash GMP**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.

Use the following safety guidelines to help ensure your own personal



safety and to help protect your equipment and surrounding environment from potential damage.

⚠️ This product is an indoor game machine. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz;

Min. Power consumption: 450W

Max. Power consumption: 1000W

Dimension: H114.17×W50.79×D68.73 in


H2900×W1290 ×D1745.73 mm

Weight: Approximately 903.89 lb/410 KG

110V Model No: A-532

220V Model No: A-533

! NOTICE : After turning off the game, please wait at least 1 minute before restarting again.

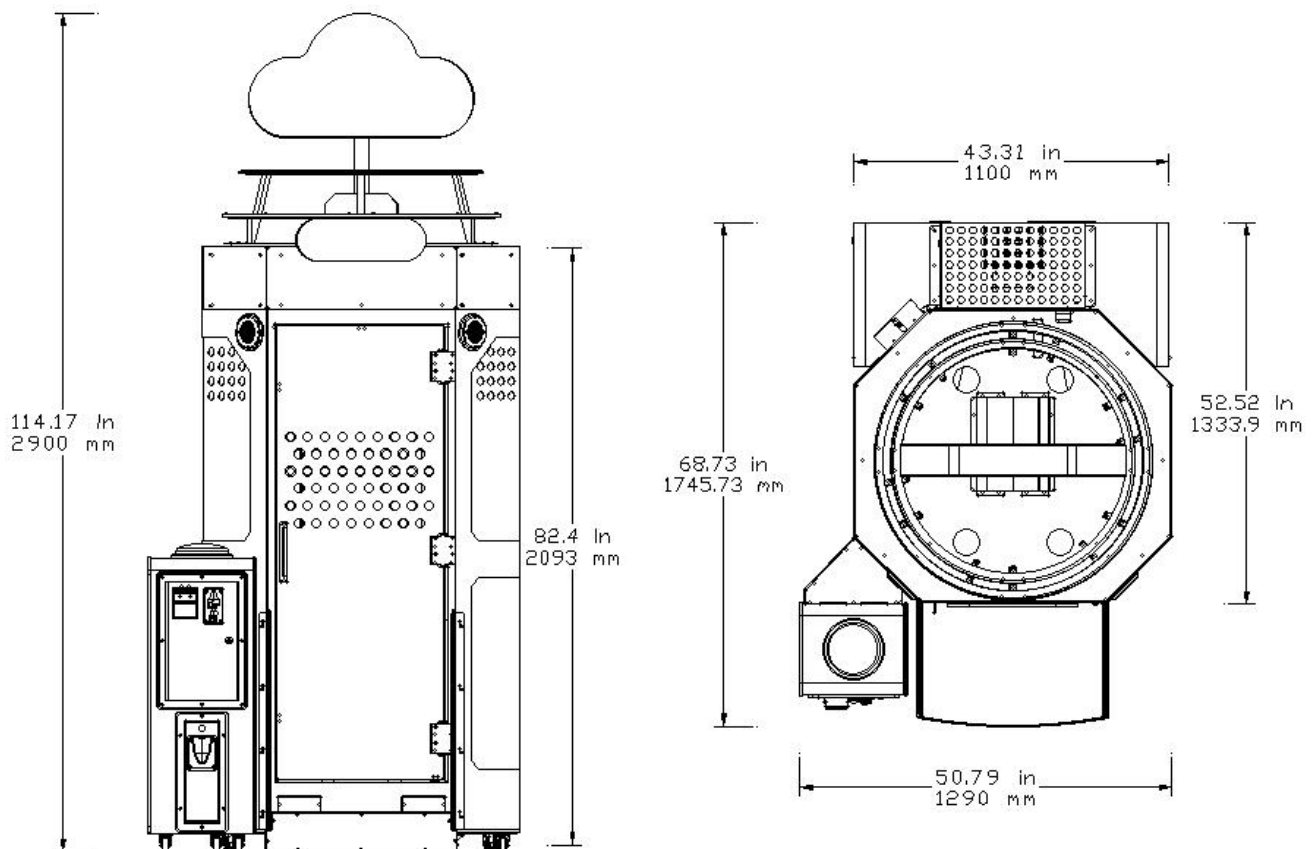

Note: Game specifications are subject to change without notice.

2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:

1. Following accessories

No.	Part No.	Code No.	Name	Qty	Picture
1	E134-1001-00	2.33.01.030001	Power cord 3×0.75mm 1.8M	2	
2	E134-1008-00	2.19.01.000030B	Fuse(T10A) Φ5×20mm T10A 250VAC	1	
3	E134-1009-00	2.19.01.000012	Fuse(T5A) Φ5×20mm T5A 250VAC	2	
4	E134-1015-00	2.53.00172002	171B key	2	/
5	E134-1011-00	2.33.02.000012	Network cable T568A-T568A 5M	1	
6	E134-1012-00	4.10.04000153	Gold ball	5	/
7	E134-1013-00	4.10.04000144	Colorful ball	100	/
8	E134-1014-00	4.14.40000826	Manual	1	
9	E134-1010-00	2.53.00171002	171A key	2	/
10	E134-1002-00	201.01.900269	Hexagon screws M6×12	8	/
11	E134-1003-00	201.01.100035	Cross recessed pan head screws M4×12	4	/
12	E134-1004-00	201.02.000011	Flange Nut M4	2	/
13	E134-1005-00	201.02.000036	Cap Nut M4	10	/
14	E134-1006-00	202.4.2417.074	Coin mech. Blanking plate	1	/
15	E134-1007-00	202.4.2417.075	Tik. Dispenser Blanking plate	1	/

Note: Game specifications are subject to change without notice.

3. PART NAME

Key Components



4. SET UP & INSTALLATION

⚠ NOTICE


We do not recommend using power tools as they may cause damage.

⚠ This product is an indoor game machine. Do not install outdoors.

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid.
- Place the unit on a dry level surface.
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

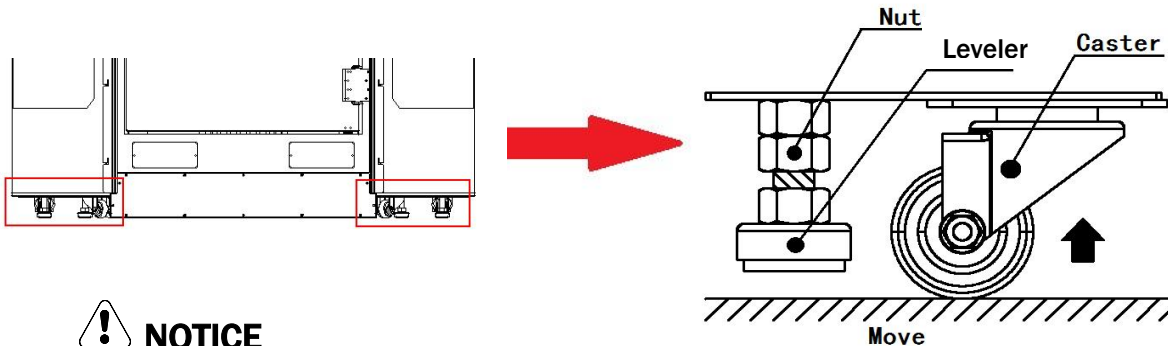


⚠ NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in/5mm. Repeat the same for all levelers.

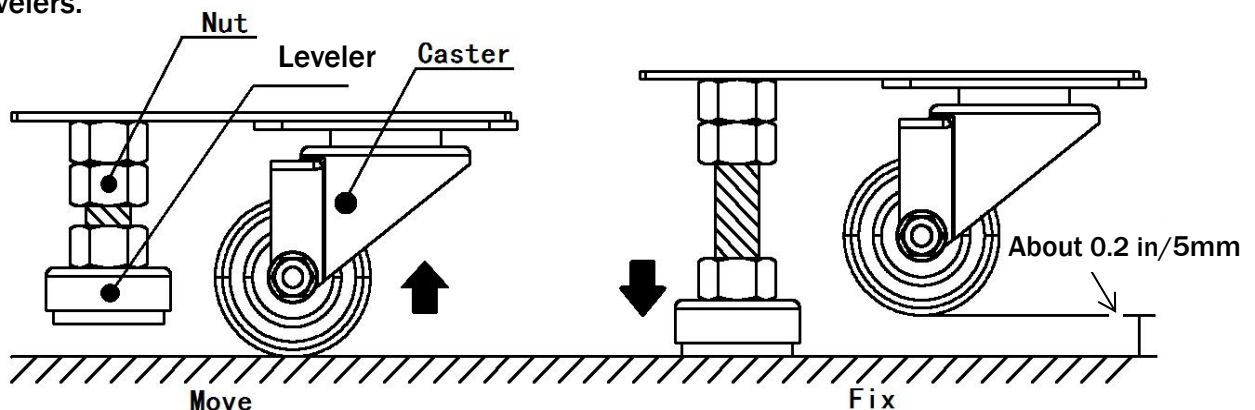

⚠ NOTICE


Make sure the machine is level.

4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Service area: 20 in

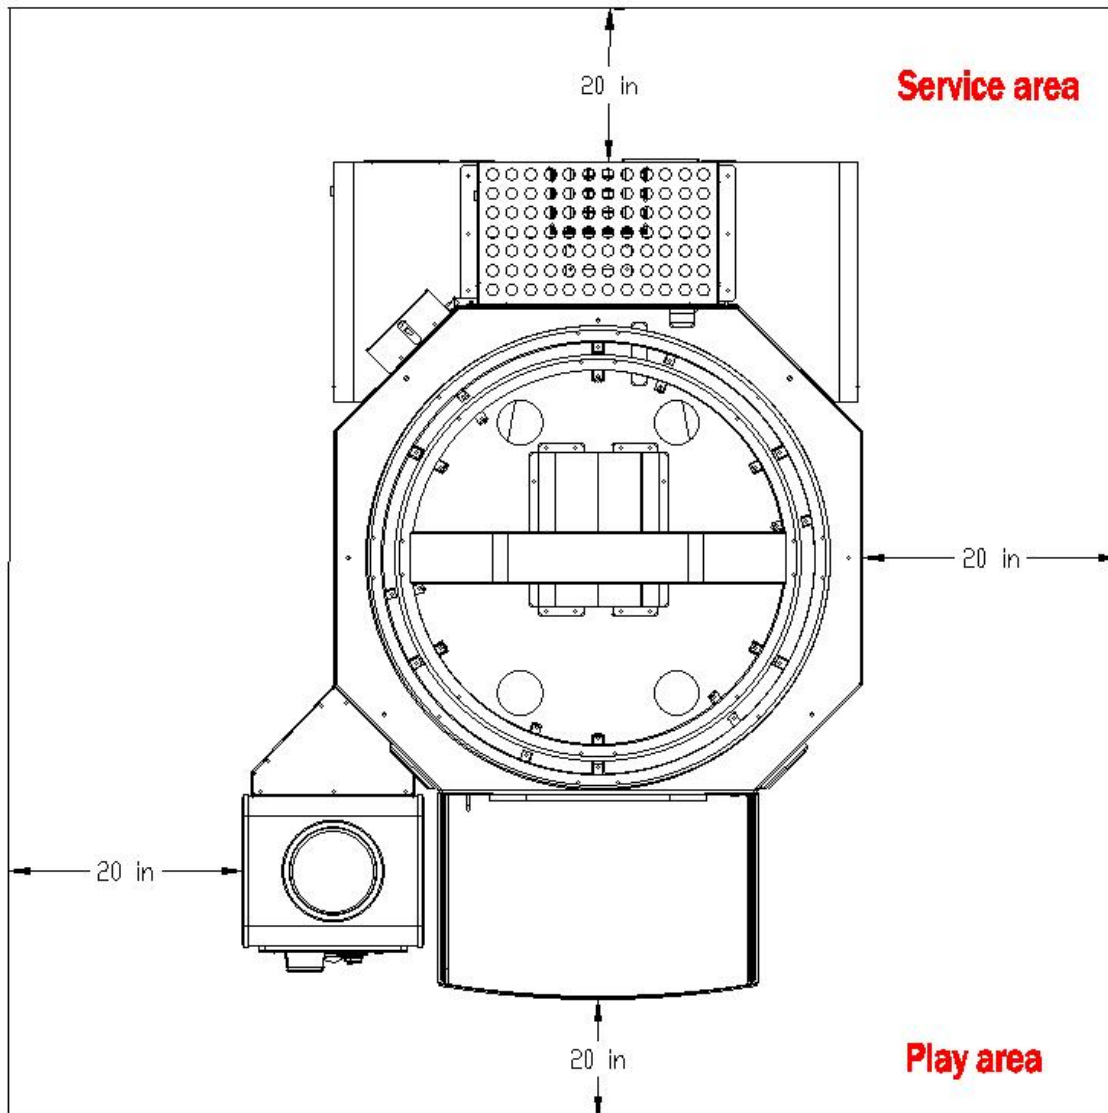


NOTICE


Your unit must be leveled to operate properly.

4.4 Machine Installation


Step 1 Install Motor Assembly to the top of the cabinet . Utilize screws(M6*16) to secure.

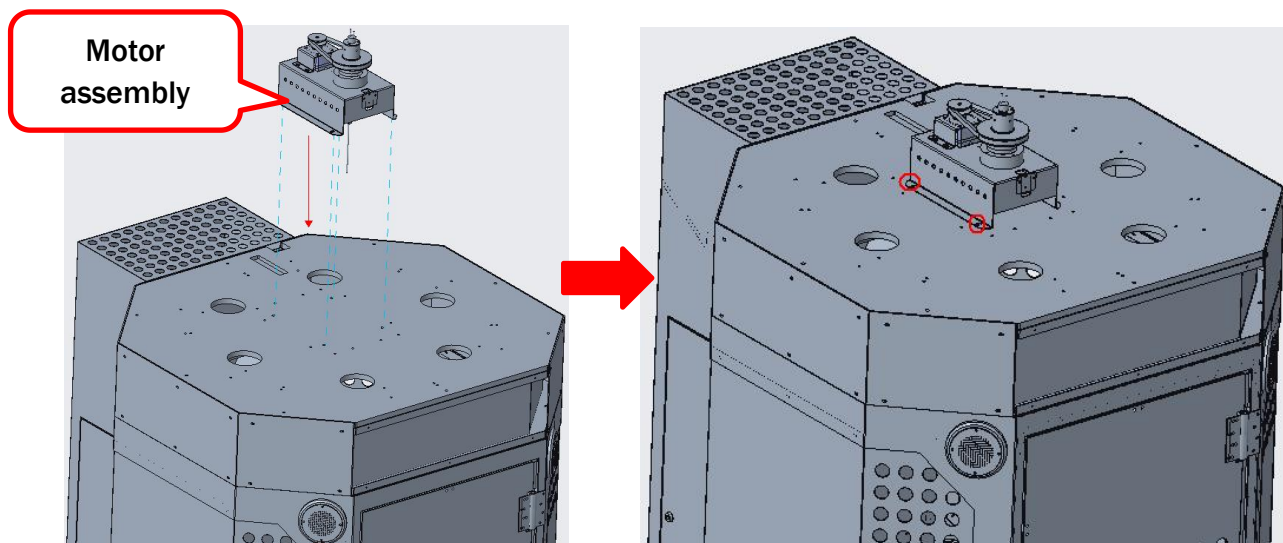


Step 2 Install Emoji marquee to the top of the cabinet . Utilize screws(M5*12) to secure. Connect the connectors.

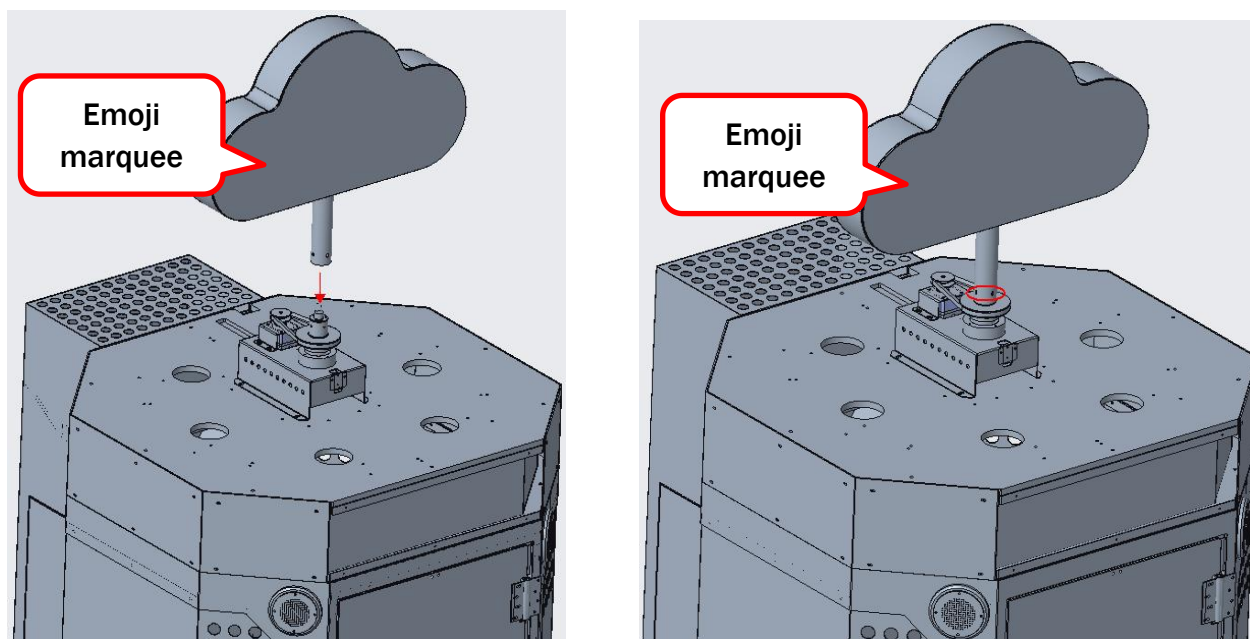


Step 3 Install Motor cover to the motor assembly . Utilize screws(M4*12) to secure.

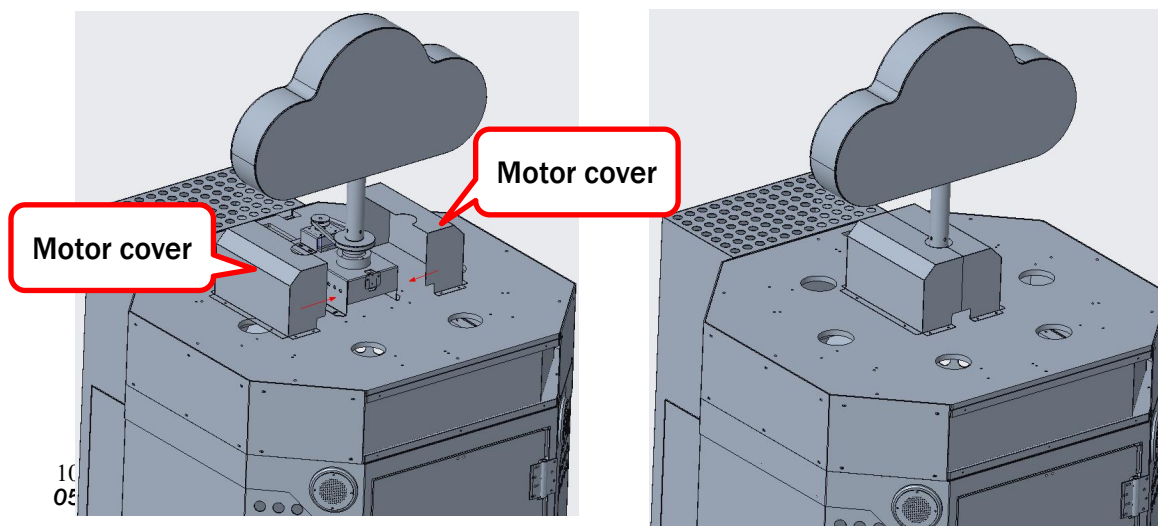


**Step 4 Utilize screws(M4*12) to install round ring bracket to the top of the cabinet.
Connect the connectors.**

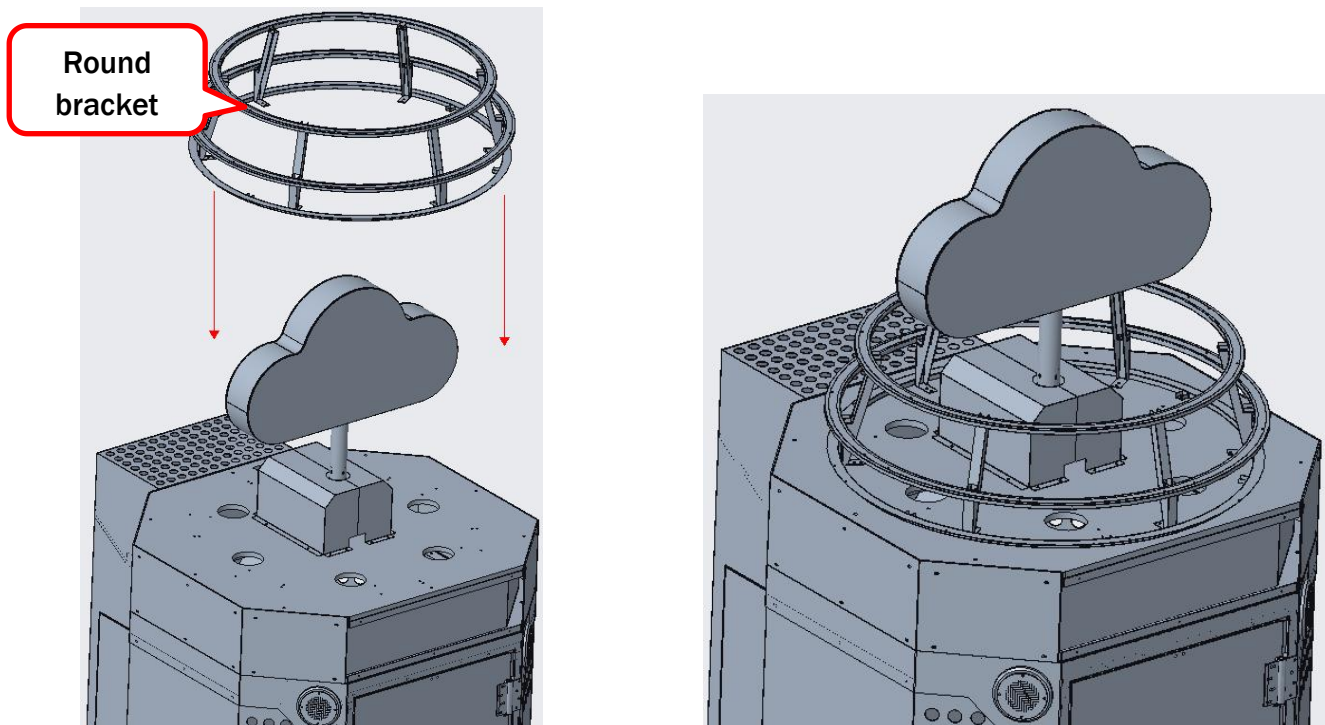


Step 5 Install LOGO Marquee. Utilize screws to secure.

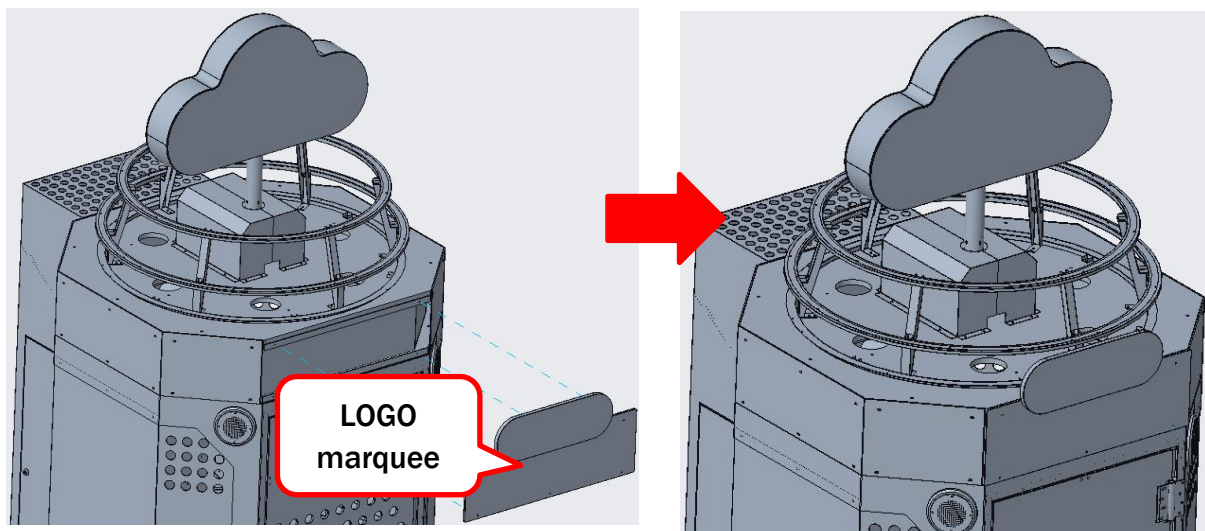


Step 6 Locate Stair assy. Loosen screws to remove L side fence plate. Unplug the connectors.

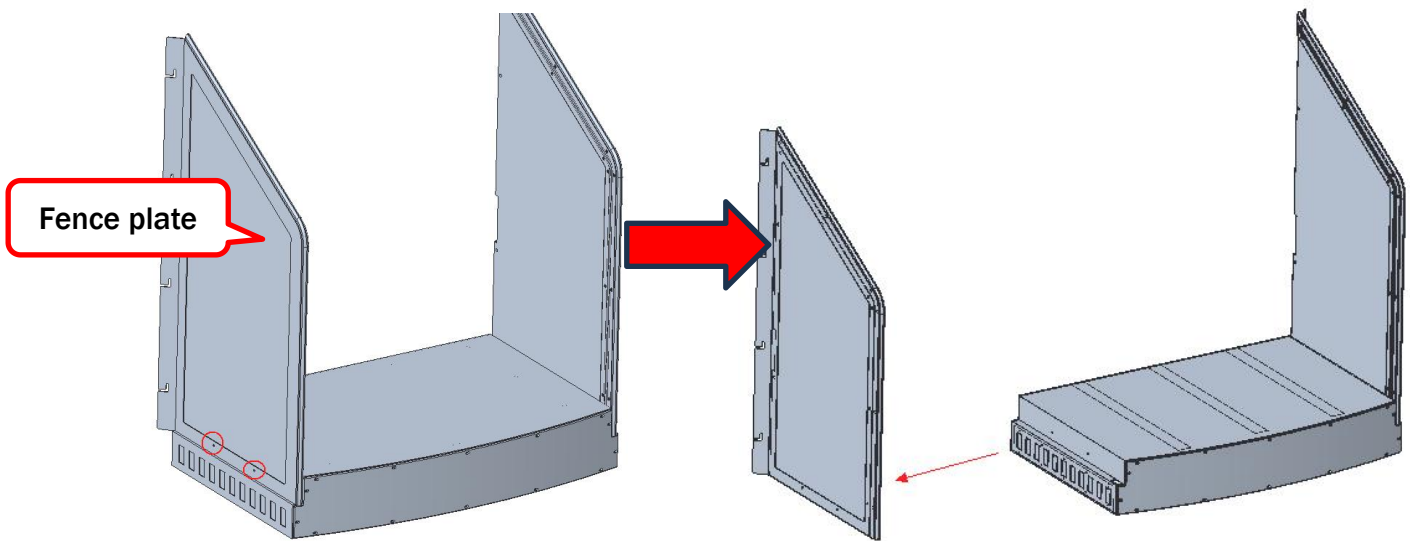



Step 7 Align with stair assy and cabinet. Connect the connectors. Utilize nuts to secure stair assy. to the cabinet.

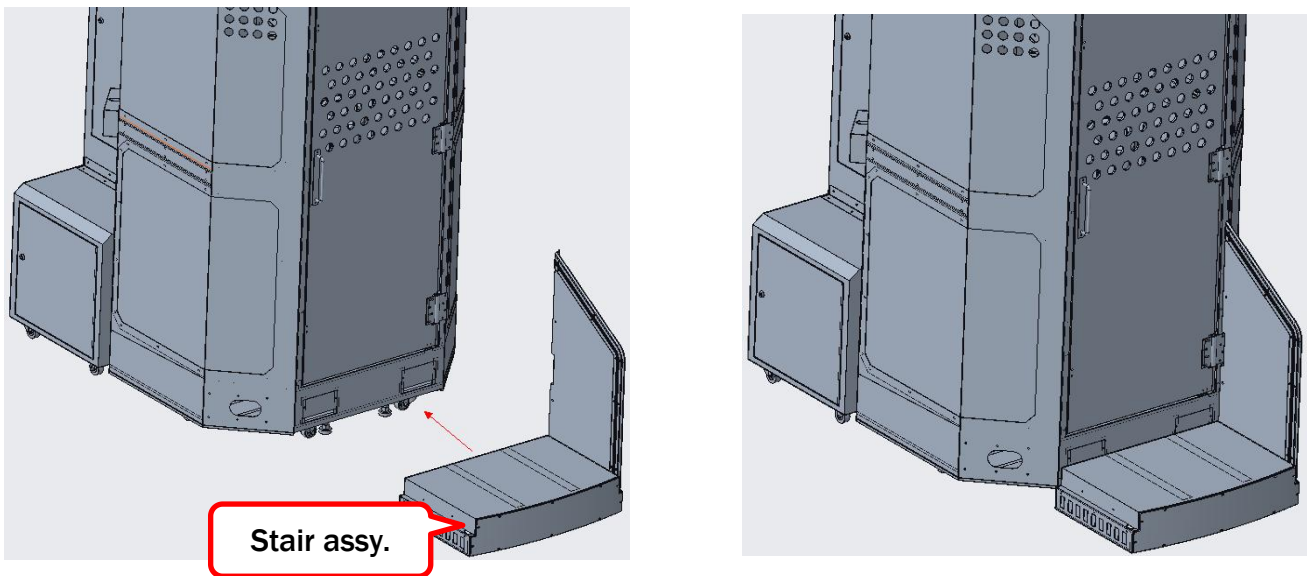


Step 8 Install L fence plate back to the stair assy.

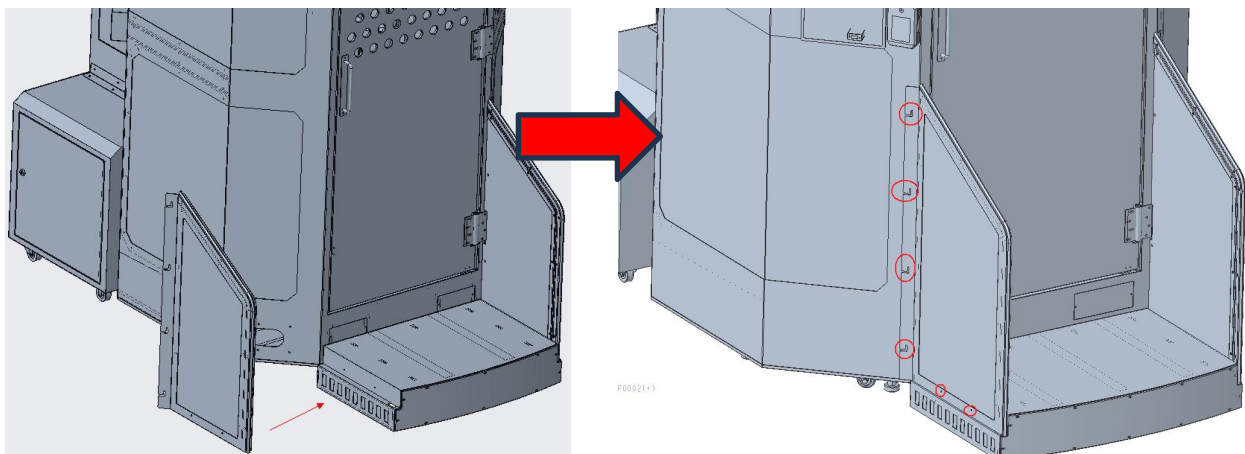

Step 9 Install Coin bracket. Take cover plate out. Utilize screws(M6*12) to secure. Connect the connectors.

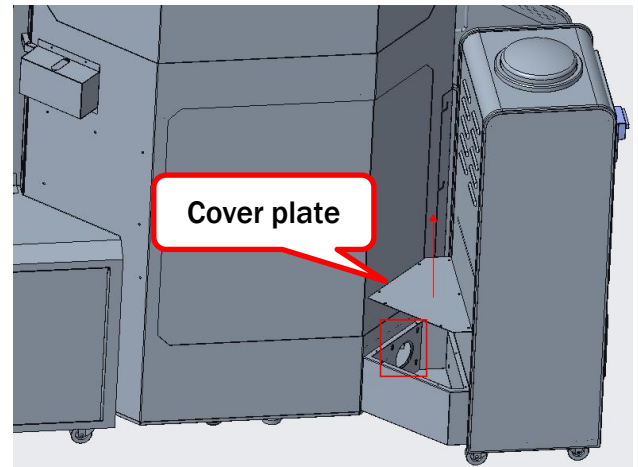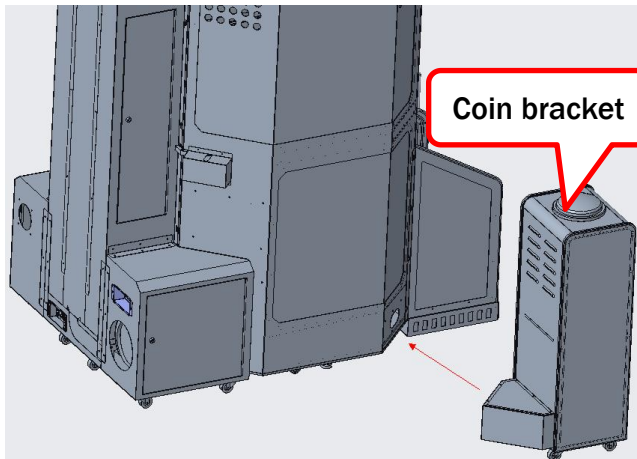

Step 10 Install Cover plate back.

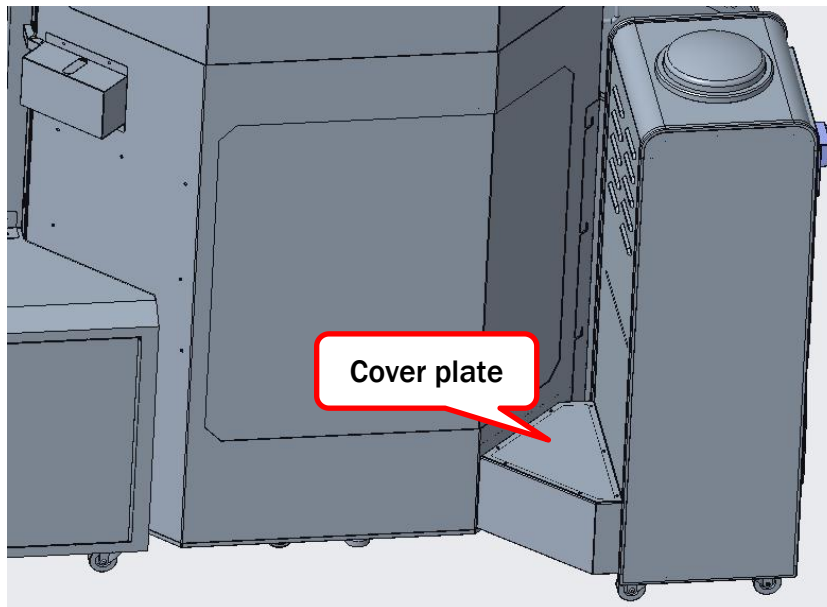

Finish!

4.5 Card Reader Installation Safety Notice



Take precaution to assure that all wiring voltages are confirmed prior to installation of card reader. All warranties are void if not properly installed resulting in logic board damage.

Important: This game is pre-wired to AAMA standards. It is highly recommended to utilize this wiring for Card reader installation.

5. HOW TO PLAY

1. Get balls into the rings! Pull the lever to get more balls!




2. Follow the rings! Fill energy bars for a Bonus!

3. Get the Rainbow ring and get a Bonus!

6. GAME OPTION

6.1 Adjustment button instruction

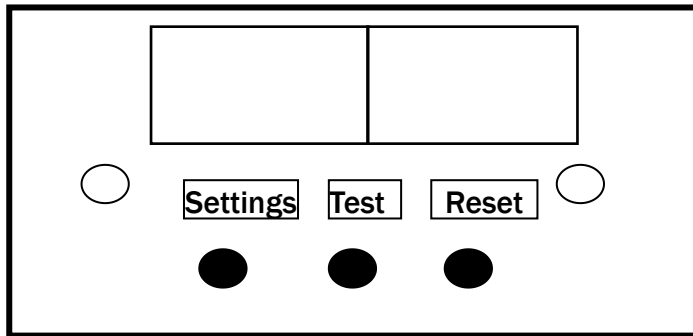

Open the coin door and there is a meter panel. Press Settings button to enter into the setting menu.

6.2 Machine Setting menu

Options
Basic Setting
Customized Setting
Score Setting
Difficulty Setting
Light Setting
Hardware Test

Options
Date/Time Setting
Game Reset
Bookkeeping
Back to game

6.2.1 Basic Setting

Options	Adjustment Value	Default
Demo Music	OFF_ON	OFF
Free Play	OFF_ON	OFF
Tickets Out	OFF_ON	ON
Volume	0-100	80
Coin/play	1-99	1
Tickets/play	5-100	30
Mercy Ticket	0-500	0
Game Time	30-90	75
Back&Save		
Back		

6.2.2 Customized Setting

Options	Adjustment Value	Default
Marquee Turn Interval	3-60	5 min
Marquee Turn Time	0-600	30 sec
Ball Demo Interval	1-60	2 min
Ball Demo Time	0-600	20 sec
Back&Save		
Back		

6.2.3 Score Setting

Options	Adjustment Value	Default
Basic Ball	10-200	20
Gold Ball	10-200	40
Red(Turntable)	10-1000	100
Pink(Turntable)	10-1000	200
Orange(Turntable)	10-1000	400
Blue(Turntable)	10-3000	600
Super Bonus(Turntable)	10-3000	1000
Back&Save		
Back		
Note: "Tickets/play" option is invalid due to these parameters change.		

6.2.4 Difficulty Setting

Options	Adjustment Value	Default
Difficulty	Easy_Normal_Difficult	Easy
Stage 1 Target	1-60	5 ball
Stage 2 Target	1-60	5 ball
Stage 3 Target	1-60	6 ball
Back&Save		
Back		

6.2.5 Light Setting

Options	Adjustment Value	Default
Lightbox Color	Red_Green_Blue_Yellow_Purple_Sky Blue_Loop	Loop
Demo Color	Red_Green_Blue_Yellow_Purple_Sky Blue_Loop	Loop
Game Color	Red_Green_Blue_Yellow_Purple_Sky Blue_Loop	Loop
Win Color	Red_Green_Blue_Yellow_Purple_Sky Blue	Green
Back&Save		
Back		

6.2.6 Hardware Test

Options	Description
Mechanism Test	Refer to 6.2.6.1
Light Test	Refer to 6.2.6.2
Auto Age Test	Refer to 6.2.6.4
Back	

6.2.6.1 Mechanism Test

Options	Options	Options
Ticket Out	Top Fan(Stop)	Lightbox sensor
Blowing Motor(Stop)	Ticket Feedback	Blower sensor
Receiving Motor(Stop)	Ticket Error	Coin/Card Signal
Marquee Motor(Stop)	Lightbox motor sensor	Exit

Handle SW 1 handle SW 2		Door SW	
Hole 1	Hole 2	Hole 3	Hole 4
L Sensor	L Sensor	L Sensor	L Sensor
Mid Sensor	Mid Sensor	Mid Sensor	Mid Sensor
R Sensor	R Sensor	R Sensor	R Sensor
S ball Score	S ball Score	S ball Score	S ball Score
B ball Score	B ball Score	B ball Score	B ball Score

6.2.6.2 Light Test

Options	Options
Small Ring	Hole 3 Light
Large Ring	Hole 4 Light
Marquee Candle	Door&Speaker Light
Top Spotlight	Handle Light
Middle Light	Stair Light
Handle Light	Bottom Light
Hole 1 Light	Back
Hole 2 Light	

6.2.6.3 Auto Age Test

Options	Adjustment Value
Network	Detecting/No Detect
Tablet	Detecting/No Detect
Speaker	Detecting/No Detect
Light	Detecting/No Detect
Camera	Detecting/No Detect
Blowing Motor	Detecting/No Detect
Receiving Motor	Detecting/No Detect
Exit	

6.2.7 Date/Time Setting

Options	Adjustment Value
Year	2020-2100
Month	1-12
Day	1-31
Hour(24)	0-23
Minute	0-59
Back&Save	
Back	

6.2.8 Game Reset

Options	Adjustment Value
Factory Restore	Confirm_Cancel
Clear All Records	Confirm_Cancel
Clear Owed Tickets	Confirm_Cancel
Clear Unused Coins	Confirm_Cancel
Reset Account Password	Confirm_Cancel
Back	

6.2.9 Bookkeeping

	Coins	Tickets
Sum		
Date	Coins	Tickets

7. TROUBLESHOOTINGS

7.1 Common Problem

Please confirm that all connectors fit tightly.


Symptom	Possible Cause	Recommended action
Game will not start	Frame assembly connector is loose.	Check connector.
	Frame assembly fault	Contact with UNIS Service.
Power off	Circuit protector make power SW in off state.	Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service.
Card reader not working	The connector is loose.	Check connector.
	Card reader fault.	Check with card reader manufacturer.
No ticket dispensing	Out of ticket.	Add ticket and press reset button
	Ticket jamming.	Remove the jammed tickets and press reset button.
	The connector is loose.	Plug the connector tightly.
No sound	Low volume	Raise the volume.
	Connector loose.	Check connector.
	Speaker fault.	Check speaker.
	POT installation error.	Install POT correctly.
	POT fault.	Change POT.
	Audio cable problem.	Reconnect the audio cable or change it.

If you see following error signs showing on the display, please try the recommended action.

Display	Possible Cause	Recommended action
	The connection part of the IO board and PC are loose.	Check and reconnect the loose ports of the PC or IO board.
	Cable quality problem	Change the cable after checking the connection between IO board and PC.
	Cable became loose during transportation.	Check and reconnect the loose cables of the PC or IO board.
	IO board is faulty.	Reboot the game after checking U disk connection and cable problem, if the problem remains unresolved, please call the service department for assistance.
	Out of ticket.	Refill ticket
	Loose connection of the ticket dispenser's cables.	Check and reconnect the loose cables to the ticket dispenser.
	Ticket dispenser is faulty.	Change the ticket dispenser.
	Ticket jam.	Remove jammed tickets.
	Loose connection of the marquee motor sensor cables.	Check and reconnect the loose cables to the marquee motor sensor cables.
	Sensor is faulty	Replace sensor.

7.2 System Recovery Operation **(NOTE: Do not disconnect power during this process.)**

1. Turn off the game. Remove recovery stick from the machine. (Note: This process may take up to 60 minutes) Insert the recovery stick into the port at the back of the computer.
2. Restart PC to enter the system recovery screen as shown.

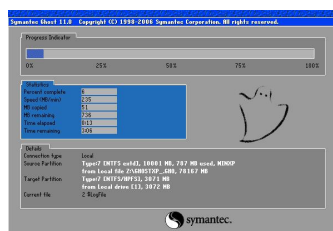

3. The game will automatically start recovery.
4. Once system recovery is partially finished (as shown below), and the ICON appears, remove the recovery stick from the computer. The game will continue the install process.

OK to remove the recovery stick.



5. Assure that the recovery stick has been properly secured for future use.



WARNING: The recovery stick should only be used to fix software errors. Using it for other purposes may cause unexpected results and damages.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components to ensure good working condition.
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.

8.2 Handling Precautions

When installing or inspecting the machine, be very careful and pay attention to ensure that the player can enjoy the game safely.

Inappropriate handling running counter to the cautionary matters can cause personal injury or damage to the machine.




NOTICE

We do not recommend using power tools as they may cause damage.


9. OVERALL CONSTRUCTION

9.1 General Assembly

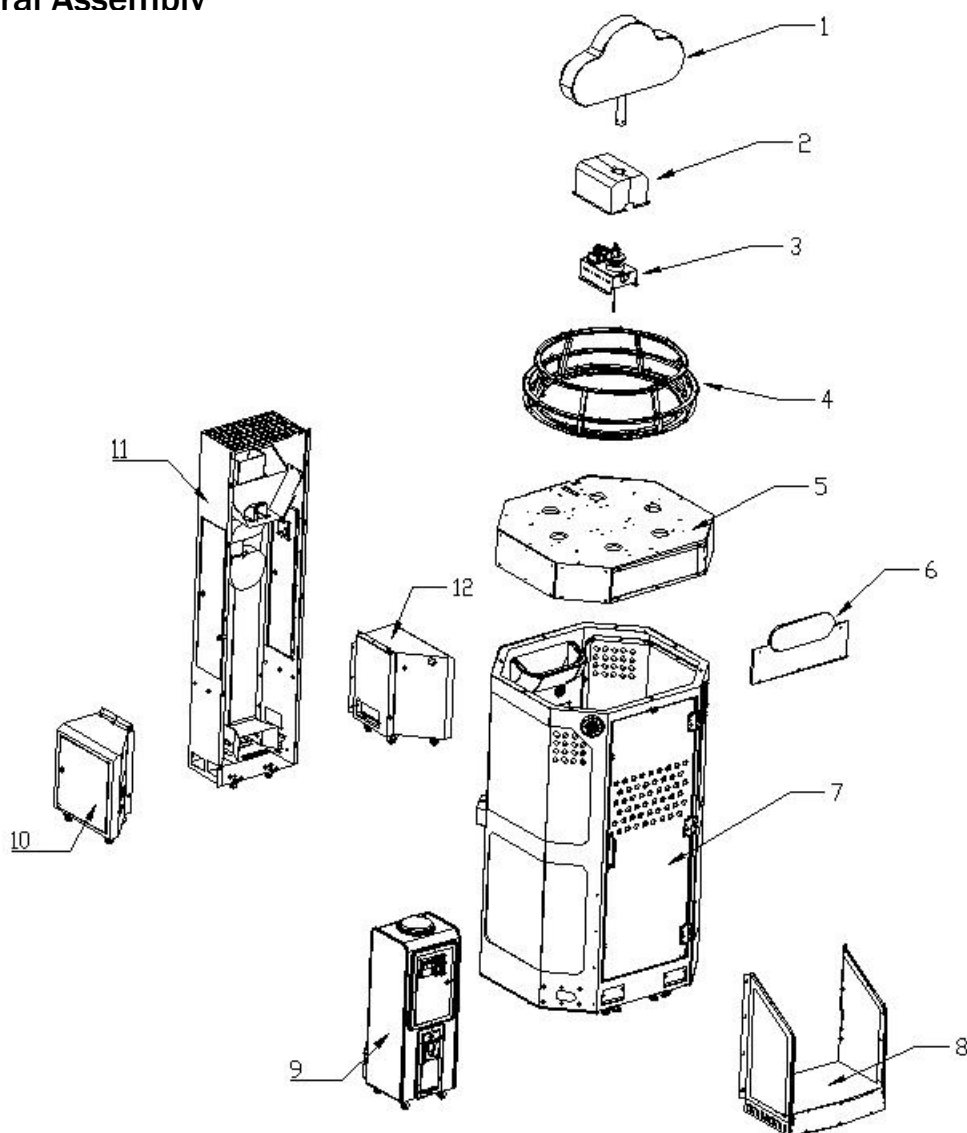


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0100-00	206.4.2417.040	Top marquee	1.1	1
2	E134-1413-00	202.4.2417.072	Rotation motor cover plate L	1.1	1
	E134-1414-00	202.4.2417.073	Rotation motor cover plate R	1.1	1
3	E134-0600-00	299.4.2417.006	Rotation base bracket assy	1.1	1
4	E134-0700-00	299.4.2417.005	Round ring assy	1.1	1
5	E134-1100-00	299.4.2417.004	Top bracket assy	1.1	1
6	E134-1103-00	206.4.2417.058	Front LOGO character	1.1	1
7	E134-1200-00	299.4.2417.003	Main cabinet assy	1.2	1
8	E134-1400-00	299.4.2459.001	Stair assy	1.1	1
9	E134-1300-00	299.4.2417.010	Coin bracket assy	1.1	1
10	E134-0300-00	299.4.2417.009	Blower box assy	1.1	1
11	E134-0200-00	299.4.2417.007	Wind track bracket assy	1.1	1
12	E134-1500-00	299.4.2417.008	Electrical bracket assy	1.1	1

9.2 Rotation Base Bracket Assy

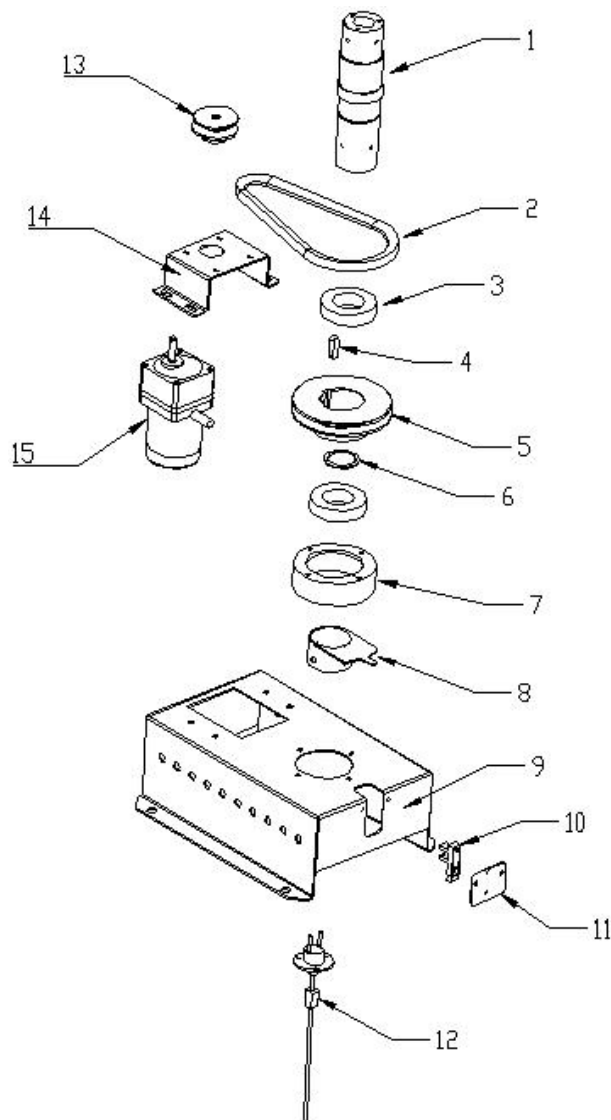


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0613-00	202.4.2430.046	Rotation column	1.1	1
2	E134-0608-00	2.65.01.000018	A type triangle belt	1.1	1
3	E134-0602-00	201.06.002047	Bearing(6909)	1.1	2
4	E134-0605-00	202.4.2430.049	Axle key	1.1	1
5	E134-0614-00	202.4.2430.047	Large belt wheel	1.1	1
6	E134-0604-00	201.05.000183	A washer	1.1	1
7	E134-0603-00	202.4.2430.045	Bearing plate	1.1	1
8	E134-0601-00	202.4.2430.050	Axle sensor block plate	1.1	1
9	E134-0607-00	202.4.2417.028	Marquee base bracket	1.1	1
10	E134-0815-00	2.15.03.000079	Slot sensor	1.1	1
11	E134-0610-00	202.4.2417.030	Sensor mounting plate	1.1	1
12	E134-0606-00	2.16.08.000022	Conductive ring	1.1	1
13	E134-0611-00	202.4.2430.048	Small belt wheel	1.1	1
14	E134-0609-00	202.4.2417.029	Motor mounting plate	1.1	1
15	E134-0612-00	2.34.04.000236	DC motor	1.1	1

9.3 Round Ring Assy

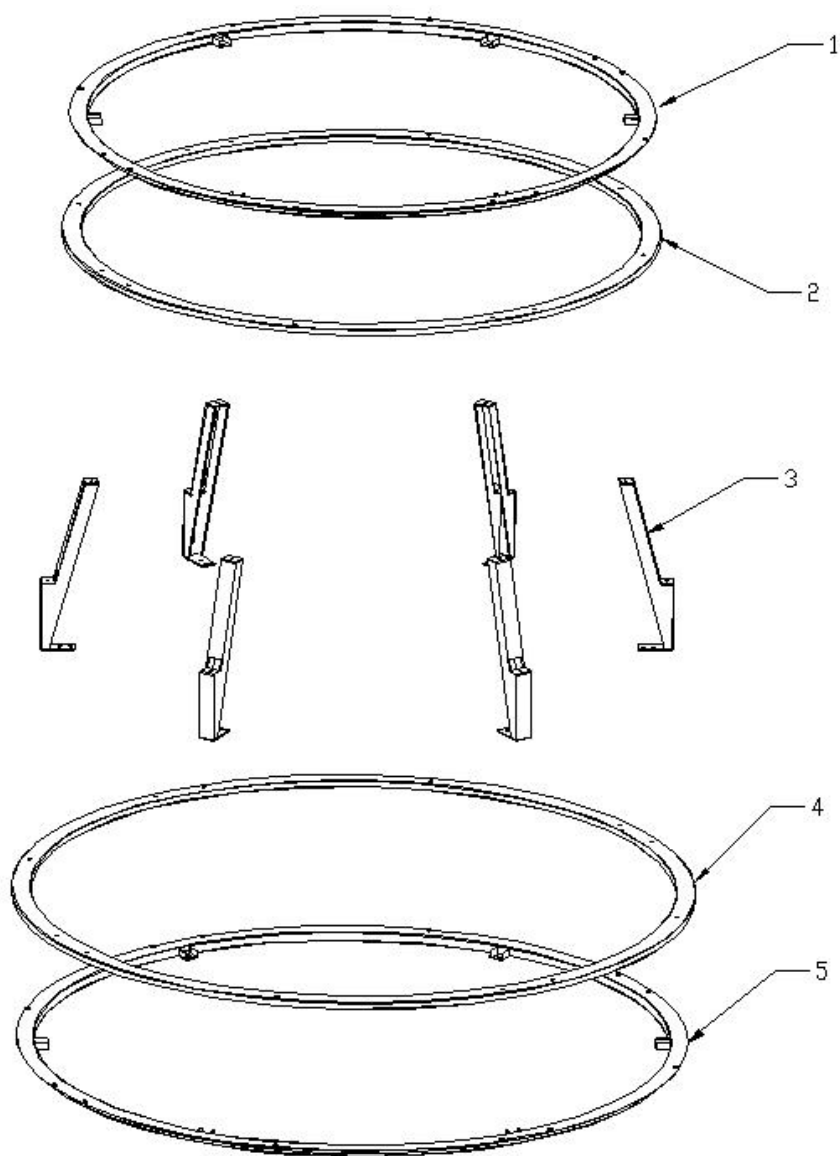


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0705-00	202.4.2417.026	Round ring plate(s)	1.1	1
2	E134-0701-00	206.4.2417.061	Top round ring plastic(s)	1.1	4
3	E134-0703-00	202.4.2417.027	Round ring support plate	1.1	6
4	E134-0702-00	206.4.2417.060	Top round ring plastic(l)	1.1	4
5	E134-0704-00	202.4.2417.025	Round ring plate(l)	1.1	1

9.4 Top Bracket Assy

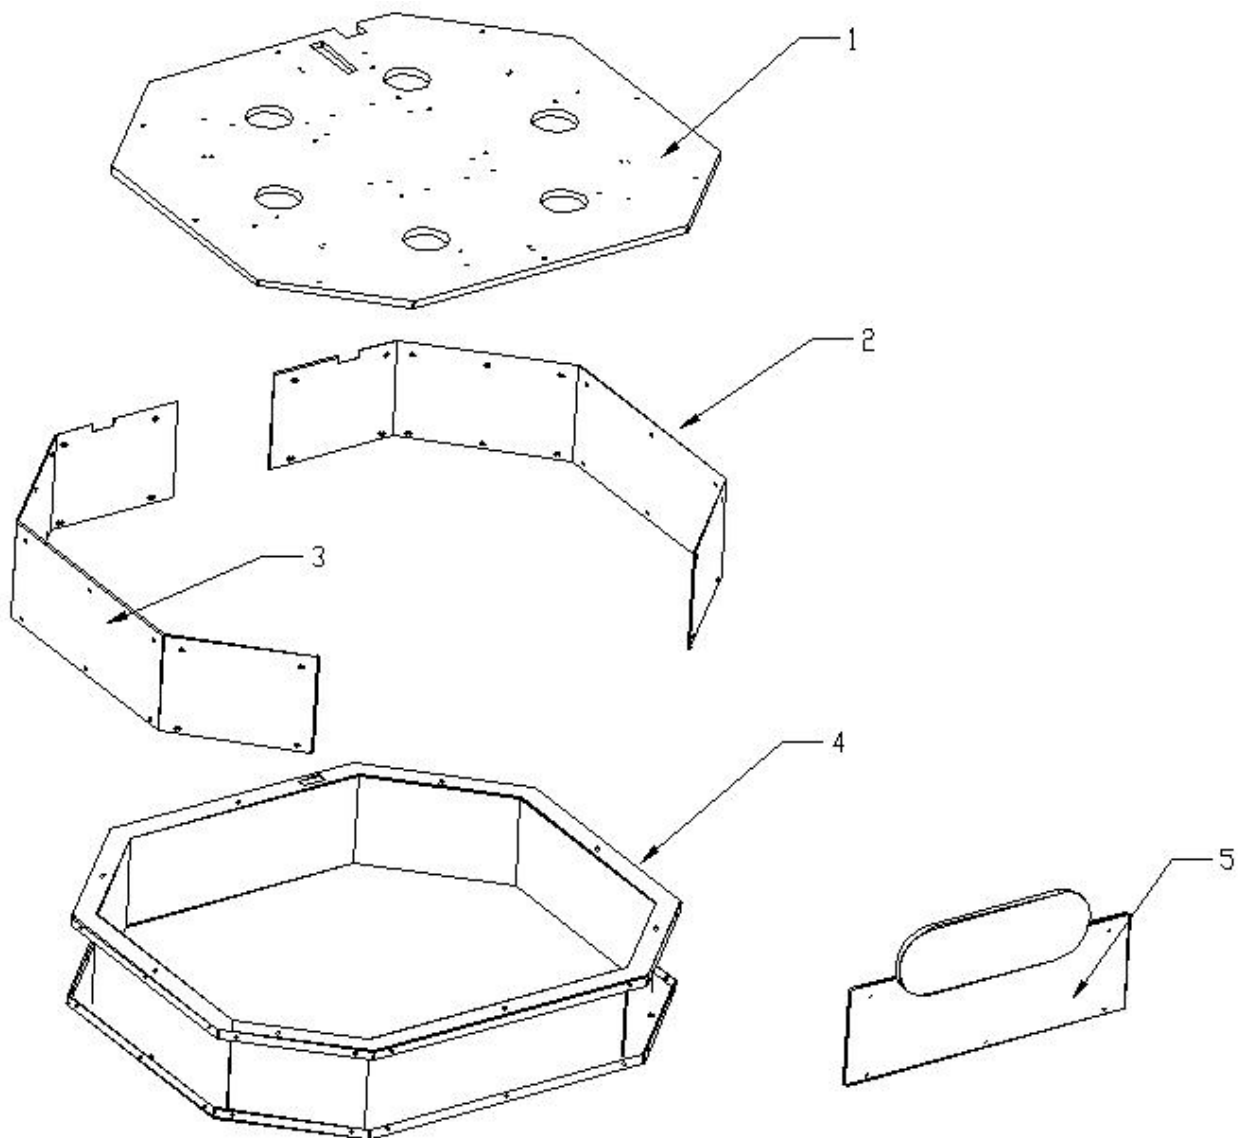


No.	Part No.	Code No.	Name	Version	Qty
1	E134-1104-00	203.4.2417.001	Top board	1.1	1
2	E134-1107-00	205.4.2417.109	Up decal R	1.1	1
3	E134-1102-00	205.4.2417.110	Up decal L	1.1	1
4	E134-1101-00	202.4.2417.024	Top bracket	1.1	1
5	E134-1103-00	206.4.2417.058	Front LOGO character	1.1	1

9.5 Main Cabinet Assy

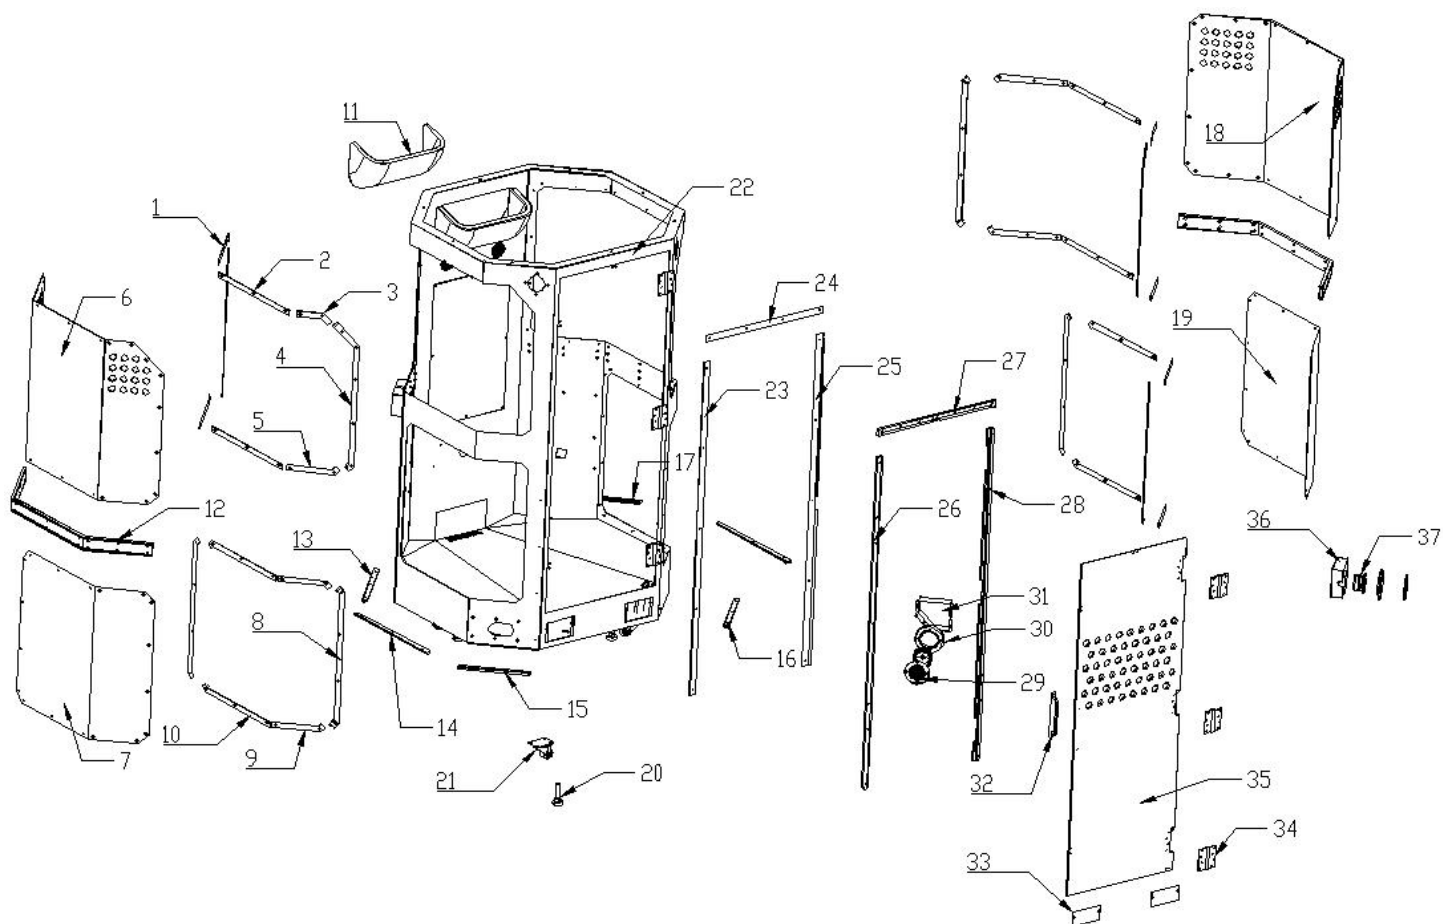


No.	Part No.	Code No.	Name	Version	Qty
1	E134-1209-00	202.4.2417.011	Up decal press plate(rear up side)	1.1	4
2	E134-1207-00	202.4.2417.010	Up decal press plate(mid)	1.1	4
3	E134-1206-00	202.4.2417.013	Up decal press plate(front up side)	1.1	2
4	E134-1217-00	202.4.2417.014	Up decal press plate(front mid side)	1.1	2
5	E134-1215-00	202.4.2417.015	Up decal press plate(front bottom side)	1.1	6
6	E134-1228-00	205.4.2417.102	R up decal PET	1.1	1
7	E134-1229-00	205.4.2417.104	R bottom decal PET	1.1	1
8	E134-1210-00	202.4.2417.012	Up decal press plate(rear mid side)	1.1	2
9	E134-1214-00	202.4.2417.017	Bottom decal press plate(front)	1.1	4
10	E134-1213-00	202.4.2417.016	Bottom decal press plate(mid)	1.1	4
11	E134-1240-00	206.4.2417.037	Ball-out moulding PE	1.1	1
12	E134-1211-00	206.4.2417.050	Mid plastic	1.1	2
13	E134-1223-00	206.4.2417.043	Bottom plastic C	1.1	1
14	E134-1212-00	206.4.2417.042	Bottom plastic B	1.1	2
15	E134-1201-00	206.4.2417.041	Bottom plastic A	1.1	1
16	E134-1246-00	206.4.2417.045	Bottom plastic E	1.1	1
17	E134-1235-00	206.4.2417.044	Bottom plastic D	1.1	1
18	E134-1208-00	205.4.2417.101	L up PET	1.1	1
19	E134-1216-00	205.4.2417.103	L bottom PET	1.1	1
20	E134-1243-00	2.60.00008000	Caster leveller	1.1	6
21	E134-1244-00	2.55.01.000056	2.5" caster	1.1	7
22	E134-1242-00	202.4.2417.023	Main cabinet bracket	1.1	1
23	E134-1202-00	202.4.2417.003	Door L press plate	1.1	1
24	E134-1247-00	202.4.2417.002	Door up press plate	1.1	1
25	E134-1204-00	202.4.2417.004	Door R press plate	1.1	1
26	E134-1203-00	206.4.2417.046	Door L light plastic	1.1	1
27	E134-1248-00	206.4.2417.048	Door up light plastic	1.1	1
28	E134-1205-00	206.4.2417.047	Door R light plastic	1.1	1
29	E134-1219-00	205.4.2417.105	Speaker decal	1.1	2
30	E134-1218-00	206.4.2430.009	Speaker plastic	1.1	2
31	E134-1250-00	202.4.2417.005	R speaker cover plate	1.1	1
32	E134-1226-00	2.51.02.040027	Door handle	1.1	1
33	E134-1227-00	202.4.2417.022	Bottom blank plate	1.1	2
34	E134-1225-00	2.63.00.040027	Spring hinge	1.1	3
35	E134-1220-00	206.4.2417.049	Plastic door	1.1	1
36	E134-1249-00	202.4.2417.006	L speaker cover plate	1.1	1
37	E134-0807-00	2.28.01.080032	Speaker	1.1	4

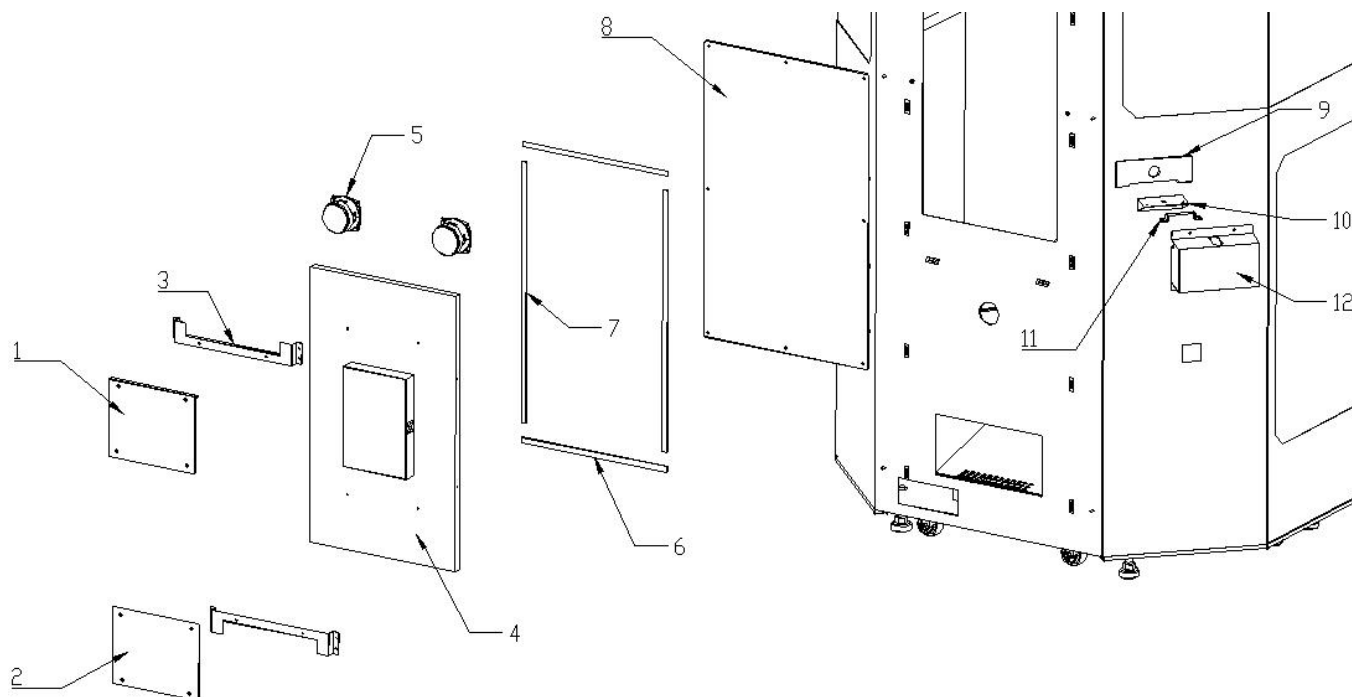


No.	Part No.	Code No.	Name	Version	Qty
1	E134-1231-00	202.4.2417.007	Monitor up hang plate	1.1	1
2	E134-1234-00	202.4.2417.008	Monitor bottom hang plate	1.1	1
3	E134-1230-00	202.4.2417.009	Monitor fixing plate	1.1	2
4	E134-0812-00	2.12.01027001	27" monitor	1.1	1
5	E134-0807-00	2.28.01.080032	Speaker	1.1	2
6	E134-1233-00	206.4.2430.045	monitor foam (s)	1.1	2
7	E134-1233-00	206.4.2430.045	monitor foam (s)	1.1	2
8	E134-1241-00	205.4.2417.106	monitor plastic	1.1	1
9	E134-1236-00	206.4.2417.051	Camera front block plastic	1.1	1
10	E134-1237-00	202.4.2417.019	Camera mounting plate	1.1	1
11	E134-1238-00	202.4.2417.020	Camera press plate	1.1	1
12	E134-1239-00	202.4.2417.021	Camera back cover plate	1.1	1

9.6 Stair Assy

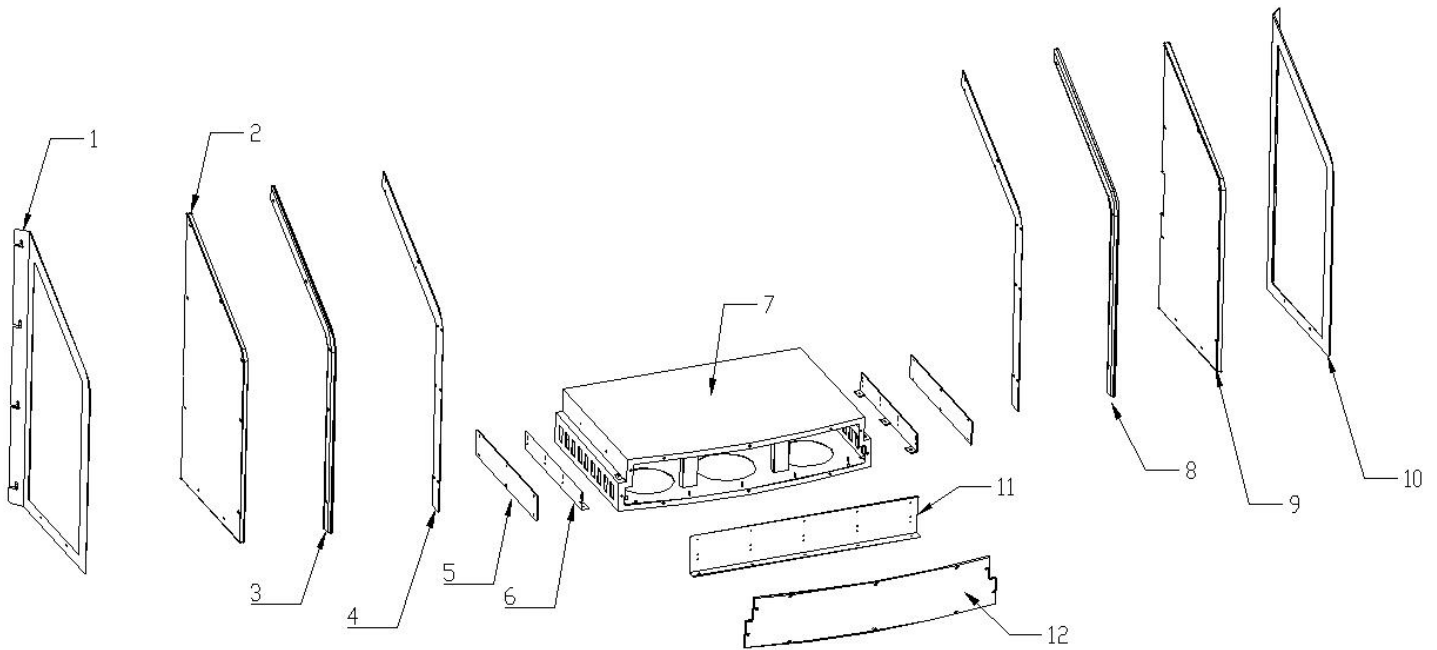


No.	Part No.	Code No.	Name	Version	Qty
1	E134-1408-00	202.4.2459.042	Stair L support plate	1.1	1
2	E134-1406-00	205.4.2417.107	Stair L plastic	1.1	1
3	E134-1401-00	206.4.2417.052	Stair handle L plastic	1.1	1
4	E134-1405-00	202.4.2459.044	Stair L&R cover plate	1.1	2
5	E134-1407-00	206.4.2417.054	Stair bottom light plastic	1.1	2
6	E134-1404-00	206.4.2417.057	Stair bottom light mount plate	1.1	2
7	E134-1402-00	202.4.2459.045	Stair bracket	1.1	1
8	E134-1412-00	206.4.2417.053	Stair handle R plastic	1.1	1
9	E134-1411-00	205.4.2417.108	Stair R plastic	1.1	1
10	E134-1410-00	202.4.2459.043	Stair R support plate	1.1	1
11	E134-1403-00	206.4.2417.056	Stair front light mount plate	1.1	1
12	E134-1409-00	206.4.2417.055	Stair front light plastic	1.1	1

9.7 Coin Bracket Assy

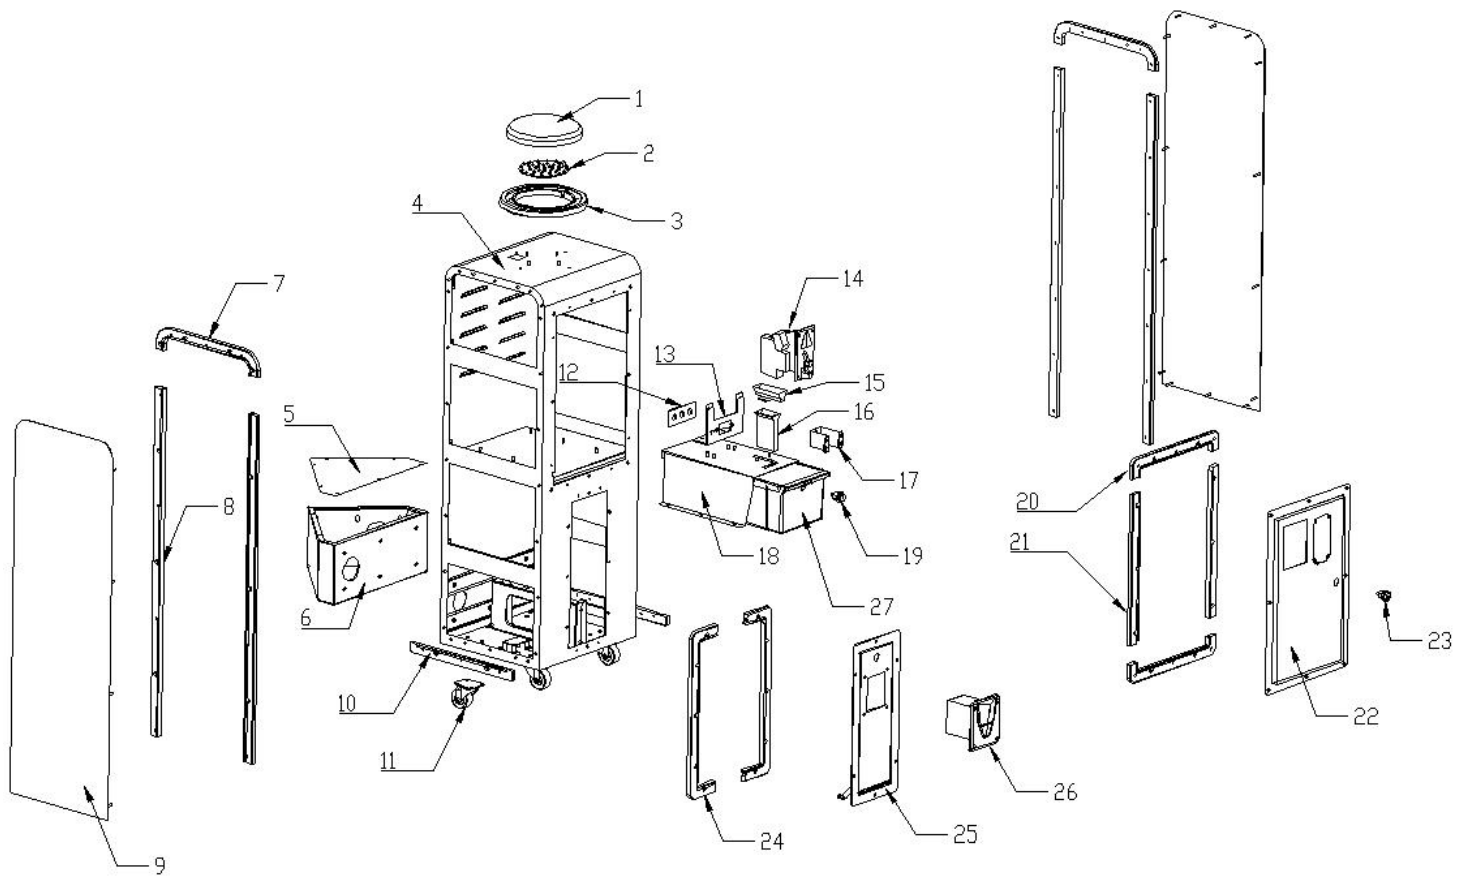


No.	Part No.	Code No.	Name	Version	Qty
1	E134-1330-00	205.4.2230.003	Emoji moulding PC	1.1	1
2	E134-0838-00	2.28.07.000003	Audio isolator	1.1	1
3	E134-1331-00	206.4.2417.069	Coin box round ring plastic	1.1	1
4	E134-1314-00	202.4.2417.049	Coin box bracket	1.1	1
5	E134-1315-00	202.4.2417.067	Coin box back frame cover plate	1.1	1
6	E134-1327-00	202.4.2417.066	Coin box back frame	1.1	1
7	E134-1320-00	206.4.2417.063	Coin box side plastic (up)	1.1	2
8	E134-1301-00	206.4.2417.064	Coin box side plastic (mid)	1.1	4
9	E134-1326-00	202.4.2417.059	Side plate	1.1	2
10	E134-1328-00	206.4.2417.065	Coin box side plastic (bottom)	1.1	2
11	E134-0207-00	2.55.01.000071	2" caster	1.1	4
12	E134-1316-00	202.4.2417.063	Setting panel plate	1.1	1
13	E134-1317-00	202.4.2417.062	Setting panel bottom plate	1.1	1
14	E134-0843-00	2.23.06000022	Coin mechanism	1.1	1
15	E134-1318-00	202.4.2417.061	Coin-in plate	1.1	1
16	E134-1322-00	202.4.2417.065	Coin chute plate	1.1	1
17	E134-1321-00	202.4.2417.064	Coin chute support plate	1.1	1
18	E134-1319-00	202.4.2417.060	Coin box block plate	1.1	1
19	E134-1323-00	2.53.00172001	171B lock	1.1	1
20	E134-1332-00	206.4.2417.066	Coin door up&down plastic	1.1	2
21	E134-1302-00	206.4.2417.067	Coin door L&R plastic	1.1	2
22	E134-1303-00	202.4.2417.050	Coin door frame	1.1	1
23	E134-0208-00	2.53.00171001	171A lock	1.1	2
24	E134-1307-00	206.4.2417.068	Ticket door plastic	1.1	2
25	E134-1308-00	202.4.2417.054	Ticket door frame	1.1	1
26	E134-0844-00	2.31.00000015	Ticket dispenser	1.1	1
27	E134-1324-00	2.60.00062000	Coin inner box	1.1	1
28	E134-1325-00	2.60.00075000	Ticket box	1.1	1

9.8 Blower Box Assy

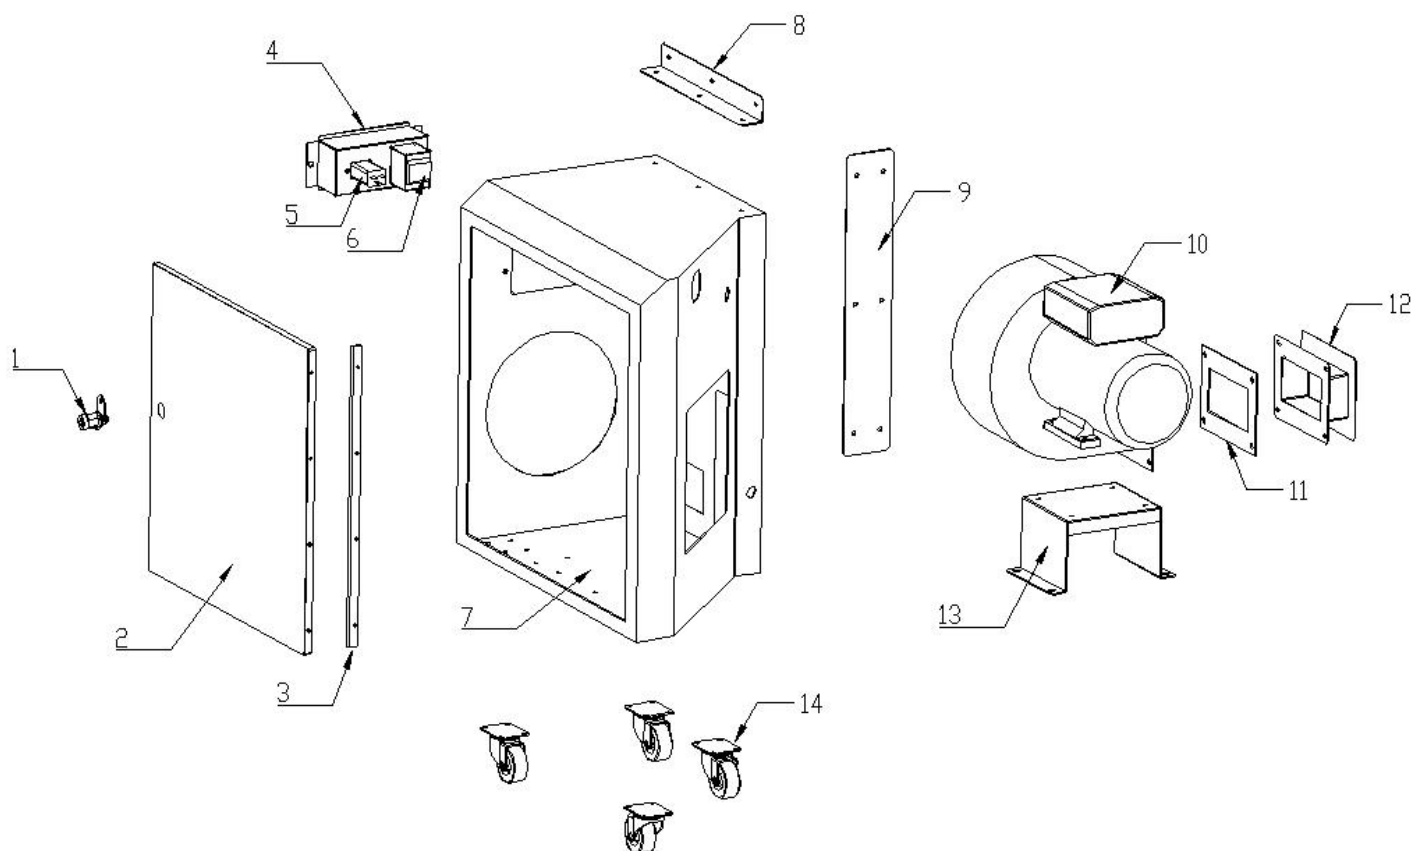


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0208-00	2.53.00171001	171A lock	1.1	1
2	E134-0304-00	202.4.2417.041	Electrical bracket door plate	1.1	1
3	E134-0305-00	202.4.2417.042	Electrical bracket hinge plate	1.1	1
4	E134-0307-00	202.4.2417.048	Blower power supply plate	1.1	1
5	E134-0834-00	2.32.01000004	Filter	1.1	1
6	E134-0818-00	2.26.02.000091	Breaker	1.1	1
7	E134-0301-00	202.4.2417.045	Blower box frame	1.1	1
8	E134-0303-00	202.4.2417.043	Electrical bracket up fixing plate	1.1	1
9	E134-0306-00	202.4.2417.044	Electrical bracket bottom fixing plate	1.1	1
10	E134-0311-00	2.34.01.004011	Blower(110V)	1.1	1
	E134-0302-00	2.34.01.004016	Blower(220V)	1.1	1
11	E134-0310-00	206.4.2430.046	Blower exit foam	1.1	1
12	E134-0309-00	202.4.2417.047	Blower exit plate	1.1	1
13	E134-0308-00	202.4.2417.046	Blower base bracket	1.1	1
14	E134-0207-00	2.55.01.000071	2" caster	1.1	4

9.9 Wind Track Bracket Assy

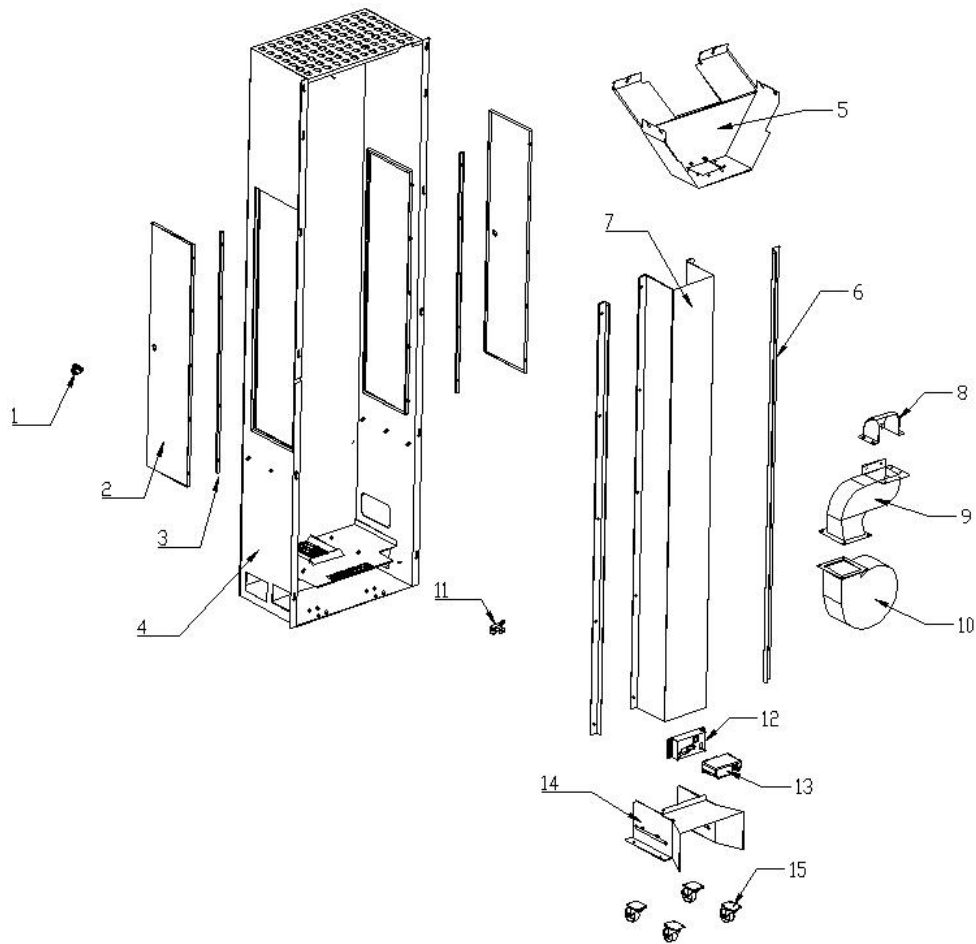


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0208-00	2.53.00171001	171A lock	1.1	2
2	E134-0210-00	202.4.2417.036	Ball track door	1.1	2
3	E134-0209-00	202.4.2417.035	Ball track door hinge plate	1.1	2
4	E134-0201-00	202.4.2417.031	Wind track bracket	1.1	1
5	E134-0211-00	202.4.2417.034	Saving ball base plate	1.1	1
6	E134-0216-00	202.4.2417.033	Ball track press plate	1.1	2
7	E134-0215-00	206.4.2417.062	Wind track	1.1	1
8	E134-0212-00	202.4.2417.038	Ball exit plate	1.1	1
9	E134-0213-00	202.4.2417.037	Ball-out track	1.1	1
10	E134-0833-00	2.34.01.004015	Fan	1.1	1
11	E134-0214-00	202.4.2417.039	Camera wiring cover plate	1.1	1
12	E134-0206-00	2.60.00042002B	Wiring box cover	1.1	1
13	E134-0205-00	2.60.00042001B	Wiring box	1.1	1
14	E134-0202-00	202.4.2417.032	Ball track bottom sensor frame	1.1	1
15	E134-0207-00	2.55.01.000071	2" caster	1.1	4

9.10 Electrical Bracket Assy

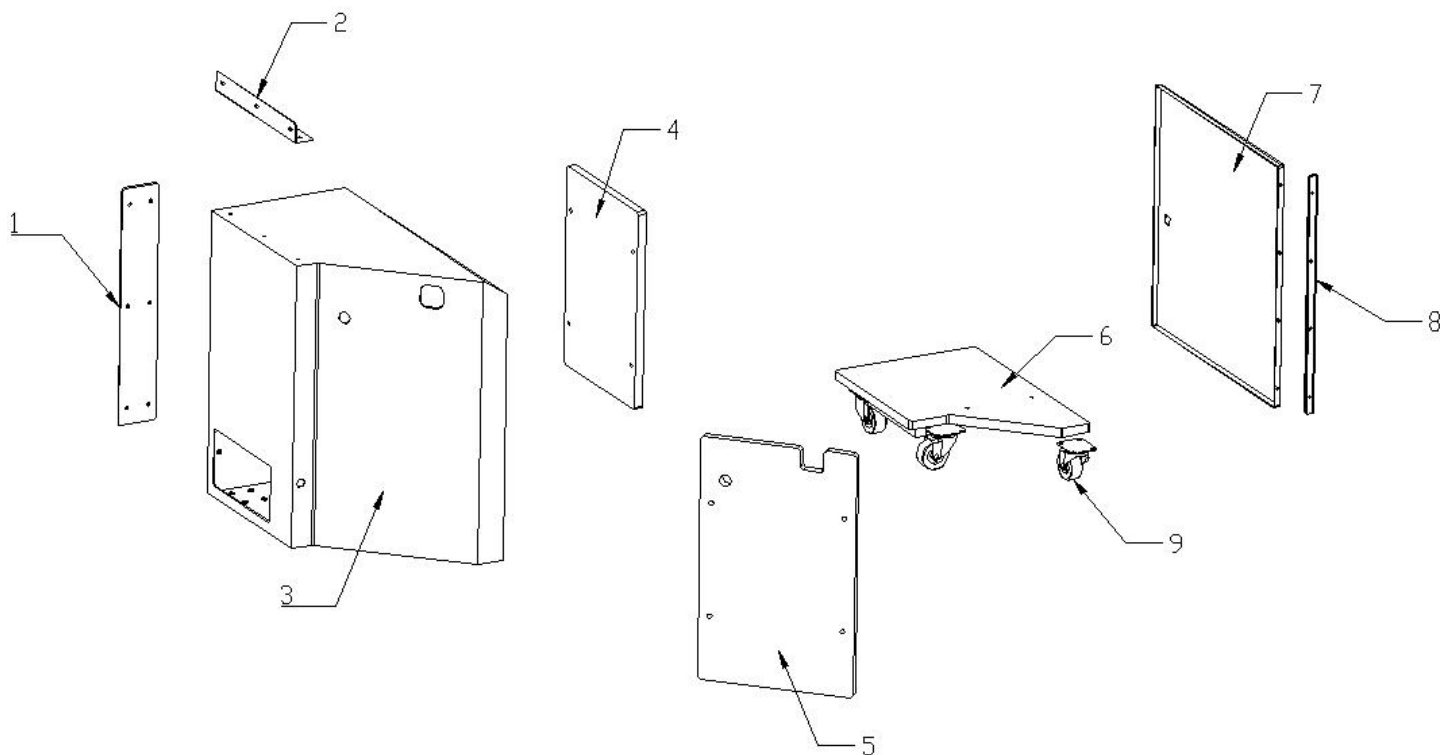

No.	Part No.	Code No.	Name	Version	Qty
1	E134-0306-00	202.4.2417.044	Electrical bracket bottom fixing plate	1.1	1
2	E134-0303-00	202.4.2417.043	Electrical bracket up fixing plate	1.1	1
3	E134-1501-00	202.4.2417.040	Electrical bracket	1.1	1
4	E134-1509-00	203.4.2417.003	Electrical box board B	1.1	1
5	E134-1508-00	203.4.2417.002	Electrical box board A	1.1	1
6	E134-1510-00	203.4.2417.004	Electrical box board C	1.1	1
7	E134-0304-00	202.4.2417.041	Electrical bracket door plate	1.1	1
8	E134-0305-00	202.4.2417.042	Electrical bracket hinge plate	1.1	1
9	E134-0207-00	2.55.01.000071	2" caster	1.1	4


9.11 Decal

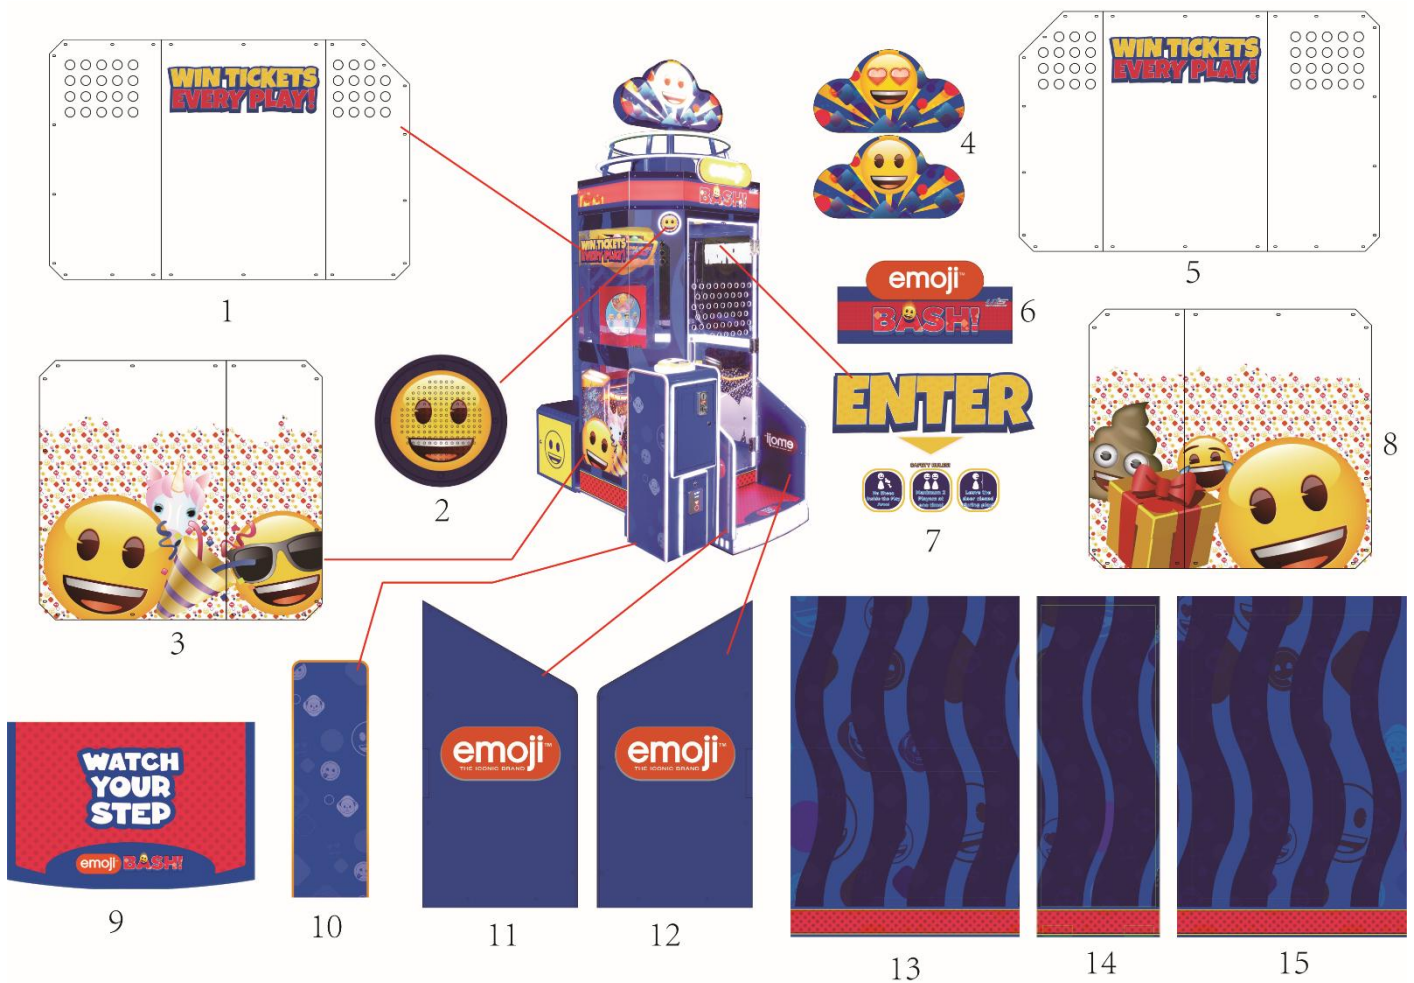

No.	Part No.	Code No.	Name	Version	Qty
1	E134-1228-00	205.4.2417.102	R up decal PET	1.1	1
2	E134-1219-00	205.4.2417.105	Speaker decal	1.1	2
3	E134-1229-00	205.4.2417.104	R bottom decal PET	1.1	1
4	E134-0100-00	206.4.2417.040	Top marquee	1.1	1
5	E134-1208-00	205.4.2417.101	L up PET	1.1	1
6	E134-1103-00	206.4.2417.058	Front LOGO character	1.1	1
7	E134-0922-00	205.4.2417.117	Front door decal	1.1	1
8	E134-1216-00	205.4.2417.103	L bottom PET	1.1	1
9	E134-0919-00	205.4.2417.114	Stair decal	1.1	1
10	E134-0927-00	205.4.2417.121	Coin box side decal	1.1	2
11	E134-1406-00	205.4.2417.107	Stair L plastic	1.1	1
12	E134-1411-00	205.4.2417.108	Stair R plastic	1.1	1
13	E134-0925-00	205.4.2417.119	L side decal	1.1	1
14	E134-0921-00	205.4.2417.116	Front door entry decal	1.1	1
15	E134-0924-00	205.4.2417.118	R side decal	1.1	1




No.	Part No.	Code No.	Name	Version	Qty
1	E134-0920-00	205.4.2417.115	Cabinet inside decal	1.1	1
2	E134-1102-00	205.4.2417.110	Up decal L	1.1	1
3	E134-1107-00	205.4.2417.109	Up decal R	1.1	1
4	E134-1241-00	205.4.2417.106	monitor plastic	1.1	1
5	E134-0917-00	205.4.2417.112	R box decal	1.1	1
6	E134-0918-00	205.4.2417.113	L box decal	1.1	1
7	E134-0916-00	205.4.2417.111	Cabinet top decal	1.1	1
8	E134-0931-00	205.4.2417.125	Entry warning decal	1.1	1
9	E134-0926-00	205.4.2417.120	Monitor background decal	1.1	1
10	E134-0928-00	205.4.2417.122	Push rod panel decal	1.1	1
11	E134-0930-00	205.4.2417.124	Panel bottom decal	1.1	1
12	E134-0929-00	205.4.2417.123	Hopper decal	1.1	1

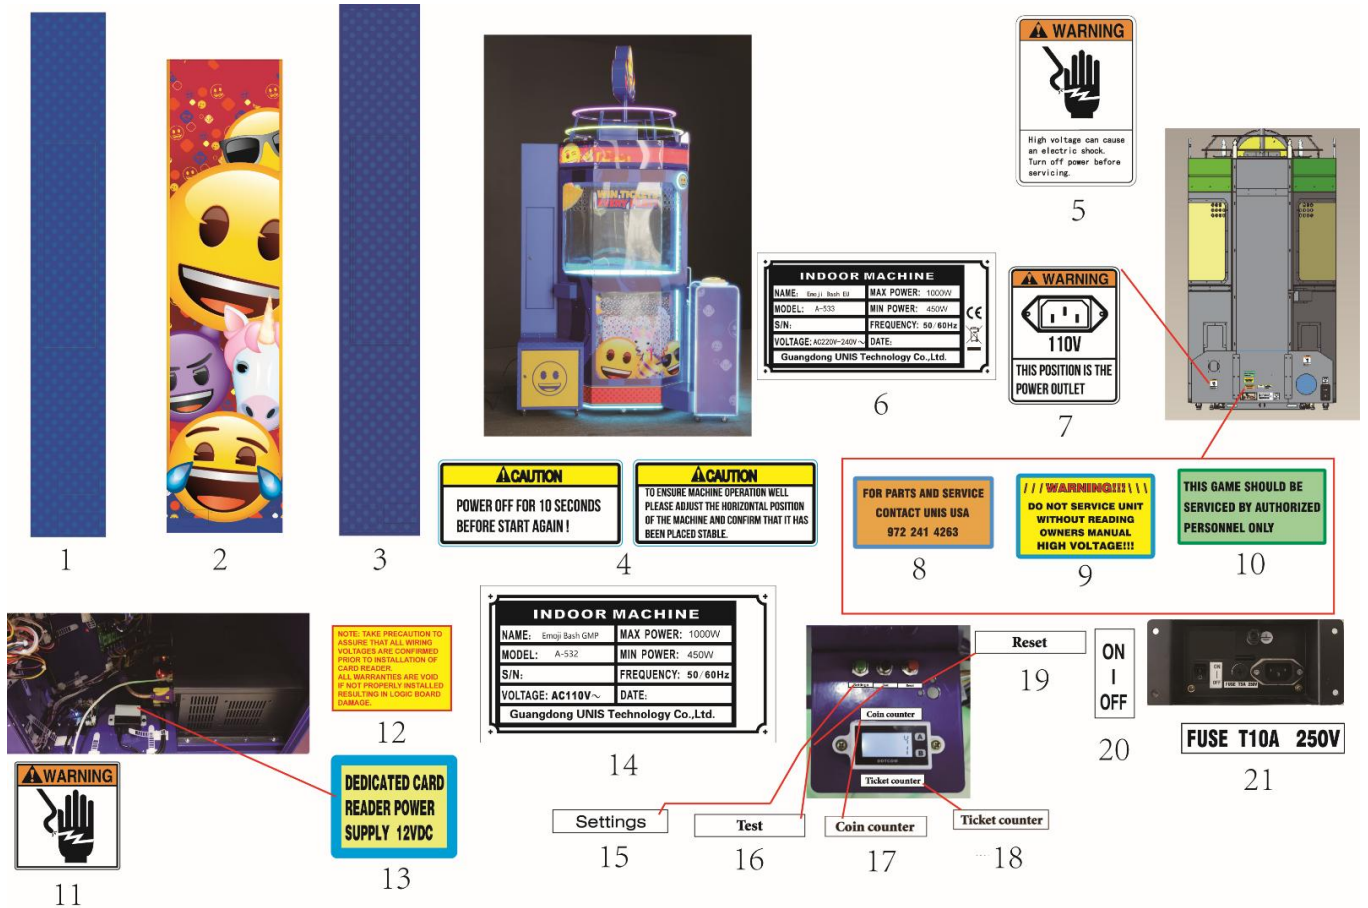

No.	Part No.	Code No.	Name	Version	Qty
1	E134-0935-00	205.4.2417.128	Ball track L side decal	1.1	1
2	E134-0936-00	205.4.2417.130	Ball track decal	1.1	1
3	E134-0933-00	205.4.2417.127	Ball track R side decal	1.1	1
4	E134-0908-00	2.56.00.000127A	Power warning decal	1.1	1
5	E134-0938-00	2.56.00.000037	High voltage decal(I)	1.1	1
6	E134-0943-00	205.4.2417.129	220V nameplate	1.1	1
7	E134-0907-00	2.56.00.000125A	110V label	1.1	1
8	E134-0923-00	2.56.00.000043A	Maintenance decal(orange)	1.1	1
9	E134-0939-00	2.56.00.000067A	Maintenance decal(yellow)	1.1	1
10	E134-0934-00	2.56.00.000042A	Maintenance decal(green)	1.1	1
11	E134-0912-00	2.56.00.000036	High voltage decal(s)	1.1	1
12	E134-0903-00	2.56.00.000120	AAMA decal	1.1	1
13	E134-0904-00	2.56.00.000121	Adapter decal	1.1	1
14	E134-0932-00	205.4.2417.126	110V nameplate	1.1	1
15	E134-0915-00	2.56.00.000092	Settings decal	1.1	1
16	E134-0913-00	2.56.00.000005	Test decal	1.1	1
17	E134-0909-00	2.56.00.000001	Coin counter decal	1.1	1
18	E134-0910-00	2.56.00.000002	Ticket counter decal	1.1	1
19	E134-0914-00	2.56.00.000006	Reset decal	1.1	1
20	E134-0901-00	2.56.00.000016	Power sw decal	1.1	1
21	E134-0941-00	2.56.00.000077	Fuse (T10A) decal	1.1	1

9.12 Electrical Components

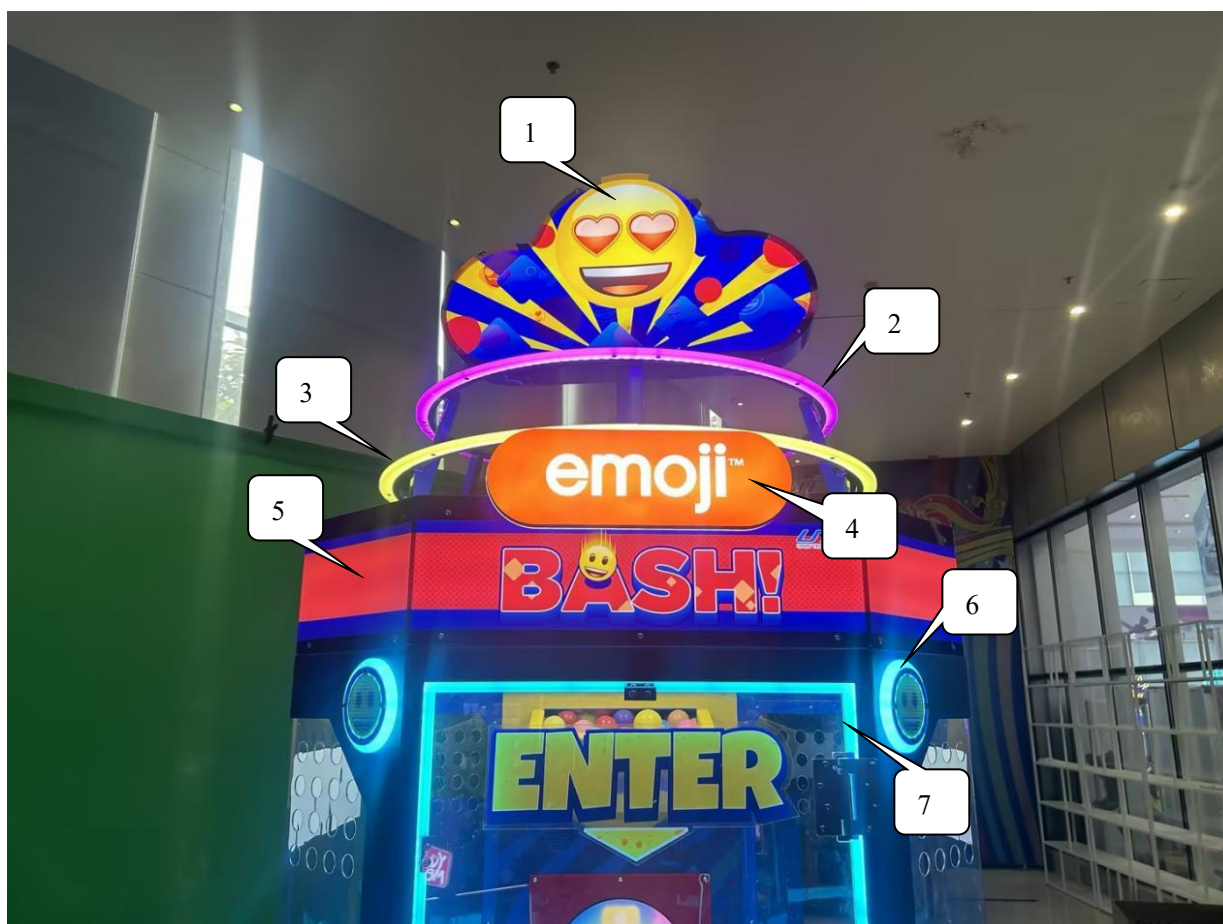


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0100-00	206.4.2417.040	Top marquee	1.1	1
2	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	In (2450mm)
3	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	In (2800mm)
4	E134-1103-00	206.4.2417.058	Front LOGO character	1.1	1
5	E134-0810-00	2.20.02.020056	2835 white light strip	1.2	In (3350mm)
6	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	In (250mm)
7	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	In (3800)



No.	Part No.	Code No.	Name	Version	Qty
1	E134-0812-00	2.12.01027001	27" monitor	1.1	1
2	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	92.51 In (2350mm)
3	E134-0814-00	2.20.02.020126	2812 RGB light strip	1.1	5.90 In (150mm)
4	E134-0814-00	2.20.02.020126	2812 RGB light strip	1.1	In (230mm)
5	E134-0404-00	2.24.04.050011	Push rod	1.1	1
6	E134-0852-00	2.20.02.020057	2835 yellow light strip	1.2	32.67 In (830mm)




No.	Part No.	Code No.	Name	Version	Qty
1	E134-0850-00	2.20.04.000060	Downlight	1.1	6

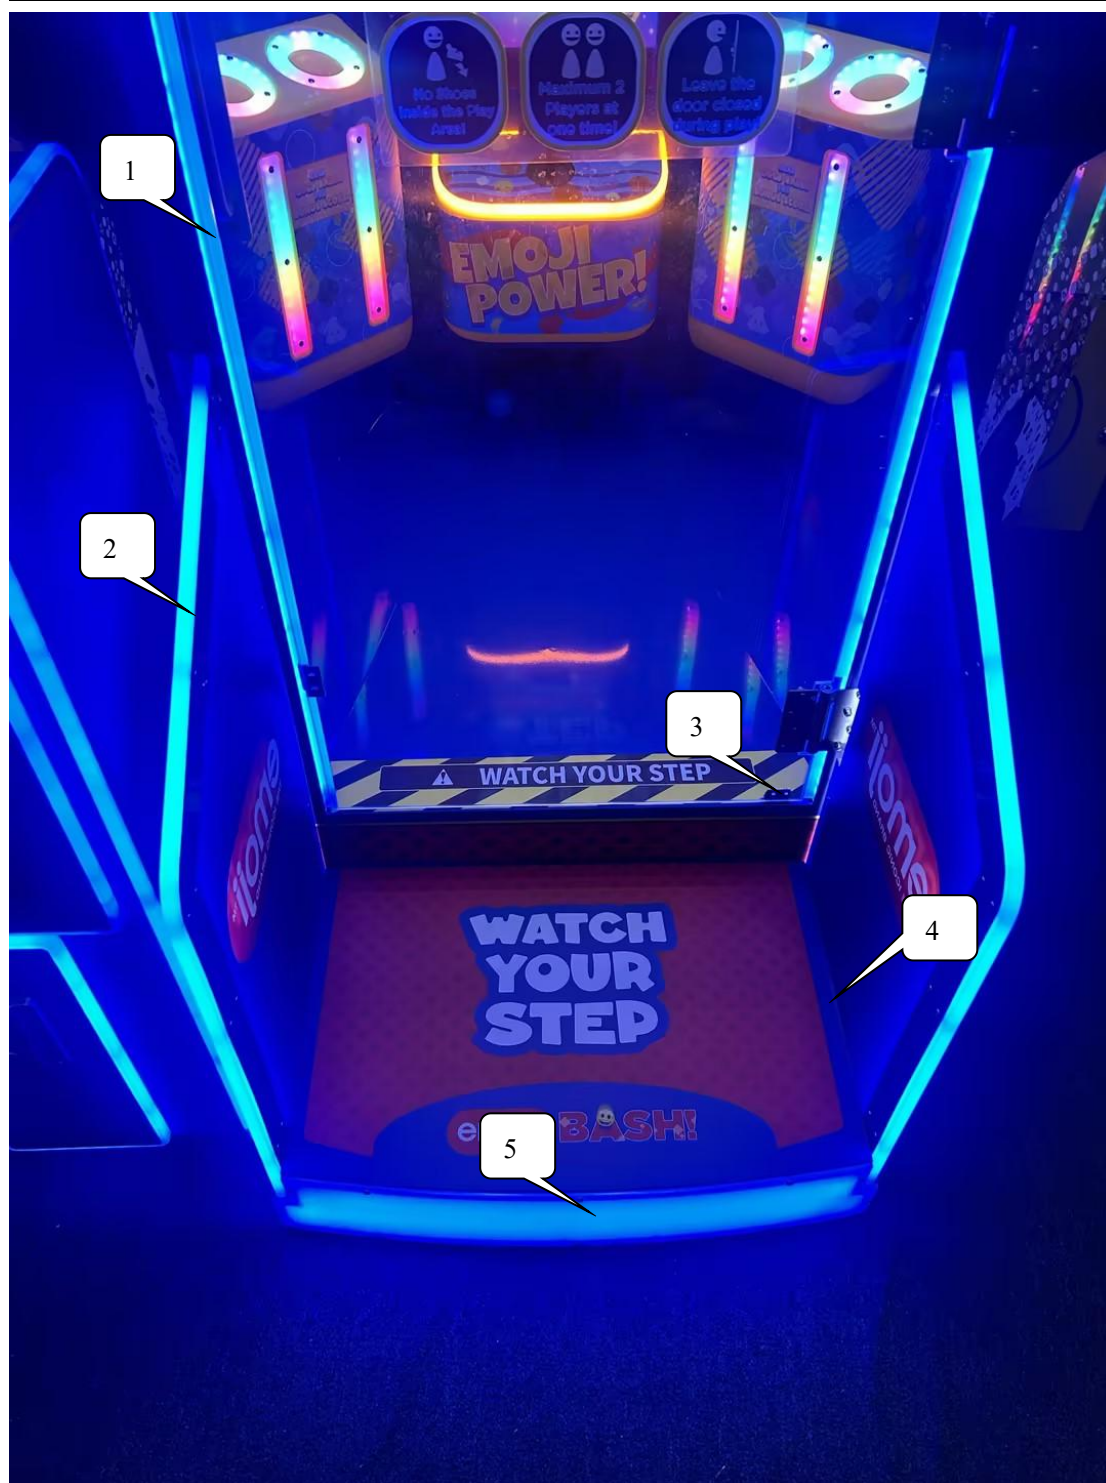


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	3.8
2	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	37.40 In (950mm)
3	E134-0824-00	2.26.01.000007	Magnetic Switch(30L)	1.1	1
	E134-0825-00	2.26.01.000008	Magnetic Switch(30R)	1.1	1
4	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	29.52 In (750mm)
5	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	51.18 In (1300mm)




No.	Part No.	Code No.	Name	Version	Qty
1	E134-0839-00	297.6.2303001	LED light board	1.1	1
2	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	17.71 In (450mm)
3	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	55.11 in (1400mm)
4	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	92.51 In (2350mm)
5	E134-0843-00	2.23.06000022	Coin mechanism	1.1	1
6	E134-0816-00	2.20.02.020031	5050 RGB light strip	1.1	1
7	E134-0844-00	2.31.00000015	Ticket dispenser	1.1	1

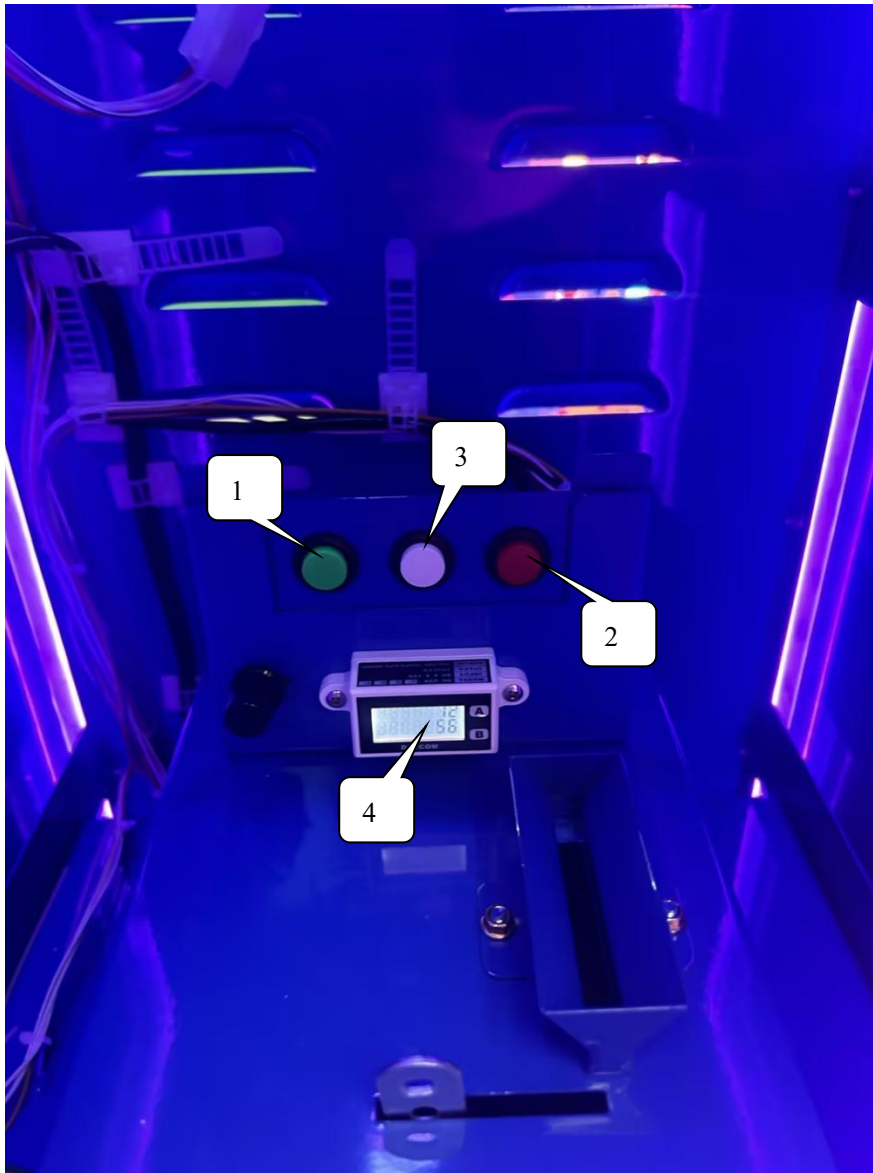


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0827-00	2.24.02.070004	Green button	1.1	1
2	E134-0828-00	2.24.02.070005	Red button	1.1	1
3	E134-0829-00	2.24.02.070006	White button	1.1	1
4	E134-0819-00	2.30.00000019	Counter	1.1	1

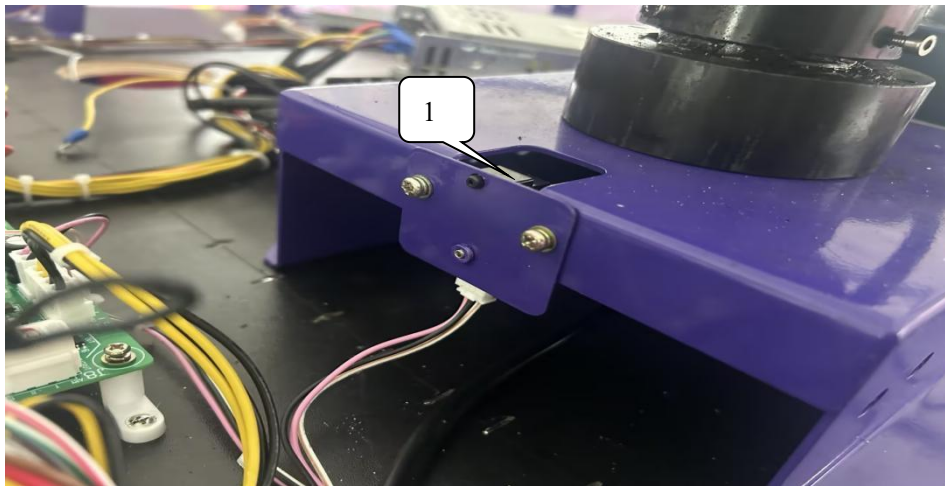


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0815-00	2.15.03.000079	Slot sensor	1.1	1
2	E134-0612-00	2.34.04.000236	DC motor	1.1	1

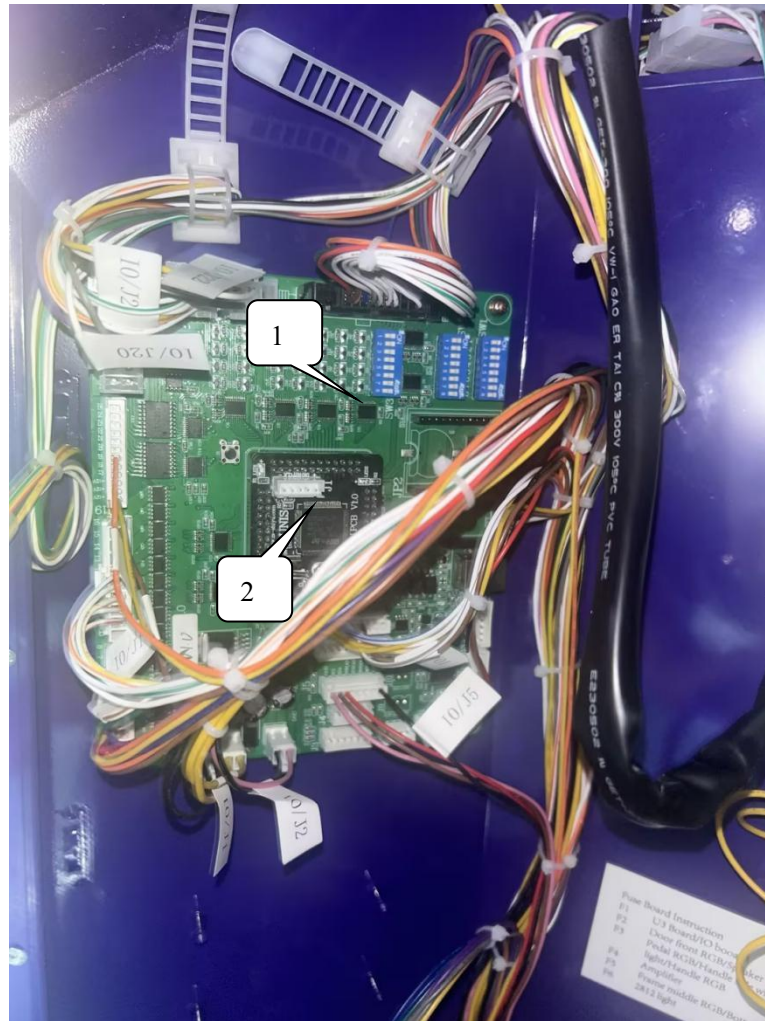

No.	Part No.	Code No.	Name	Version	Qty
1	E134-0820-00	297.9.0300003	U3 mainboard	1.2	1
2	E134-0851-00	297.9.0300004	U3-MCU board	1.2	1

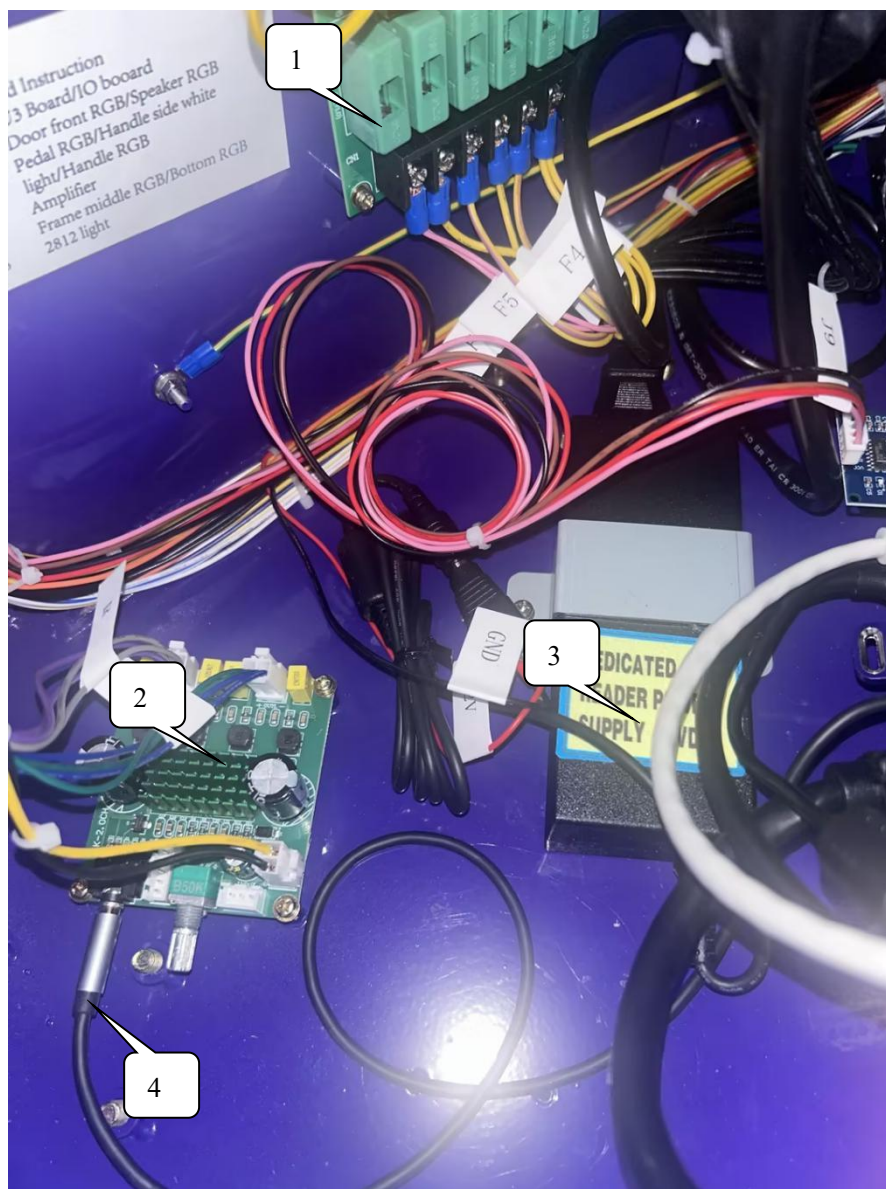


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0857-00	2.17.14.000148D	Fuse board	1.1	1
2	E134-0805-00	2.28.03.060018	Amplifier	1.1	1
3	E134-0809-00	2.16.03.000076	Adapter	1.1	1
4	E134-0806-00	2.33.05.030007	Audio cable	1.1	1

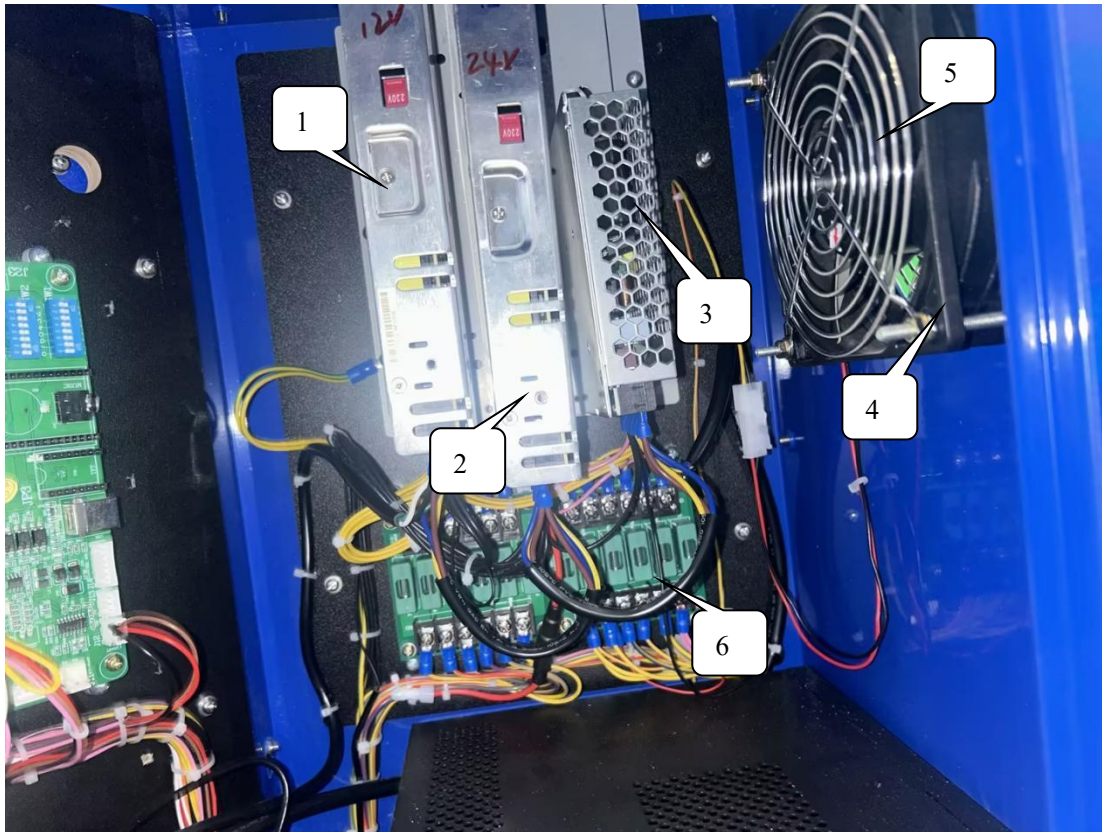

No.	Part No.	Code No.	Name	Version	Qty
1	E134-0801-00	2.16.02.000117	Power supply(12V)	1.1	1
2	E134-0835-00	2.16.02.000105	Power supply(24V)	1.1	1
3	E134-0823-00	2.16.02.000124	Power supply(5V)	1.1	1
4	E134-0831-00	2.27.02.050017	Fan	1.1	1
5	E134-0832-00	2.27.02.000010	Fan net	1.1	2
6	E134-0857-00	2.17.14.000148D	Fuse board	1.1	2



No.	Part No.	Code No.	Name	Version	Qty
1	E134-0856-00	2.33.01.018002	Power cord	1.1	1
2	E134-0817-00	2.17.12.000022	RS232-TTL cable	1.1	1
3	E134-0826-00	2.33.02.000013	Network cable	1.1	1
4	E134-0837-00	2.11.07.020036	Dongle	1.1	1
5	E134-0806-00	2.33.05.030007	Audio cable	1.1	1

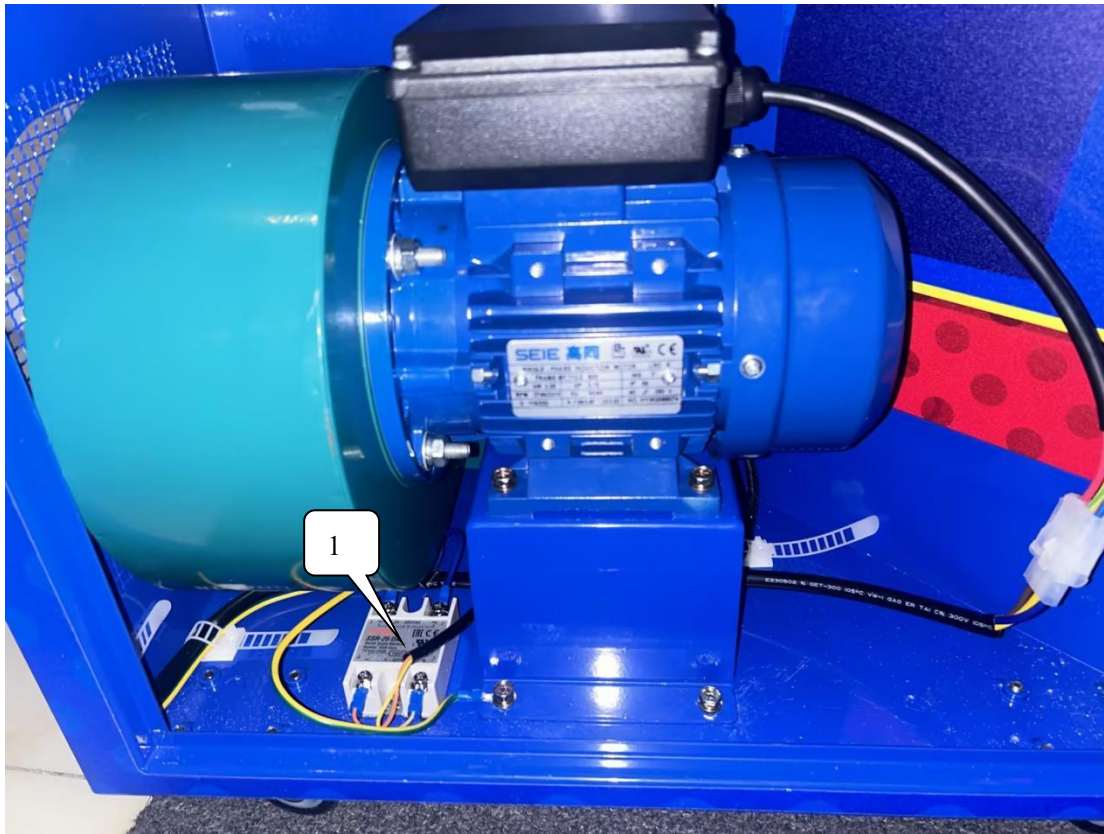

No.	Part No.	Code No.	Name	Version	Qty
1	E134-0811-00	2.21.4.0000043	Relay	1.1	1
2	E134-0311-00	2.34.01.004011	Blower(110V)	1.1	1
	E134-0302-00	2.34.01.004016	Blower(220V)	1.1	1



No.	Part No.	Code No.	Name	Version	Qty
1	E134-0818-00	2.26.02.000091	Breaker	1.1	1
2	E134-0834-00	2.32.01000004	Filter	1.1	1




No.	Part No.	Code No.	Name	Version	Qty
1	E134-0855-00	2.26.01.000005	Rocket sw	1.1	1
2	E134-0849-00	2.33.02.000001	Network port	1.1	1
3	E134-0802-00	2.19.02.000006	Fuse holder	1.1	1
4	E134-0834-00	2.32.01000004	Filter	1.1	1




No.	Part No.	Code No.	Name	Version	Qty
1	E134-0856-00	2.33.01.018002	Power cord	1.1	1
2	E134-0822-00	2.33.07.020001D	DVI cable	1.1	1
3	E134-0848-00	2.11.07.040048	Camera	1.1	1




No.	Part No.	Code No.	Name	Version	Qty
1	E134-0833-00	2.34.01.004015	Fan	1.1	1

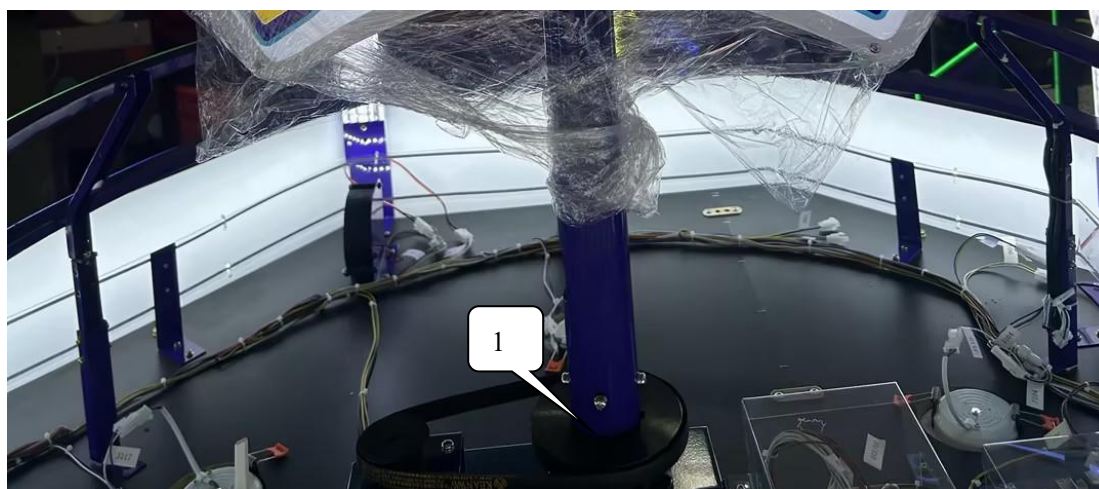

No.	Part No.	Code No.	Name	Version	Qty
1	E134-0606-00	2.16.08.000022	Conductive ring	1.1	1

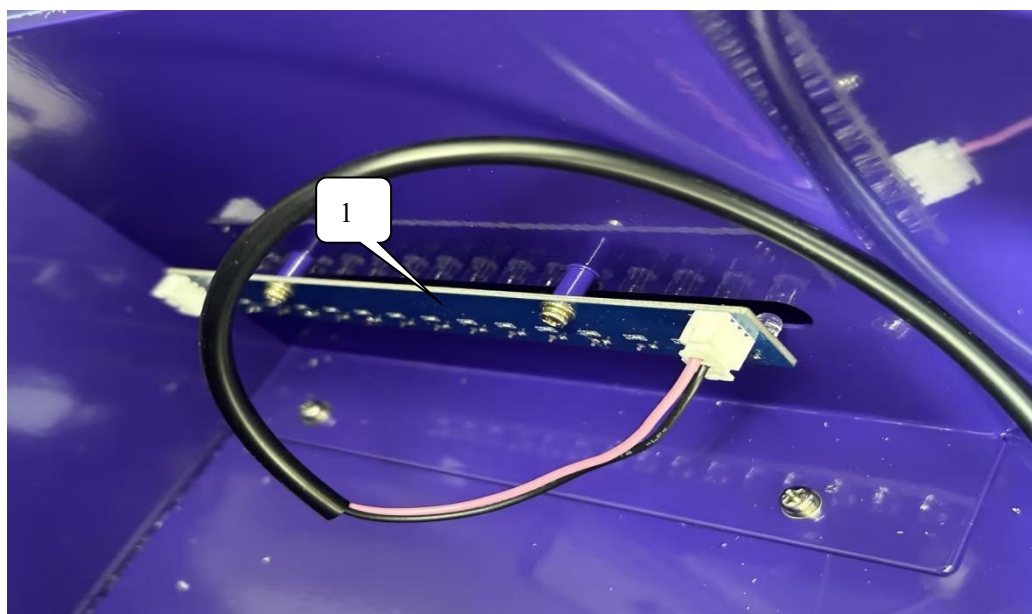


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0845-00	208.8.22128.011	Sensor	1.1	1

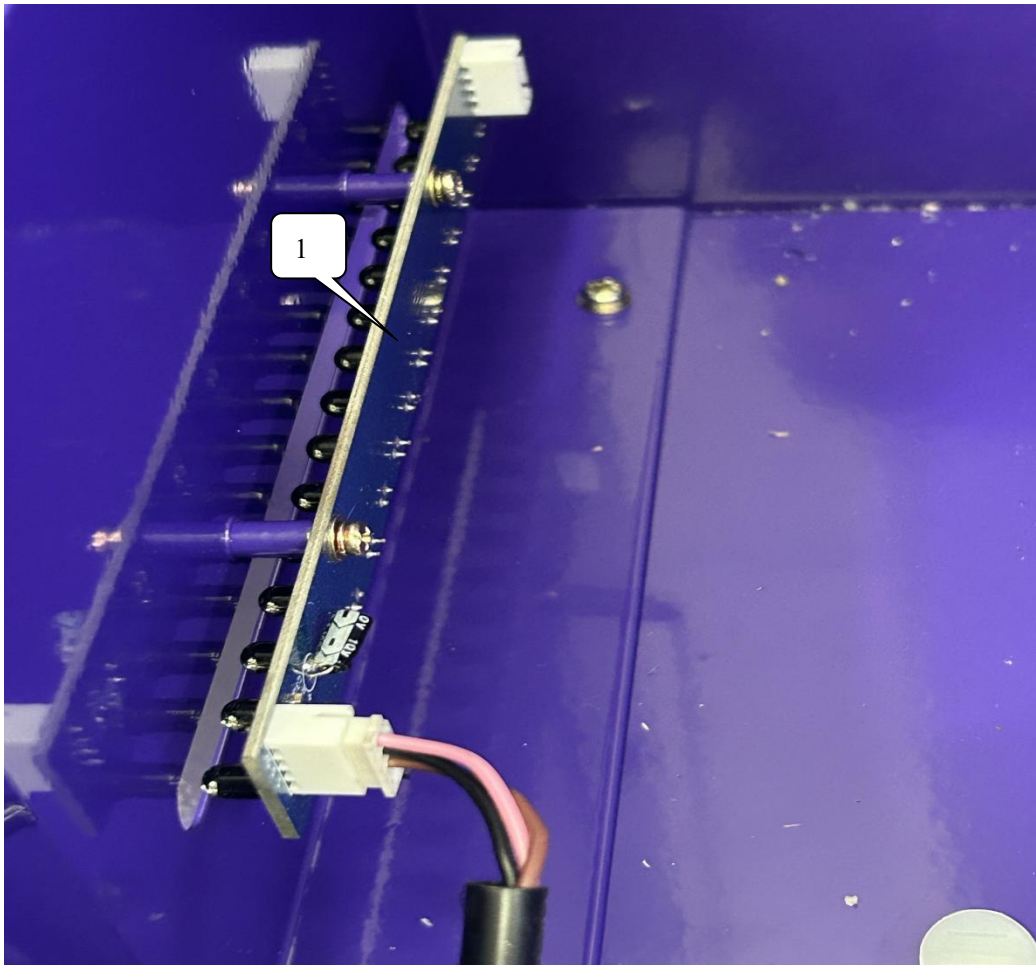

No.	Part No.	Code No.	Name	Version	Qty
1	E134-0854-00	208.8.22128.010	Sensor(out)	1.1	1








No.	Part No.	Code No.	Name	Version	Qty
1	E134-0837-00	2.11.07.020036	Dongle	1.1	1
2	E134-0836-00	4.13.00000012	Recovery stick	1.1	1











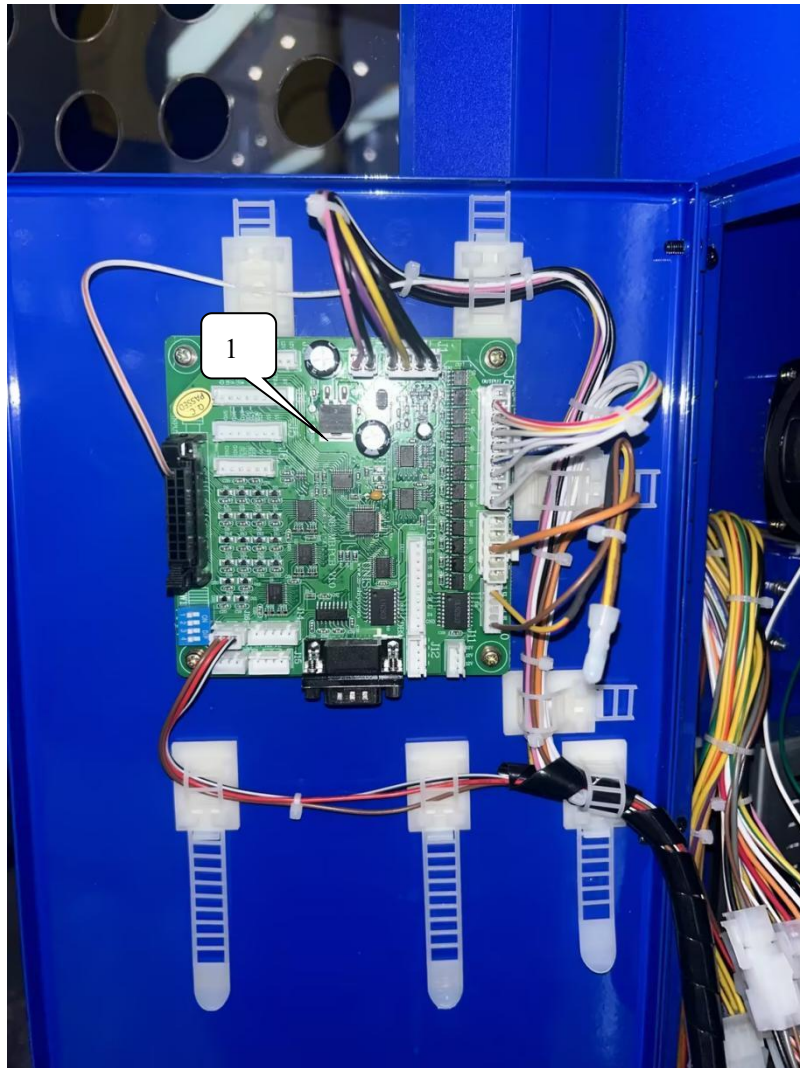


No.	Part No.	Code No.	Name	Version	Qty
1	E134-0821-00	297.9.2304001	N6 mainboard	1.1	1

www.unistechnology.com

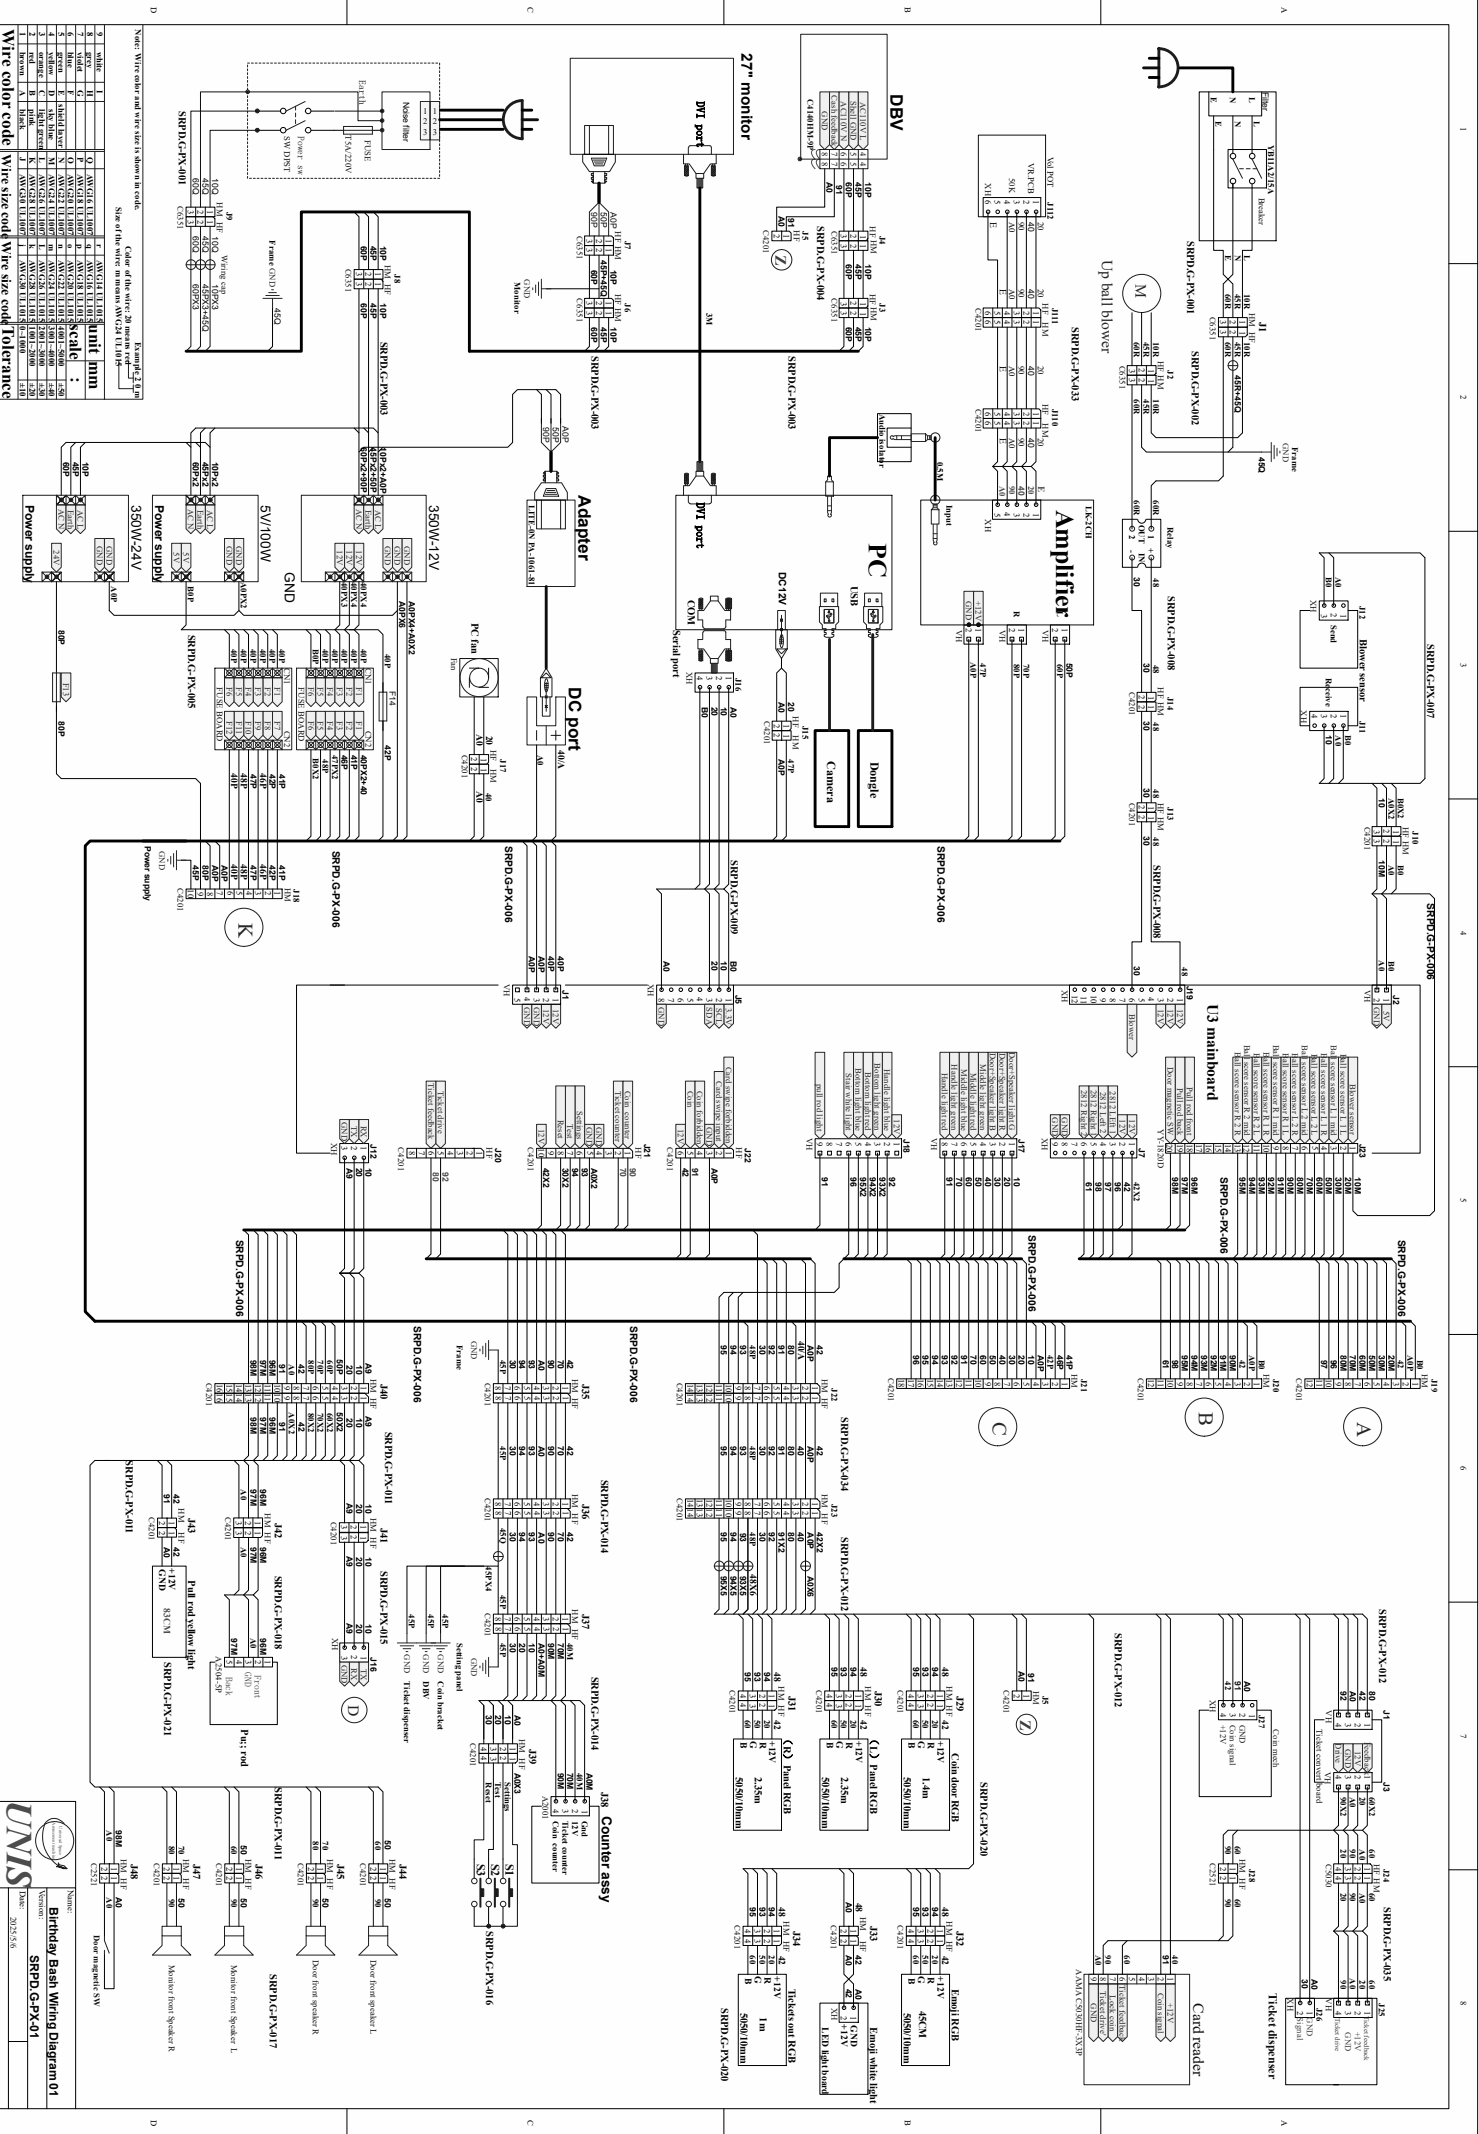

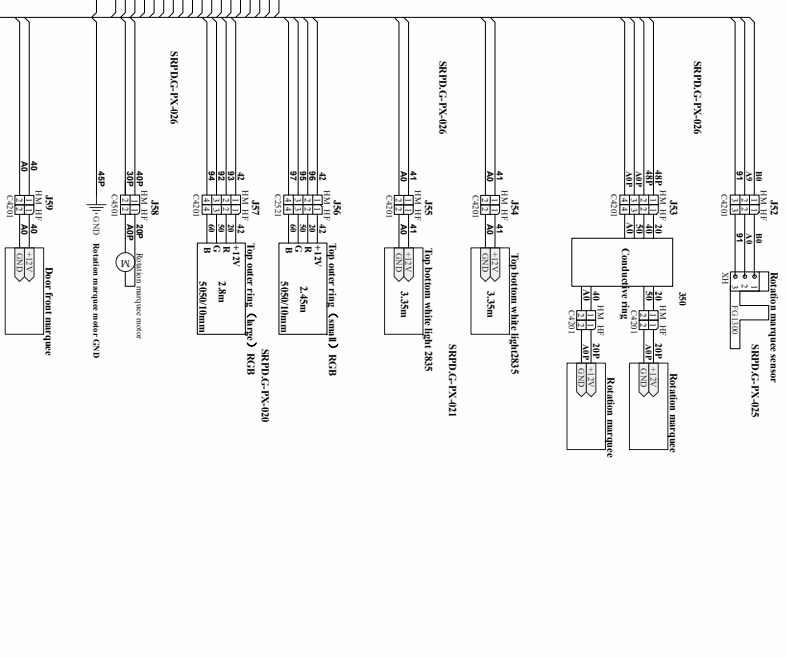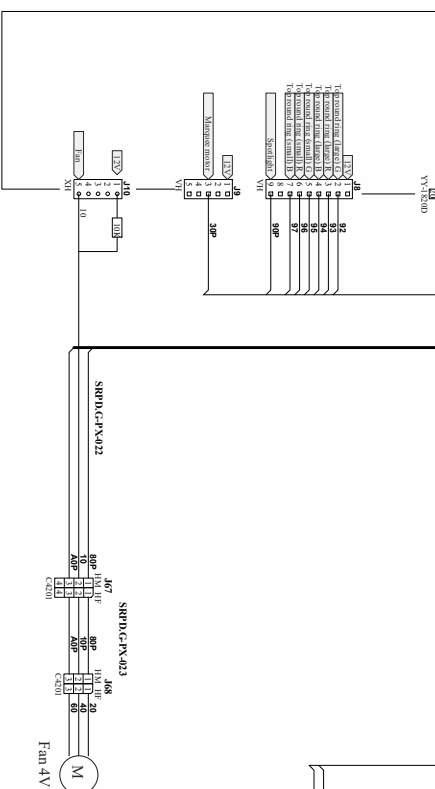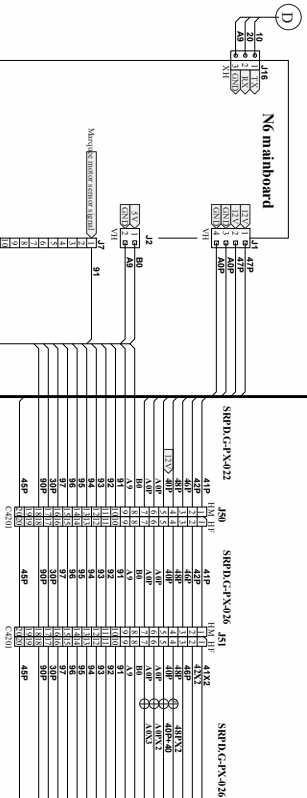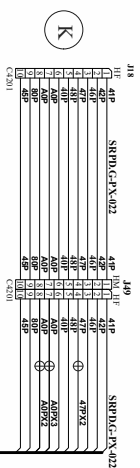[illegible]

   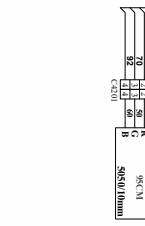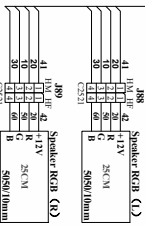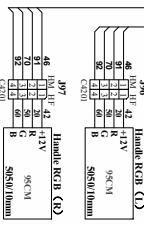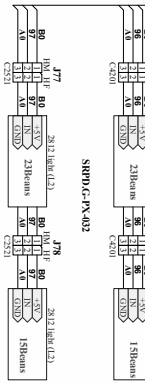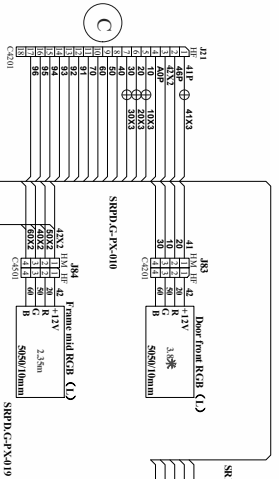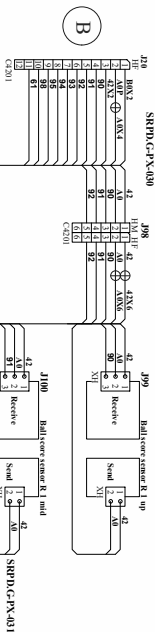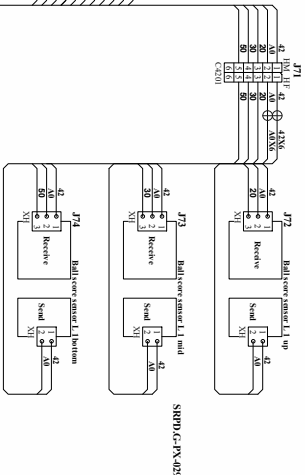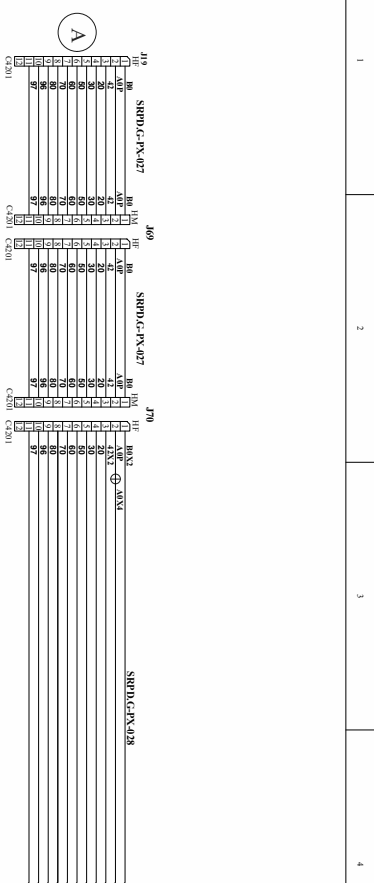[illegible]