



Fancy Racing

Operator Manual





Contents

1.Introduction of the cabinet

1-1 Name of main board parts	02
------------------------------	----

2.Introduction of the game

2-1 An overview of the game	03
-----------------------------	----

2-2 Distinctive plays	04
-----------------------	----

2-3 Game control	05
------------------	----

2-4 Instructions of the game display	06
--------------------------------------	----

2-5 Item system	06
-----------------	----

3.Operator settings

3-1 Framework of the menu	07
---------------------------	----

3-2 Using the operator settings	09
---------------------------------	----

3-3 Hardware test	10
-------------------	----

3-4 Game settings	15
-------------------	----

 
 
 
3-5 Income data	22
-----------------	----

4.Car Wire Manual





1-1 Name of main board parts

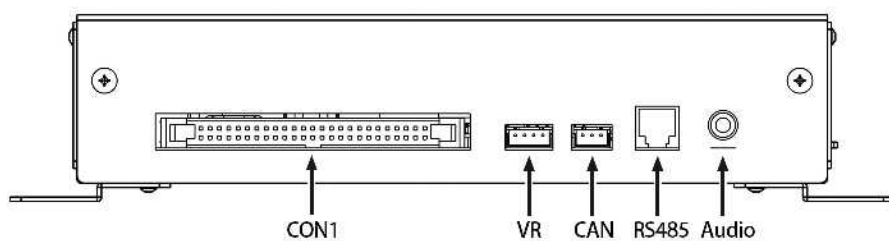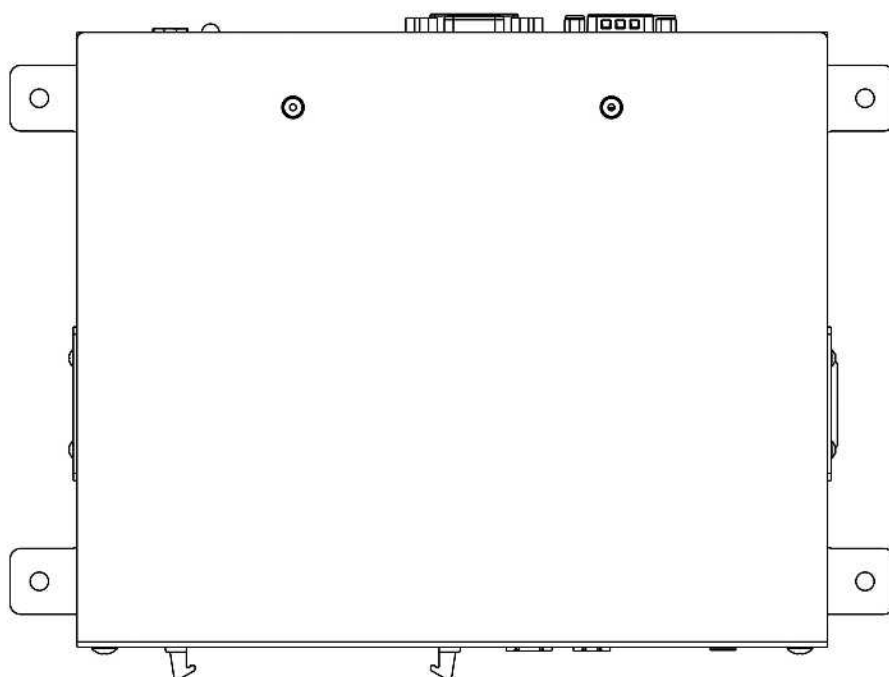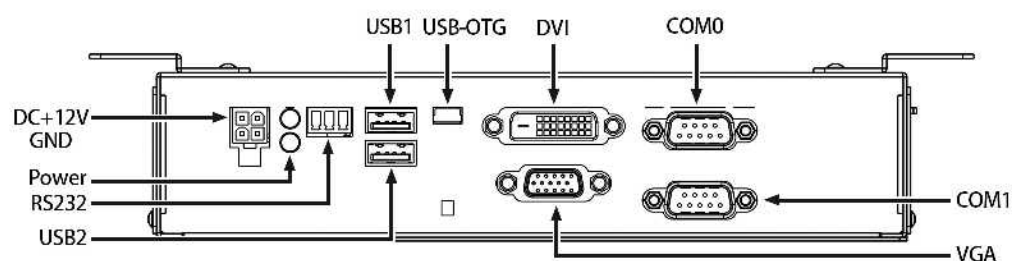



Introduction of the game

2-1 An overview of the game

"Candy Family" is an amusement ride for small children. There are 2 in-game sceneries and 4 different characters to choose from. Popular children's songs are played throughout the game. The child can press a button to release bubbles and honk the horn for even more enjoyment.

The child can score points by collecting items and English letters, enjoy a friendly competition with the game's other players to satisfy their sense of accomplishment.





2-2 Distinctive plays

- The 2 in-game sceneries are candy hills filled with candies and cookies, and a toy beach filled with toy blocks.

Candy Hills



Toy Beach



Cake



Candy



Milk



Donuts





- Press the button on the steering wheel to release bubbles and honk the horn. If the horn is pressed at just the right moment, something interesting might happen. Release colorful bubbles for more fun.



2-3Game control

- (1) Press the button throughout the game to release bubbles and honk the horn.



- (2) Steer the vehicle by turning the steering wheel left or right.





2-4Instructions of the game display



2-5Item system


Power Magnet	Mushroom	Bubble gun	Clock
Collect nearby rewards.	Enlarge and power-up the vehicle to directly plow through any road blocks.	Change the bubble configuration to shoot farther and faster.	Extend game time.





Operator settings

3-1 Framework of the menu

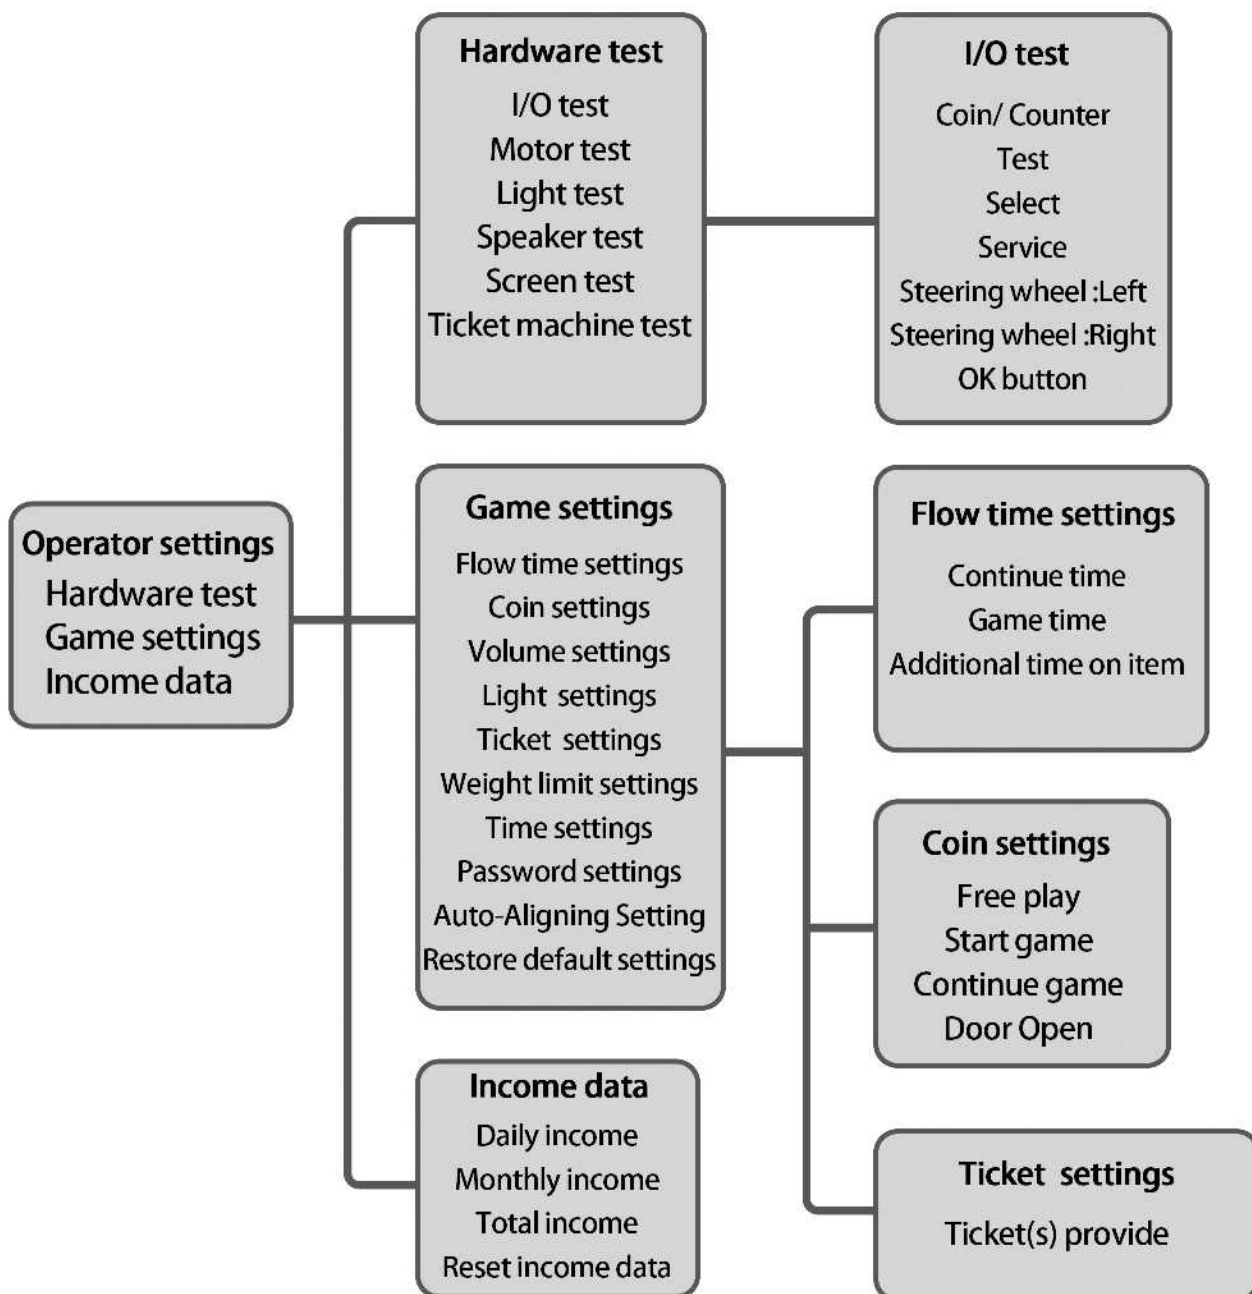



Operator settings

Game settings		Default
Flow settings	【Continue time】 5, 10, 15, 20 seconds	10 seconds
	【Game time】 1 ~ 9 min. ; 0,10 ~ 50 seconds	1 min 30 seconds
	【Additional time on item】 0 ~ 9 seconds	5 seconds.
Coin settings	【Free play】 Off, On	Off
	【Game coin】 1, 2, 3, ~ 9 coin(s)	2 coin(s)
	【Continue】 1, 2, 3, ~ 9 coin(s)	1 coin(s)
	【Door open】 NO ; NC	NO
Volume settings	【Daytime start】 hour ; min	8 : 00
	【Daytime volume】 0%,5% ~ 100%	70%
	【Evening start】 hour ; min	20 : 00
	【Evening volume】 0%,5% ~ 100%	50%
	【Idle volume】 Off, On	On
Light settings	【Daytime start】 hour ; min	8 : 00
	【Daytime Lights】 Off, On	On
	【Evening start】 hour ; min	20 : 00
	【Evening Lights】 Off, On	On
Ticket settings	【Ticket(s) provide】 0, 1, 2, ~15 Ticket(s)	0 Ticket(s)
Weight limit settings	【Weight limit】 40,50 KG	40kg
Time settings	Set local time year / month / day / hour / minute	Ex-factory date
Password settings	【Password change】 Enter old password > Enter new password > New password confirm	000000
Restore default Settings	【Restore default Settings】 Yes / No	





3-2 Using the operator settings

- Make sure the cabinet is turned on and the game is displayed on the screen.
- (1) Open the door of the interior parts and press the 【Test】 button to the 【Operator settings】 page, and the screen will display as below :



- Enter the password page and follow the instructions :
- (2) In 【Enter password】 , Press Steering wheel 【OK】 button and use 【Steering wheel】 to change the number. Use 【OK】 button confirm number and select the next number. Default password : 000000.
- (3) After the password is correct, you will be able to enter the 【Operator settings】 main page, and the screen will display as below :





- (4) Please turn the 【Steering Wheel】 to navigate between selections. The current selection is highlighted.
- (5) Use the 【OK】 button to confirm or enter the sub menu.
- (6) After setup or testing is completed, return to 【Operator settings】 and move the cursor to 【Exit】 . Then press the 【OK】 button to return to the game.

3-3 Hardware test

- You can enter 【Hardware test】 to test if all hardware is normally function or not.
- (1) Enter 【Operator settings】 → 【Hardware test】 , and the screen will display as below :




- Instructions for use:
- (2) Please turn the 【Steering Wheel】 to navigate between selections. The current selection is highlighted.
 - (3) After the testing is conducted, move the cursor to 【Exit】 , then press the 【OK】 button to leave this page and return to the 【Operator setting】
 - (4) Regarding detailed descriptions of the sub menu in 【Hardware test】 , refer to the below content.





I / O test

- In the page of 【I/O test】 , you can run the testing of specific application to see if it is normally functioning or not.
- (1) Enter 【Operator settings】 → 【Hardware test】 → 【I/O test】 , and the screen will display as below :

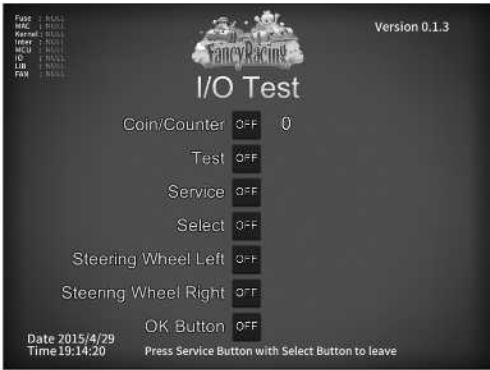

- (2) Enter 【I/O test】 , you can run the testing of a specific application as explained in the chart below :

Application	Testing method	Results
Coin/Counter	Insert coin(s)	"Off" became "On" Coin has been inserted The counter is added by corresponding coin counts.
Test	Press the button	"Off" became "On"
Service	Press the button	"Off" became "On"
Select	Press the button	"Off" became "On"
Steering wheel :Left	Steering wheel turn left	"Off" became "On"
Steering wheel :Right	Steering wheel turn right	"Off" became "On"
OK button	Press the button	"Off" became "On"

- (3) After testing is completed, Press the 【Select】 and 【Service】 together to return 【Hardware test】 .





Motor test

- This test allows you to test the swing motor work in function.

(1) Enter 【Operator settings】 → 【Hardware test】 , select 【Motor test】 and press 【OK】 button to start test, and the screen will display as below :



(2) During motor testing, the light to 【Auto-Aligning】 will light up.

(3) After the testing is completed, the motor will stop testing automatically.

Light test

- This test allows you to test all the Light work in function.

(1) Enter 【Operator settings】 → 【Hardware test】 , select 【Light test】 and press 【OK】 button to start test, and the screen will display as below :



(2) When testing the light-board, the lights on the frame will also light up.

(3) When the test is operating, you can press the 【OK】 button again to stop the test.





Speaker test


- This test allows you to test the speaker work in function.
- (1) Enter **【Operator settings】** → **【Hardware test】** , select **【Speaker test】** and press **【OK】** button to start test, and the screen will display as below :




- (2) The speaker being tested will keep producing a certain sound.
- (3) When the test is operating, you can press the **【OK】** button again to stop the test.

Screen test

- In the page of **【Screen test】** , you can test whether the white balance, color level, and lattice are normally functioning or not.
- (1) Enter **【Operator settings】** → **【Hardware test】** → **【Screen test】** .
 - (2) After you enter the page of **【Screen test】** , the system will then process the testing, and the following pictures will be displayed for you to adjust the white balance, color level, and lattice.

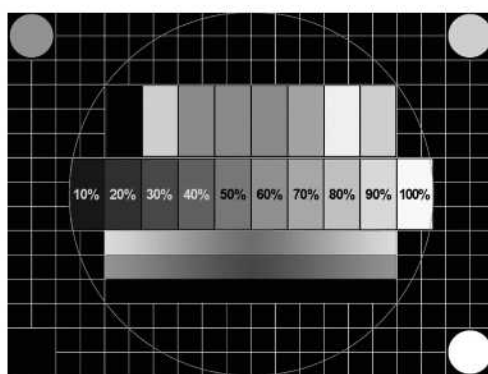

- (3) In the page of **【Screen test】** , press the **【OK】** button to change the displayed picture. After the testing is completed, leave this page and return to the **【Hardware test】** .

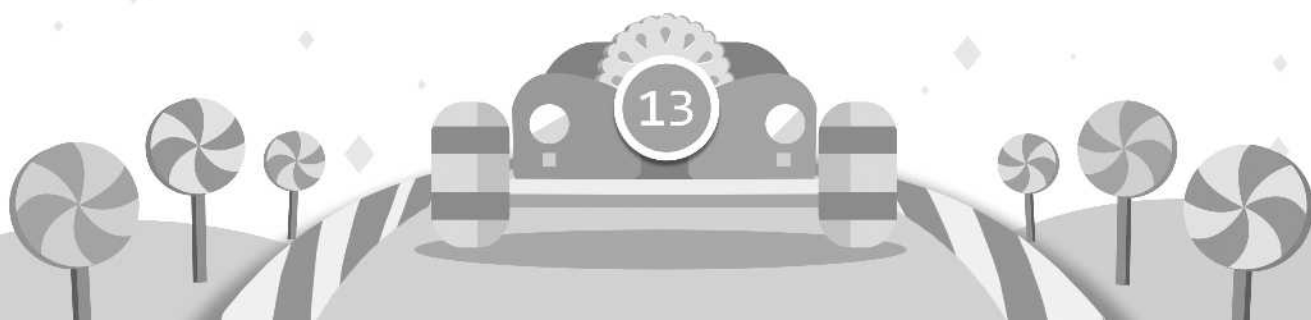



Ticket machine test

- In the page of 【Ticket machine test】 , you can test the ticket machine is normally functioning or not.

(1) Enter 【Operator settings】 → 【Hardware test】 → 【Ticket machine test】 , and the screen will display as below :



(2) Press 【OK】 button during the 【Ticket machine test】 to test the ticket dispenser. When tickets are not being dispensed, please verify if there are enough tickets in the dispenser.

- PS : This is test only available on the machine has installed the ticket machine.





3-4Game settings

- In the page of 【Game settings】 , you can set up all related features of the game.
- (1.) Enter 【Operator settings】 → 【Game settings】 , and the screen will display as below :



- (2) Please turn the 【Steering Wheel】 to navigate between selections. The current selection is highlighted.
- (3) Use the 【OK】 button to confirm or enter the sub menu.
- (4) After setup is completed, return to 【Game settings】 and move the cursor to 【Exit】 . Then press the 【OK】 button to return to the 【Operator settings】 .
- (5) Regarding detailed descriptions of the sub menu in 【Game settings】 , refer to the below content.





Flow settings

- In the page of **Flow settings** , you can determine the duration of each process.
- (1) Enter **Operator settings** → **Game settings** → **Flow settings** , and the screen will display as below :



- (2) Use the **Steering wheel** button functions to choose the item, and press **OK** button to start set-up.
- (3) When done, move the cursor to **Exit** and return to **Game settings** .

Coin settings

- In the page of **Coin settings** you can determine if free games are offered, and set up the required number of coins to start or continue a game.
- (1) Enter **Operator settings** → **Game settings** → **Coin settings** , and the screen will display as below:



- (2) Use the **Steering wheel** button functions to choose the item, and press **OK** button to start set-up.
- (3) When done, move the cursor to **Exit** and return to **Game settings** .





Volume settings

- In the page of 【Volume settings】 , you can determine the start time of daytime and evening and the corresponding volume.

(1) Enter 【Operator settings】 → 【Game settings】 → 【Volume settings】 , and the screen will display as below :



(2) Use the 【Steering wheel】 button functions to choose the item, and press 【OK】 button to start set-up.

(3) When done, move the cursor to 【Exit】 and return to 【Game settings】 .

Light settings

- In the page of 【Light settings】 , you can determine the start time of daytime and evening and the corresponding Light .

(1) Enter 【Operator settings】 → 【Game settings】 → 【Light settings】 , and the screen display as below :



(2) Use the 【Steering wheel】 button functions to choose the item, and press 【OK】 button to start set-up.


(3) When done, move the cursor to 【Exit】 and return to 【Game settings】 .





Ticket settings

- In the page of 【Ticket settings】 , you can set up how many ticket provide in each game.
- (1) Enter 【Operator settings】 → 【Game settings】 → 【Ticket settings】 , and the screen will display as below :

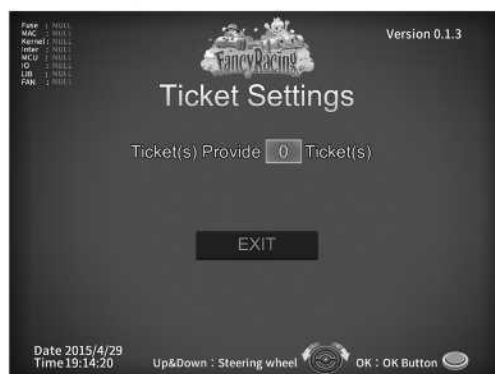

- (2) Use the 【Steering wheel】 button functions to choose the item, and press 【OK】 button to start set-up.
- (3) When done, move the cursor to 【Exit】 and return to 【Game settings】 .
- PS : This is setting only available on the machine has installed the ticket machine.

Weight limit settings

- In the page of 【Weight limit settings】 , you can setting the weight limit in "warning page".
- (1) Enter 【Operator settings】 → 【Game settings】 → 【Weight limit settings】 , and the screen will display as below :



- (2) Press 【OK】 and turn the steering wheel to enter Weight limit settings.
- (3) When done, move the cursor to 【Exit】 and return to 【Game settings】 .





Time settings

- In the page of **【Time settings】** , you can set up your local time.
- (1) Enter **【Operator settings】** → **【Game settings】** → **【Time settings】** , and the screen will display as below :



- (2) Use the **【Steering wheel】** button functions to choose the item, and press **【OK】** button to start set-up.
- (3) When done, move the cursor to **【Exit】** and return to **【Game settings】** .

Password settings

- In the page of **【Password settings】** , you can setting the password for entering the operator settings.
- (1) Enter **【Operator settings】** → **【Game settings】** → **【Password settings】** , and the screen will display as below :





- (2) Press [OK] button to confirm.
- (3) When changing the password, you must enter old password first, when the old password is confirmed, enter the new password twice.
 - PS : Default password : 000000
- (4) After the new password is confirmed, your password is changed, use new password to enter operator settings next time.
 - Note: To change the password, please ensure that the new password matches the one in the password confirmation field.
- (5) When done, move the cursor to [Exit] and return to [Game settings] .



Auto-Aligning setting

- In the page of [Auto-Aligning setting] , You may switch on/off the auto-aligning function of the game.
- (1) Enter [Operator settings] → [Game settings] → [Auto-Aligning setting] , and the screen will display as below :



- (2) Use the [Steering wheel] button functions to choose the item, and press [OK] button to start set-up.
- (3) When done, move the cursor to [Exit] and return to [Game settings] .





Restore default settings

- In the page of 【Restore default settings】 , you can reset the game settings to the default settings.

(1) Enter 【Operator settings】 → 【Game settings】 → 【Restore default settings】 , and the screen will display as below :



- (2) Move the cursor by turning the 【Steering Wheel】 and select 【Restore default settings】 .
- (3) Press 【OK】 after selecting 【Restore default settings】 to reset all settings to factory defaults.
- (4) Once the factory settings are successfully restored, a 【Reset Complete】 message will be displayed.
- Note: Restore default settings will only reset game-related settings. Password settings and revenue data are not affected.
- (5) Once the changes are complete, select 【Exit】 and press 【OK】 to return to the 【Game Settings】 menu.





3-5 Income data

- In the page of 【Income data】 , you can check the daily, monthly and total revenue.

(1) Enter 【Operator settings】 → 【Income data】 , and the screen will display as below :



- (2) Please turn the 【Steering Wheel】 to navigate between selections. The current selection is highlighted.
- (3) Regarding detailed descriptions of the sub menu in 【Income data】 , refer to the below content.
- (4) After setup is completed, return to 【Income data】 and move the cursor to 【Exit】 . Then press the 【OK】 button to return to the 【Operator settings】 .
- (5) Regarding detailed descriptions of the sub menu in 【Income data】 , refer to the below content.





 Daily income

- In the page of **【Daily income】** , you can check the daily revenue of each cabinet.
- (1) Enter **【Operator settings】** → **【income data】** → **【Daily income】** , and the screen will display as below :



Item	Descriptions
Date	Date of data
Coin(s)	The total number of coins inserted that day
Total game	The total number of games played that day
Continued	The total number of games continued that day
Service	The total time of service use that day
Current coin(s)	The actual number of coins counted that day
Current service	The actual number of service key counted that day
Total time	The entire duration of time when the cabinet is turned on that day
Idle time	The entire duration of idle time that day
Avg. game time	The average play time of the day

- (2) Use the **【Steering wheel】** button function to move the page, and press the **【OK】** button to return to **【Income data】** .





Monthly income

- In the page of 【Monthly income】 ,you can check the month revenue of each cabinet.

(1) Enter 【Operator settings】 → 【Income data】 → 【Monthly income】 , and the screen will display as below :



Item	Descriptions
Date	Date of data
Coin(s)	The total number of coins inserted that month
Total game	The total number of games played that month
Continued	The total number of games continued that month
Service	The total time of service use that month
Current coin(s)	The actual number of coins counted that month
Current service	The actual number of service key counted that month
Total time	The entire duration of time when the cabinet is turned on that month
Idle time	The entire duration of time when the cabinet is turned on that month
Avg. game time	The average play time of the month

(2) Use the 【Steering wheel】 button function to move the page, and press the 【OK】 button to return to 【Income data】 .






Total income

- In the page of 【Total income】 , you can check the total revenue of each cabinet.

(1) Enter 【Operator settings】 → 【Income data】 → 【Total income】 , and the screen will display as below :

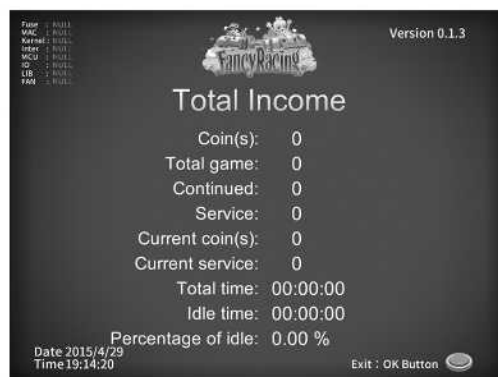

Item	Descriptions
Coin(s)	The total number of coins inserted
Total game	The total number of games played
Continued	The total number of games continued
Service	The total use times of the service button
Current coin(s)	The actual number of coin counted
Current service	The actual number of service key counted
Total time	The entire duration of time when the cabinet is turned of games total time
Idle time	The entire duration of idle time
Percentage of idle	The amount of idle time among the entire period when the cabinet is turned on

(2) Press the 【OK】 button to return to 【Income data】 .





Income data reset

- In the page of 【Income data reset】 , you can delete the data of daily income and monthly income.

(1) Enter 【Operator settings】 → 【Income data】 → 【Income data reset】 , and the screen will display as below :




- (2) Press 【OK】 button while selecting Reset Income Data option will reset the income data.
- (3) 【Reset Complete】 will be shown on the screen when the income data resetting is done.






[illegible]



 Ticket wire manual

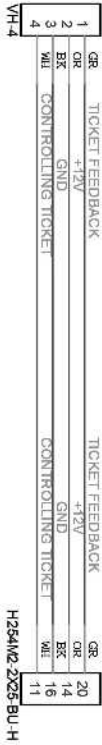

For N.O Mode Ticket

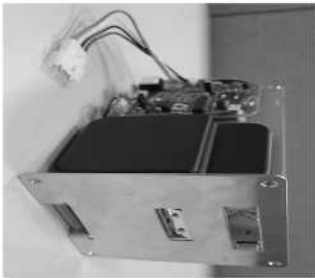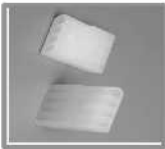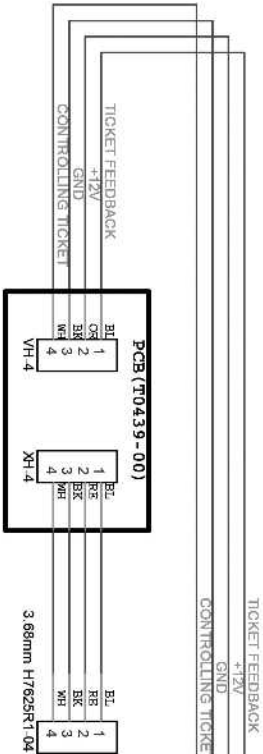

For N.C Mode Ticket




RFID_READER wire manual

Serial Number	RFID READER PCB	I/O Board SW Set up	Wire Manual
IGS_W			I/O Board RFID_READER PCB
W1			I/O Board RFID_READER PCB
W2			I/O Board RFID_READER PCB
W4			I/O Board RFID_READER PCB
W5			I/O Board RFID_READER PCB




A series of 18 horizontal lines for writing, spanning the width of the page.

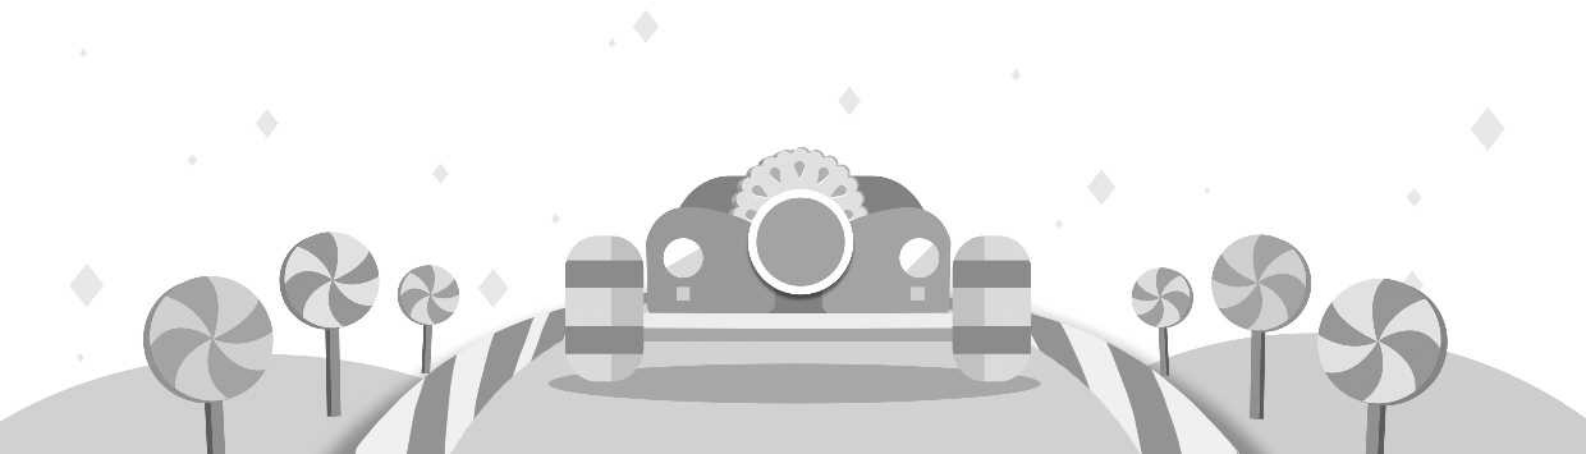



 A series of 18 horizontal lines for writing, arranged in a single column.

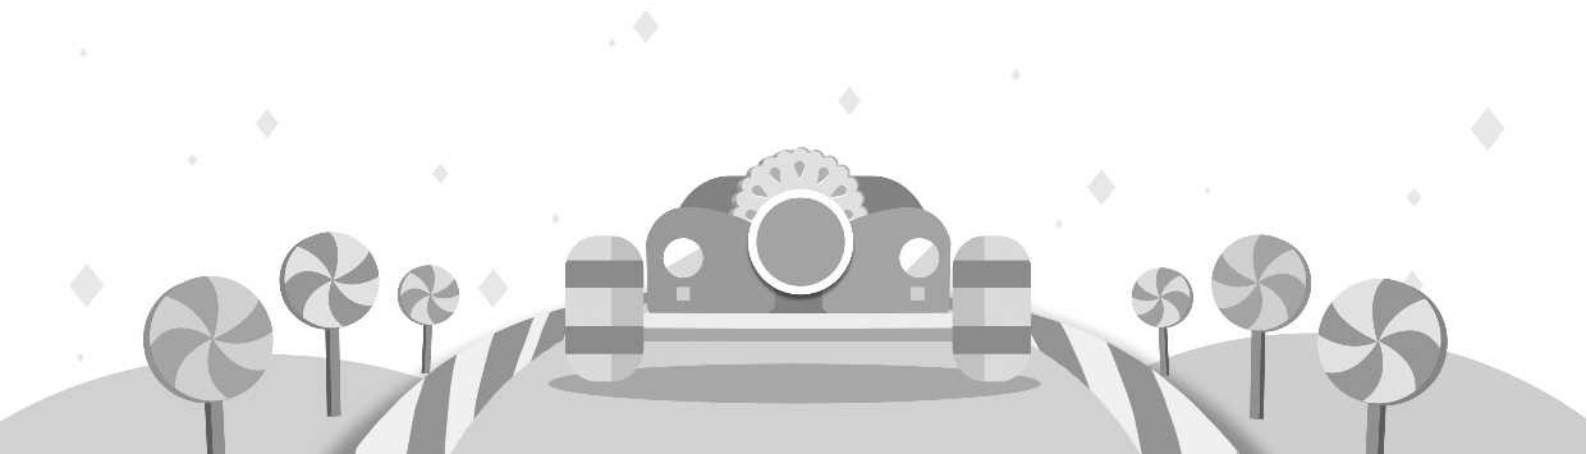



A series of 18 horizontal lines for writing, arranged in a single column.

