



MANUAL

Please read this instruction carefully before use



Contents

1. Specifications.....	3
2. Appearance.....	4
3. Attention.....	5
4. How to play.....	7
5. Package Part.....	7
6. Set.....	8
7. Board wire.....	15
8. How to change music.....	16
9. Error Code.....	16




1. Specifications

Voltage	110V AC $\pm$ 10% 2.3A. 220V AC $\pm$ 10% 1.2A. 50/60 Hz. (Note: Please refer to the label on the game for the actual voltage.)
Power	200W
Size	L800*W860*H2400mm
Weight	135KG
Texture	plastic + metal



2. Appearance

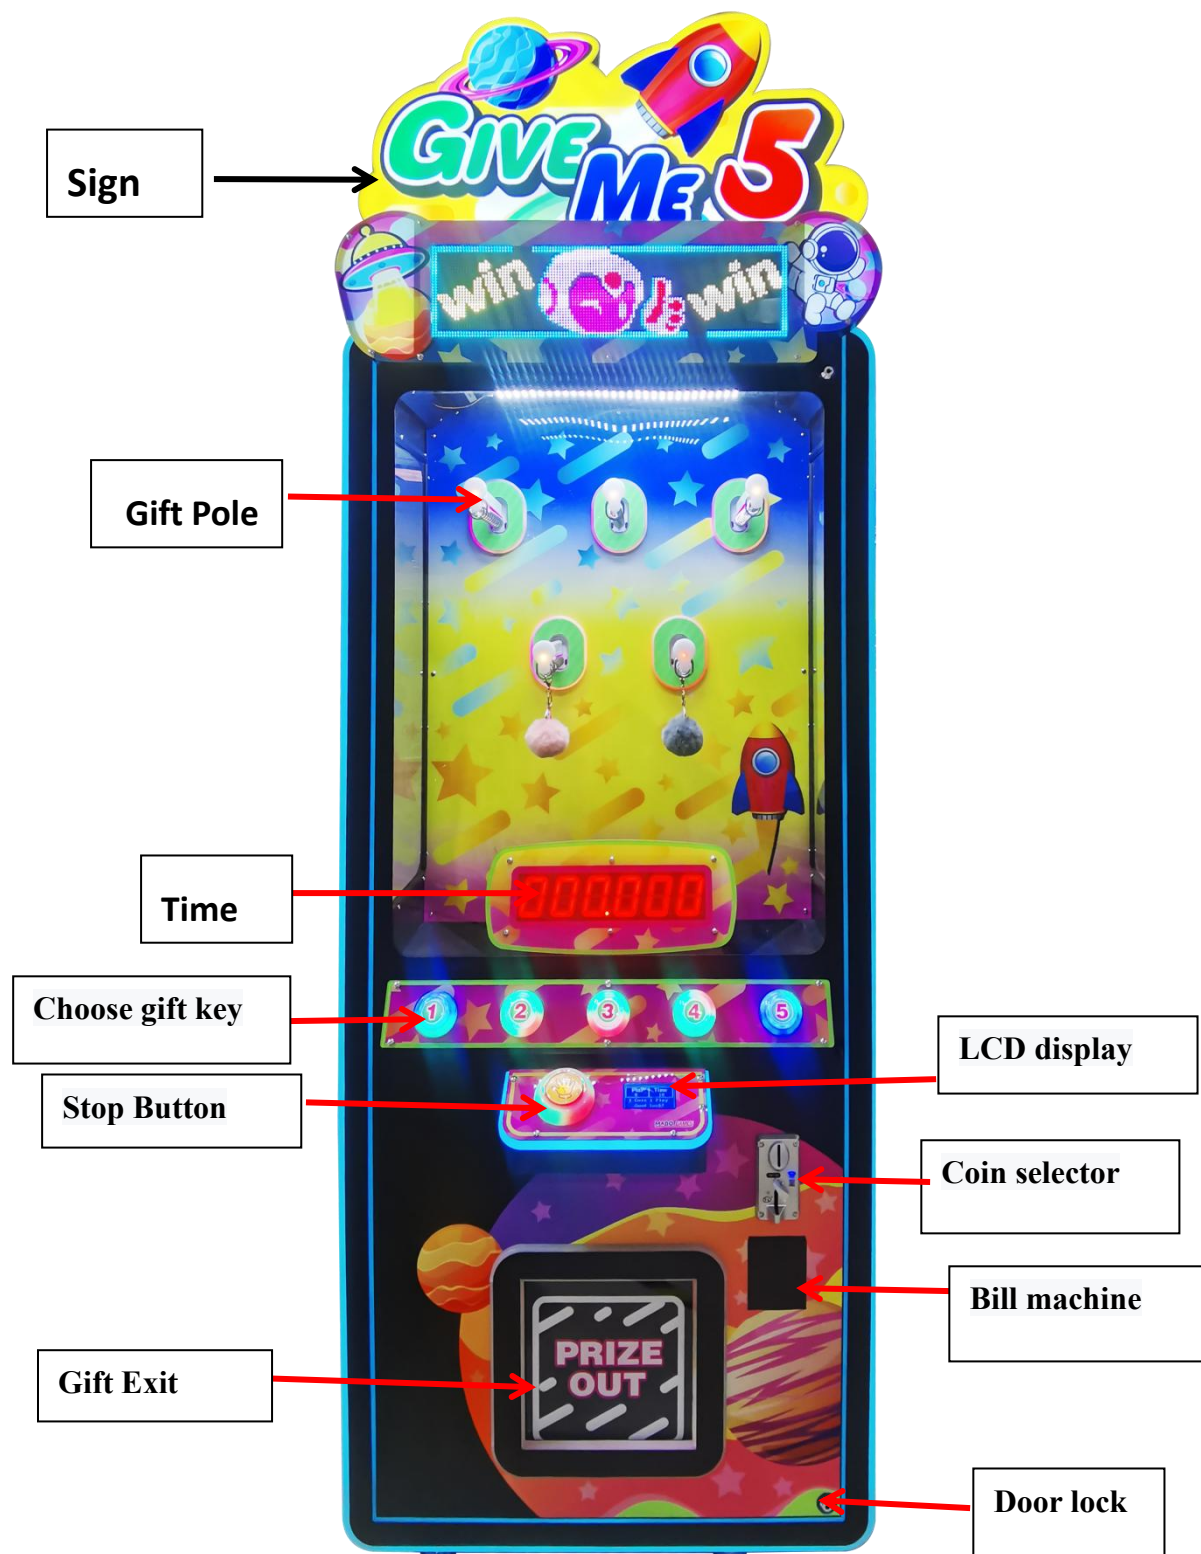



3. Attention WARNING




The machine is designed for indoor use only.

Never install this machine outdoors or in any of the following

- Locations exposed to direct sunlight
- Locations subject to rain or water leakage.
- Unstable locations or locations subject to vibration.
- Dusty, hot, or damp locations.


Game Leveling:

Install this machine on a flat surface. Make sure that the machine is level with the floor. If the machine is not level, the game may not play well.

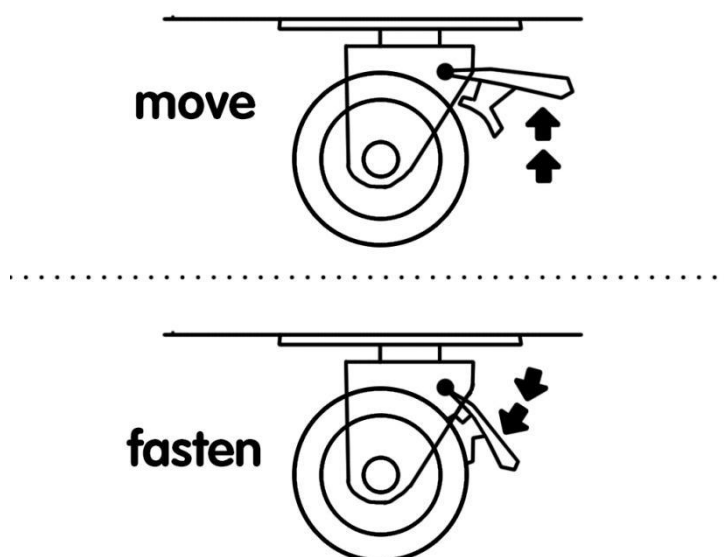

- ◆ Disconnect game power before moving
- ◆ Make sure all wheels are intact. Replace any wheels that are damaged or broken before moving the game.
- ◆ When moving the game, DO NOT slide the game across the floor
- ◆ Ensure the game is level before connecting the power.


Connecting the power cord:

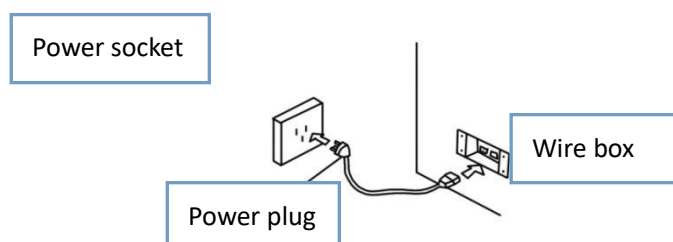




WARNING


- Do not put heavy items on power cord.

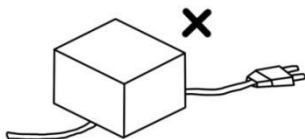


- Hold the power plug instead of the wire to draw the power cord out of the socket.

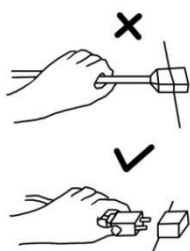

- Do not touch the power plug with wet hands.

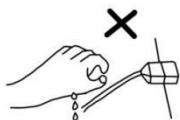

- Do not draw or twist the cord or near a heat source.
- Do not place the cord where the player can easily trip over or come in contact with it.

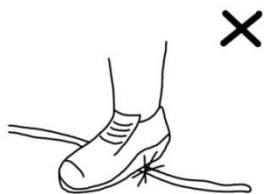

- Operate this game with the correct power and fuse configuration. (The machine's supply Voltage is 110VAC or 220VAC, if not, it can cause an electric shock or malfunction.)



4. How to play

(1) Put in coins into then start the game.

(2) See the time and press the “ STOP ” button. Time stops at "005.000 ", you win the gift

5 Package Part

Check the parts list before installation. Verify that all parts match the list and in good condition.

NO.	Name	PCS	Type/Model	Picture
1	Power line	1		
2	Key	3	818	
4	Instructions	1		



6. Set



(Operating handle)

Press



enter background settings.

- 1: Account
- 2: Settings
- 3: Password
- 4: Version

6.1 Account

1	Press	
2	Press enter account item.	1: Account 1. Temporary 2. Permanent 1 Nm Gift Pole Out : 000000 Game: 000000 In : 000000 Out: 000000 Game: 000000



6.2 Parameter setting

1	Get into	
2	Press   enter item	2: Settings
3	Get into	
4	Screen prompt for password	Input Password Up and down keys 00000000 Select and Set
5	When the input is complete, press	
6	You can view the main interface for parameter settings	1. Input Value 2. Game Start 3. Difficulty 4. Free Mode 5. Game Time 6. Music 7. Volume 8. Standby Light 9. Test 10. Temporary 11. Factory



6.2.1 Press



each item that enters the parameter setting separately and adjust.

(Note: use of reference handle schematics)

Function	View	Instructions
1. Input Value	1. Coin acceptor1 2. Card acceptor 3. Bill acceptor Coin acceptor1 1 Plus MUL x → 1 Card acceptor1 1 Plus MUL x → 1 Bill acceptor1 1 Plus MUL x → 1	How much is a coin worth ? Range Values 1-10 How much is a card signal worth ? Range Values 1-10 How much is a paper currency worth? Range Values 1-10



2. Game Start	Game Start 1 Coin 1 Play	X coin X play: Input X coin can play X times. Range Values 1-10
3. Difficulty	1Num Difficulty X Game Can Win 10 First Clear Acct	How many times can you play to get gifts Range Values 1-500
4. Free Mode	Free Mode → Close	Press the Stop button to start the game, and press the number of seconds to stop Range Values: Close Open
5. Game Time	Game Time 6-10 Second 10	Count down for one game Range Values 6-10
6. Music	Standby Sound 5-20 Minute Close Open → Open	Music playing time: 5 minutes, 10 minutes, 15 minutes, 20 minutes, always turn off, always turn on. If 5 minutes is selected, music will stop playing after 5 minutes, and play again after 5 minutes, and so on.
7. Volume	Volume Set Volume 1-30 → 30	Volume adjustment can be directly adjusted in the background, there are 1-30 values optional. 1 for mute, the larger the number, the volume is higher, the maximum is 30.



8. Standby Light	Standby Light 0-10 Minutes → 1	How often do the lights flicker when the machine is on standby Range Values 0-10 0 indicates that the light does not flicker is on standby
9. Test	1. Pole 1 Test 2. Pole 2 Test 3. Pole 3 Test 4. Pole 4 Test 5. Pole 5 Test 6. Light Test Light Test → Close	Gift Pole (1-5) test Range Values: Close Open Test the Light Range Values: Close Open
10. Temporary	Temporary Sure press Enter CL press Exit	The account is cleared, and the key can be cleared by pressing the Enter key. Press the Exit key to exit the menu.
11. Factory	Factory Default Sure press Enter CL press Exit	The Factory Default , and the key can be cleared by pressing the Enter key. Press the Exit key to exit the menu. *Using factory Settings restores all Settings to their original state.



6.3 Password change


1	Get into	
2	Press   into Password change.	3: Password
3	Get into	
4	Password change interface	Input Password Up and Down Keys 00000000 Select and Set
5	When you have entered the old password, click	
6	New password interface	Password Set New Password 1000000 Up Down Select Set
7	When you have entered a new password, click	
8	Again input new password interface	Password Set Re New Password 1000000 Up Down Select Set
9	When the input is complete, press	



10	This interface indicates successful password modification	Password Set Password Success 1000000 Up Down Select Set
----	---	---

7. Board wire


7.1 Main board

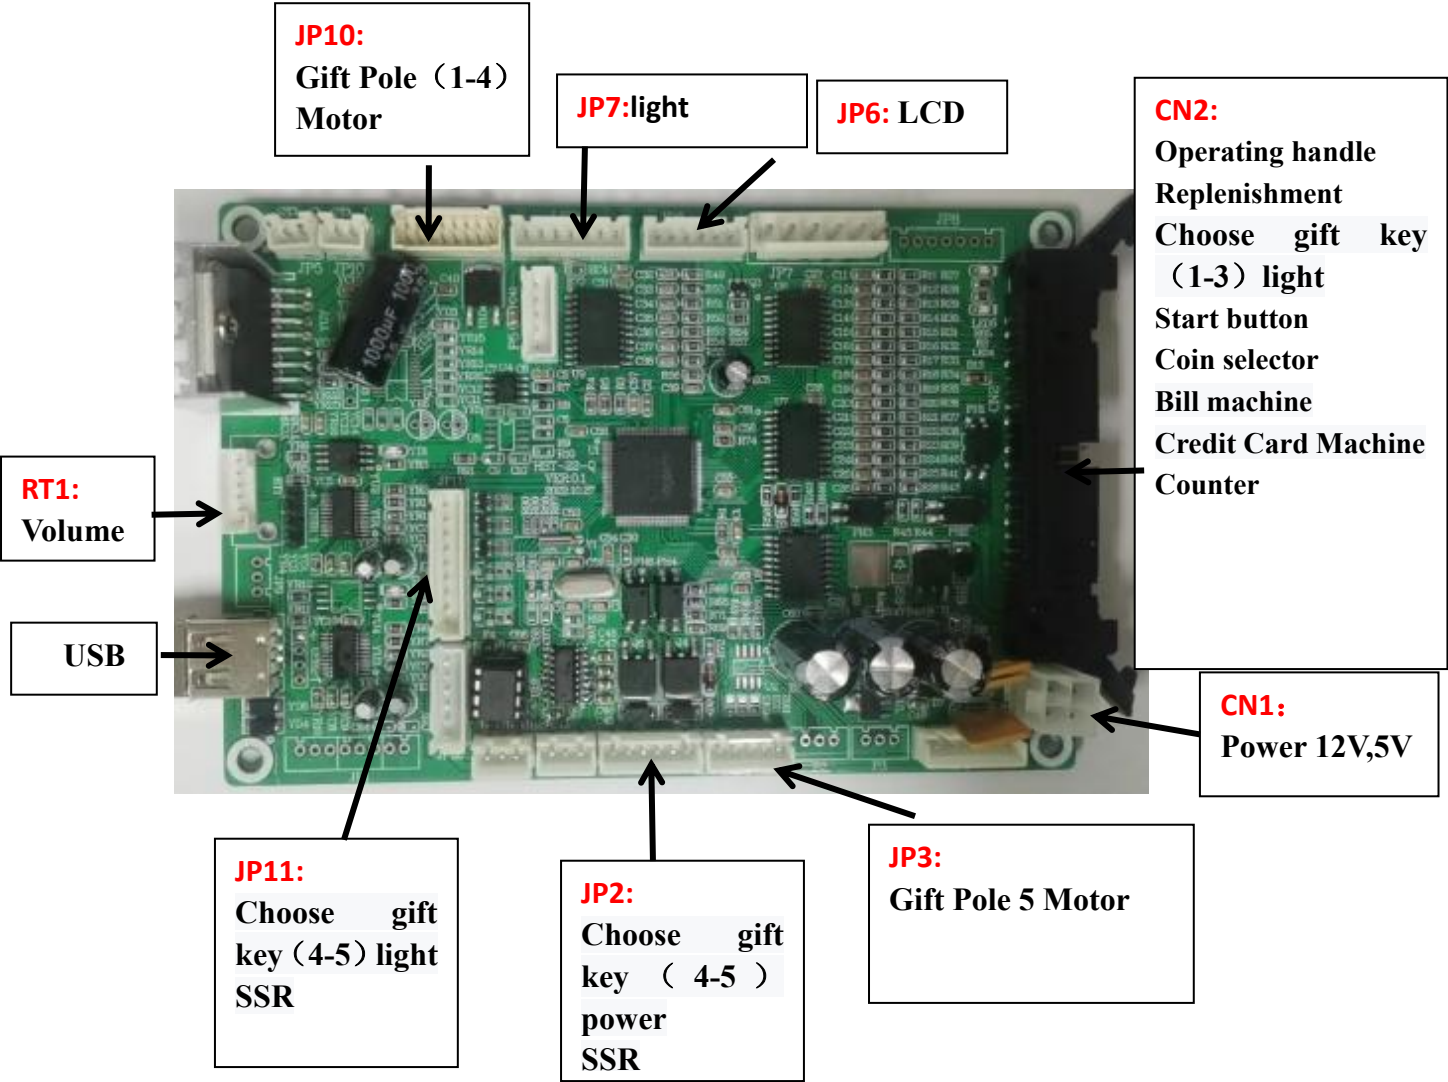

8. How to change demo music

If you want to change the DEMO music, The Main board USB unplug and then connected to the computer, Open USB file, 001.mp3, 002.mp3, 003.mp3, 004, 005 mp3, music can be changed by request, but the file name and file format must be consistent with existing formats USB.

Note: 01 folder cannot be changed.

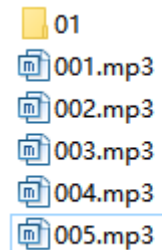

9. Error code

Error	How to eliminate
Coin Error	You need to turn the switch of the coin machine to NO
1 Number Gift Er	All the gifts went out. After replenishing the gift, press the reset button
2 Number Gift Er	All the gifts went out. After replenishing the gift, press the reset button
3 Number Gift Er	All the gifts went out. After replenishing the gift, press the reset button
4 Number Gift Er	All the gifts went out. After replenishing the gift, press the reset button
5 Number Gift Er	All the gifts went out. After replenishing the gift, press the reset button
Total Error	The revenue of the machine has reached the maximum of 1000000;You need to go into the background and clear account
Motor Sensor Er	Check that the motor is normal
Lattice Link Err	Check that the line is properly inserted.

