

Manual MMA 3.0




Content:

1. Technical specifications	3
2. Terms of use	4
3. Menu scheme	6
4. Settings	7
5. Safety instruction.....	8
6. Warranty.....	10
7. Maintenance.....	12
8. Contact.....	12



1. Technical specifications

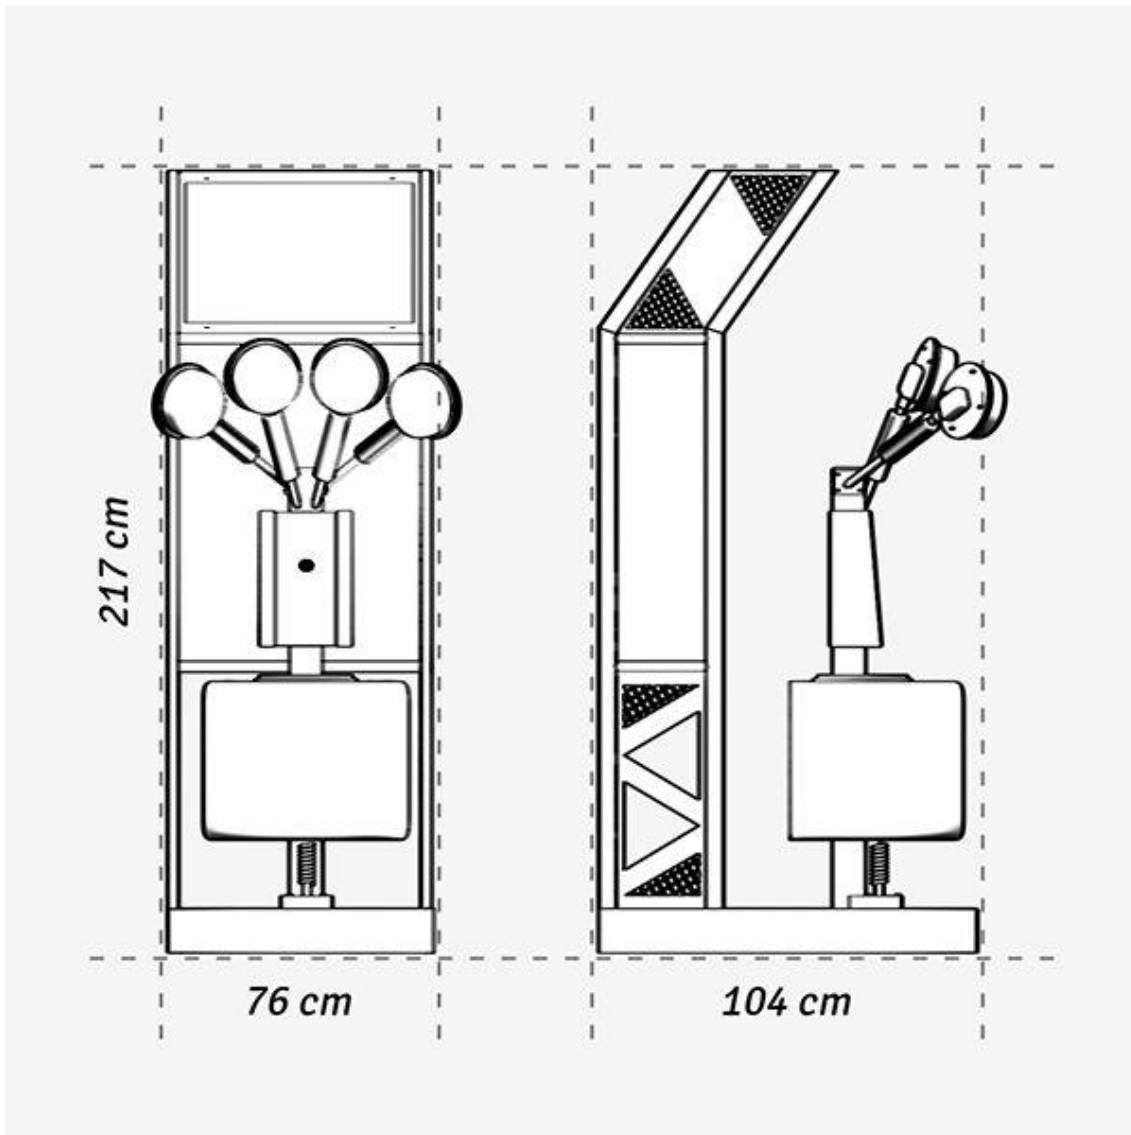

Rated power supply: 110-240V

Dimensions: 125 x 100 x 220 cm

Weight: 200KG

Power consumption: 100W

2. Terms of use

The machine is used for entertainment, which involves hitting and kicking individual pads with sensors, the so-called "active pillows". We hit the active pillows, the LED lighting of the circles changes from red to green. Unused circles (inactive ones that we do not hit) have red lighting.

In the basic program, hitting the pad highlighted in green adds 1 point, and hitting the red pad subtracts 1 point.

Always make sure the machine is unplugged before you do any maintenance. Only authorized staff may carry out any work on the machine. Under no circumstances should any plug or connector be pulled out or disconnected when the power is on. Make sure the plug and socket are properly grounded. Protect the mains cable against any damage. Oil and acid can damage the cable. Use proper extension cables and do not overload power sockets. Use only original spare parts.

The device consists of a metal structure and striking pads. The pads are mounted on springs and vibration isolators.

They consist of

- plastic part (HDPE) on which the RGB LED strip is mounted
- plastic part (cover covering the sensor and wiring)
- a pillow made of natural leather, wood, polycarbonate and foam, which the user hits.

The parts are mounted on a metal rim with a sensor that receives a signal after hitting the pad.

If the sensor is damaged or worn out, the LED strip (on the rim of the pad with the damaged sensor) starts flashing yellow. This is information for the customer that the sensor is still active or damaged.




The pads (cushions) are wearing parts because they are directly exposed to many impacts. They are an element that is replaced regularly. It is recommended to purchase from the manufacturer - made of the best available materials. We have extensive experience in the operation and consumption of materials of this part of the equipment.

Important!

Check the condition of the pads regularly to locate wear or foreign objects that may cause injury during use.



3.Menu scheme

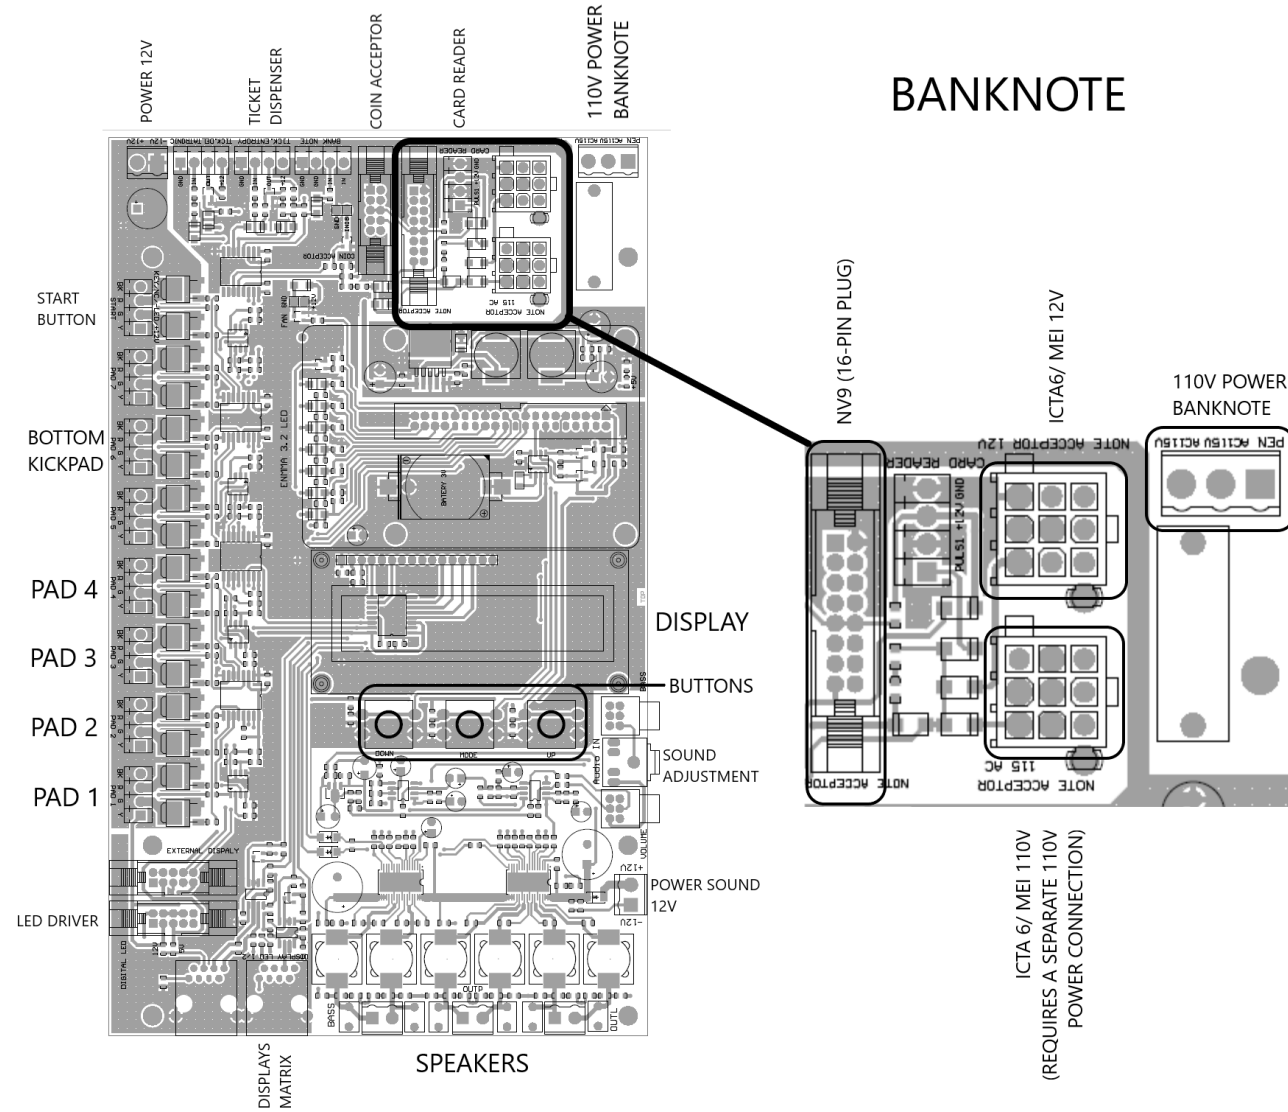

4.Settings

Menu Motherboard JB5							Comments
1	Coin/impulse	0,5					the smallest coin
2	Start-Impulse	2	<1 "free-play"				after how many coins the device starts
3	Game time	00m25s					Game time
4	Activate Bonus	active inactive					Active Bonus Inactive Bonus
5	Set bonus	Imp4. Bon. 1	Imp1. Bon.0	Imp1. Bon.0	Back to menu		Set Bonus
6	Demo	volume Repeat time Back to menu	100 600s				Demo volume Repeat Demo
7	Hit point	1					how many points for one hit
8	Sub. Game pts.	1					How many points are subtracted for a bad hit (in red)
9	Pad change	3s					After what time of inactivity the active pads change
10	Tickets	Active Inactive	Point/ticket 100	Highscore/ticket 1	Highscore/credit 1	Substract point 1	Ticket setting Ticket setting
11	Clear counts	Clear Points Cancel Clear	Clr. Money amount Cancel Clear	Clr.ticket count Cancel Clear	Back to menu		Counts
12	Change code	Write New Code 0***					Change code
13	Language	English					Language
14	Serial no.	sn_____					Serial number
15	Update	cancel/ download					software update
16.	Exit						Exit (acceptance of introduced changes)

- Device
- Set of keys (panel of coin acceptor)
- Power cable (cashbox)

5. Safety instruction

The manufacturer recommends fixing the device to the ground for proper functioning and operation. Designate the places where the device will be located. The equipment has holes that allow it to be attached to the ground.

Before starting the installation, be sure to read the safety instructions included in this manual. It is necessary to check the technical condition of electrical devices and installations (condition of insulation of wires and cables, plugs, switches, sockets), neutralization and earthing, condition of fire protection. Check the technical condition of the current protections.

Most work accidents are caused by disregard or non-compliance with basic safety regulations. Accidents can be avoided by anticipating possible life or health-threatening situations and strictly following the safety procedures. Always make sure that the conditions and technical condition of the device allow for safe operation for the user and nearby third parties.

IMPORTANT!

- The product is not intended for rehabilitation purposes.
- Use the device only for its intended purpose.
- Any other use of the device is prohibited and may be dangerous. The manufacturer is not responsible for any damages or injuries caused by improper use of the equipment.
- The equipment has been manufactured with safety standards. Potential injury hazards have been ruled out.
- It is recommended to insure the purchased equipment. A policy against accidents can protect you against serious financial consequences of the damage caused.

To avoid injuries and / or accidents, follow these simple rules:

- Persons under 18 years of age, meeting the above criteria of appropriate height, should only use the device under the supervision of an adult.
- Regularly check that all bolts and nuts are tightened and that the handles are properly fastened.

The safety of the equipment can only be guaranteed if it is subject to regular inspections and controls.

- Always use the equipment for its intended purpose. If during use any part proves to be defective or makes disturbing sounds, stop using the device and have the device serviced. A damaged device must not be used.
- Replace any damaged parts immediately and do not use the equipment until it is repaired. You should also pay attention to possible material consumption. Safe use of the equipment can only be ensured if the wearing parts are regularly checked carefully.
- Avoid high temperatures, humidity and contact with water.
- There must be at least 1.5m of free space.
- Place the equipment on a solid and level surface. Use floor protection under the machine. Place the appliance on a straight, stable and hard surface. For safety reasons, 1.5 m of free space on each side for safe use should be left around the device.
- Do not train immediately before or after a meal.
- Do not stand on the housing.
- Do not use while under the influence of drugs or alcohol.
- The safe and effective use of the device can only be ensured when it is maintained and used properly, as described in the manual.
- TRANSPORT: Be especially careful when lifting and moving the device. Only transport the device with a forklift or hand pallet truck.
- It is forbidden to hit the leather parts with hard or sharp objects.
- The pads should not be cleaned with chemical agents - it is recommended to use a damp cloth to clean the surface.
- ELECTRICAL NOTES:

The hardware requires a proper power source to operate. For your own safety as well as the safety of others, please make sure the power source is correct before turning on the device. Any source of power above or below the level can cause significant damage to the equipment and / or user.



This product must be earthed. If the machine fails, grounding provides a path of least resistance from electric current to reduce the risk of electric shock. This product is equipped with an earthed plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Incorrect connection of the equipment may present a risk of electric shock. Check with a qualified electrician or serviceman if you are not sure that the appliance is properly grounded. Do not modify the plug provided with the product. If it does not fit the outlet, have a proper outlet installed by a qualified electrician. Make sure that the machine is connected to an outlet with the same plug configuration. Do not use an adapter for this product

- After use, this product cannot be disposed of as household waste, but must be taken to a collection point for used electrical and electronic equipment. The materials can be recycled according to their labeling. By recycling, material recycling or other forms of using old appliances, you contribute to the protection of our environment.

6. Warranty

Terms of warranty:

- The warranty period is 1 year from the date of sale, if the device was purchased by a customer who runs a business.
- The warranty period is 2 years from the date of sale, if the device was purchased by a customer who does not run a business
- The condition of the warranty is the presentation of the warranty card signed by the manufacturer and a description, photos or video of the failure
- The warranty card includes, among others machine serial number, date of sale, buyer data, manufacturer's company signature. (take care of the condition of the aforementioned document - illegibility of the document excludes the warranty)
- Damaged parts should be sent to the service .



- Any damage caused knowingly by the user is not the responsibility of the manufacturer.
- The manufacturer is not responsible for damage caused by a natural disaster (storm, lightning, hail, etc.), random accidents, improper use and incorrect operation.
- The manufacturer is not responsible for damage in transit
- The manufacturer is not responsible for damage caused by use by players (scratches, bumps, dents, bends, etc.)
- Replacing parts in the device does not extend the warranty period (the warranty covers all free repairs / replacements for a period of 1/2 years, depending on the above-mentioned).
- The manufacturer is not responsible in any way for the time when the device is not functioning during the warranty period.
- The manufacturer is not responsible in any way for damage to property or personal damage caused by improper use of the device.
- The warranty covers a device that has not been modified or has not been repaired by itself without consulting service.
- The warranty covers only the buyer of the device (continued sale excludes the warranty granted for the machine)
- The manufacturer has the right to refuse to repair under the warranty if the customer has outstanding payments with the manufacturer

Repair after the warranty period:

- It is recommended to repair the device only at the manufacturer's. The cost of repair and replacement parts is covered by the customer.

