



Manual

Please read this instruction carefully before use



Contents


1. Specifications.....	3
2. Appearance.....	4
3. Attention.....	5
4. How to play.....	7
5. Package Part.....	7
6. Set.....	8
7. Board wire.....	15
8. How to change music.....	16
9. Error Code.....	16

1. Specifications

Voltage	110V AC $\pm$ 10% 1.8A. 220V AC $\pm$ 10% 0.9A. 50/60 Hz. (Note: Please refer to the label on the game for the actual voltage.)
Power	200W
Size	L730*W915*H2138mm
Weight	155KG
Texture	Wood + plastic + metal
Power box	5v~3A 12v~10A 24V~3A 12v~20V



2. Appearance

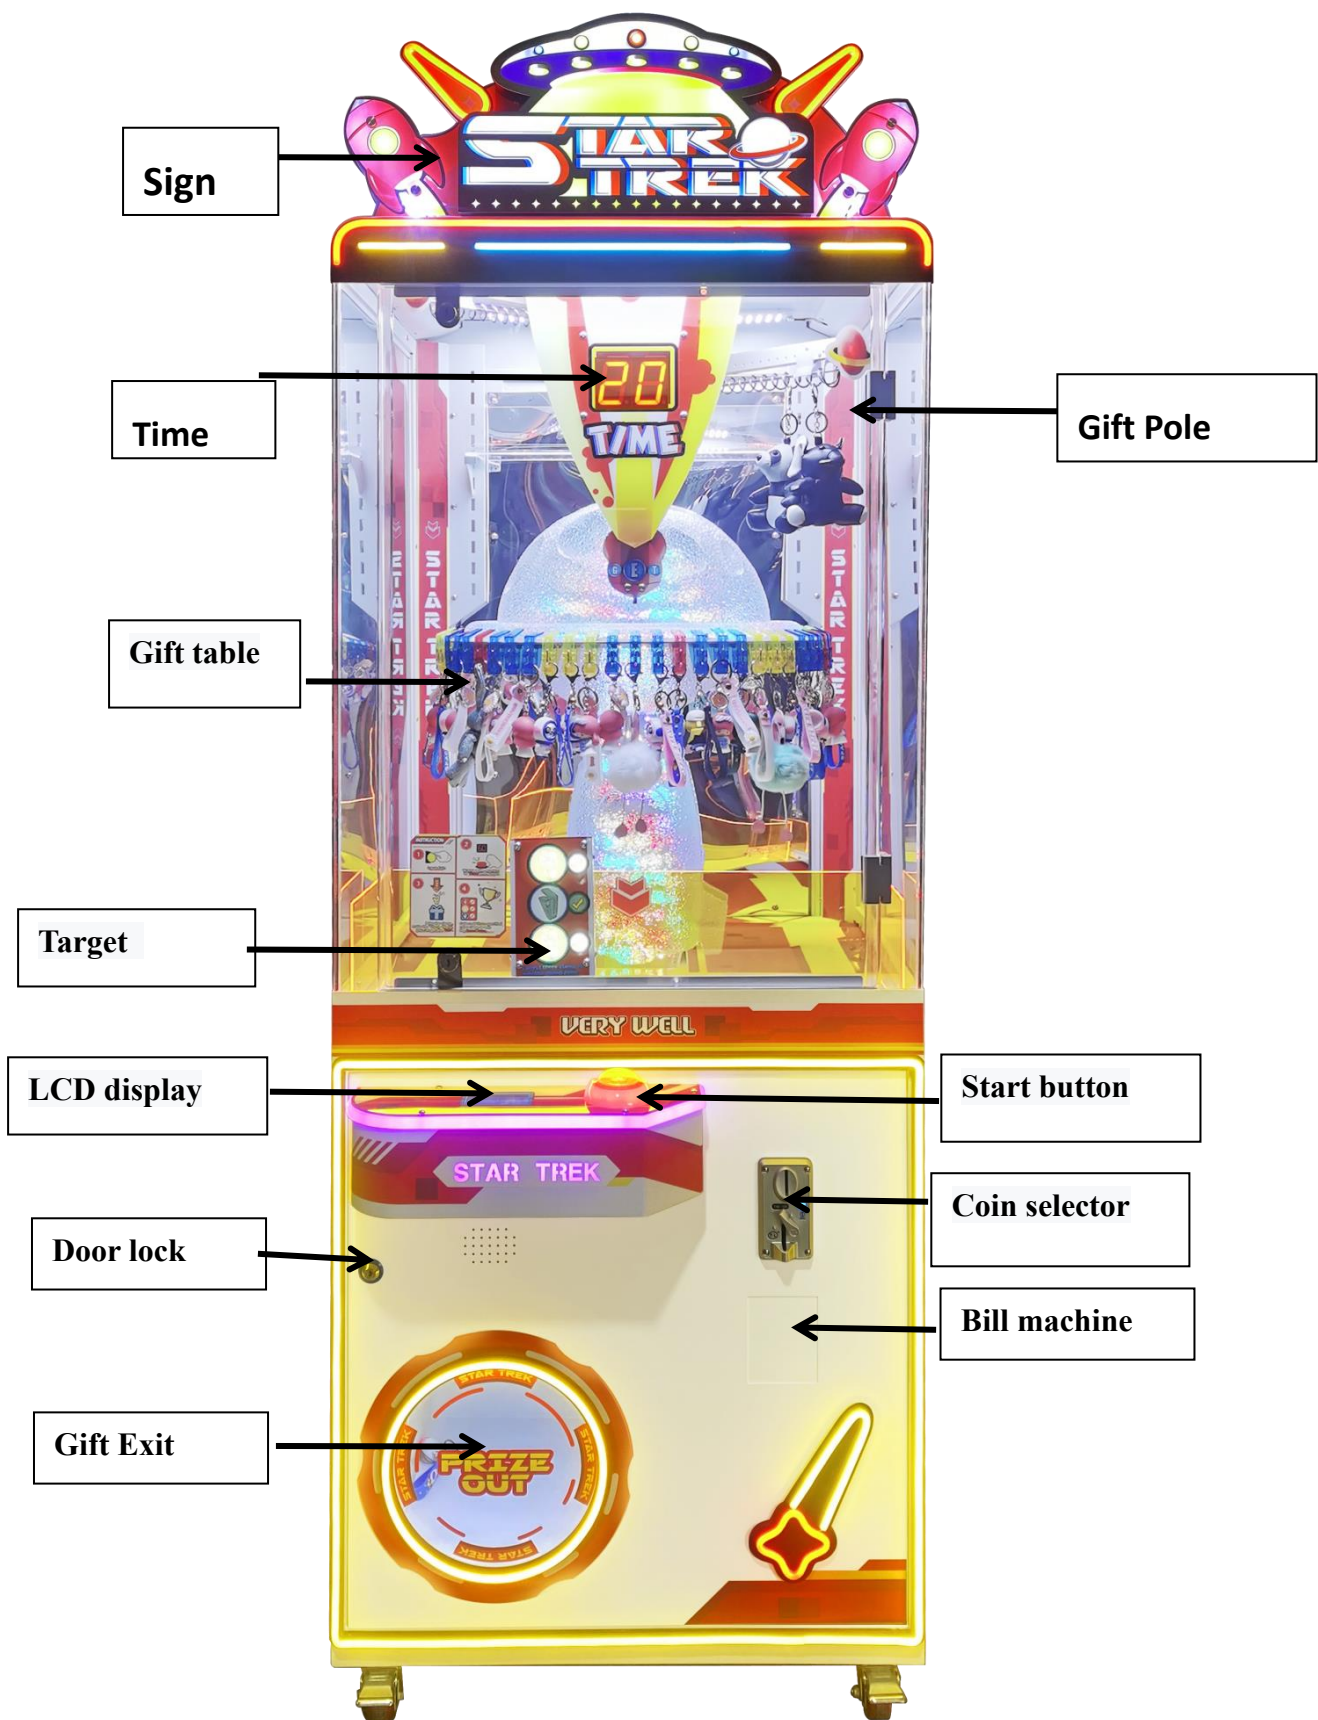

3. Attention WARNING




The machine is designed for indoor use only.

Never install this machine outdoors or in any of the following

- Locations exposed to direct sunlight
- Locations subject to rain or water leakage.
- Unstable locations or locations subject to vibration.
- Dusty, hot, or damp locations.


Game Leveling:

Install this machine on a flat surface. Make sure that the machine is level with the floor. If the machine is not level, the game may not play well.

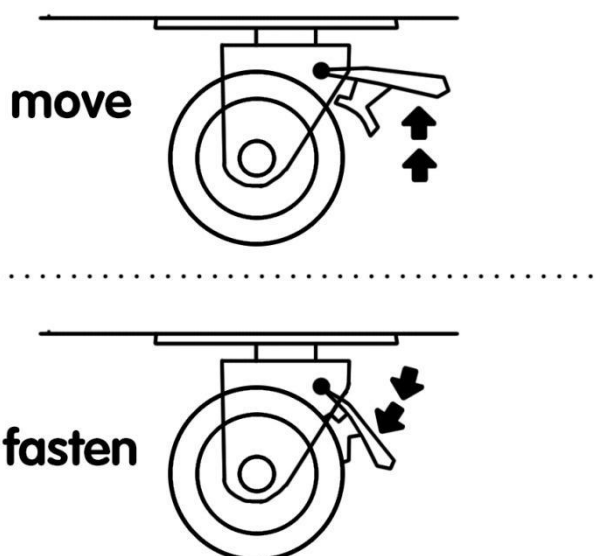


- ◆ Disconnect game power before moving
- ◆ Make sure all wheels are intact. Replace any wheels that are damaged or broken before moving the game.
- ◆ When moving the game, DO NOT slide the game across the floor
- ◆ Ensure the game is level before connecting the power.

Connecting the power cord:

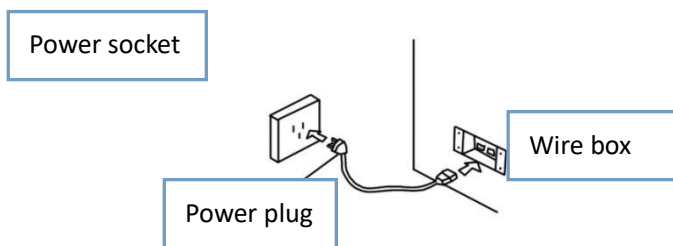


WARNING


- Do not put heavy items on power cord.

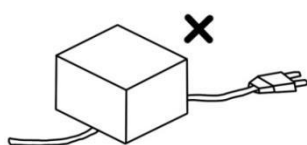

- Hold the power plug instead of the wire to draw the power cord out of the socket.

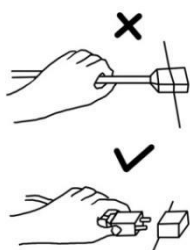

- Do not touch the power plug with wet hands.

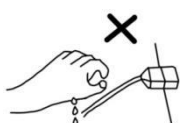

- Do not draw or twist the cord or near a heat source.
- Do not place the cord where the player can easily trip over or come in contact with it.



- Operate this game with the correct power and fuse configuration. (The machine's supply Voltage is 110VAC or 220VAC, if not, it can cause an electric shock or malfunction.)

4. How to play

1. Insert Coin, game start and the wheel turn.
2. In the specified time to see the right time to press the start button, the arrow down
3. If the arrow sticks to the clip, open the clip, and get a gift. If the pointer does not poke to the clip, which means that there is no winning prize, the game is over.
4. After accumulating 3 clips on the target panel, you can get "Bouns gift".

5 Package Part


Check the parts list before installation. Verify that all parts match the list and in good condition.

NO.	Name	PCS	Type/Model	Picture
1	Power line	1		
2	Key	3	818	
3	Instructions	1		
4	Clamp	6	Blue 2 pcs Yellow 2pcs Red 2PCS	



5	Sheet iron	2		
---	------------	---	--	--

6. Set

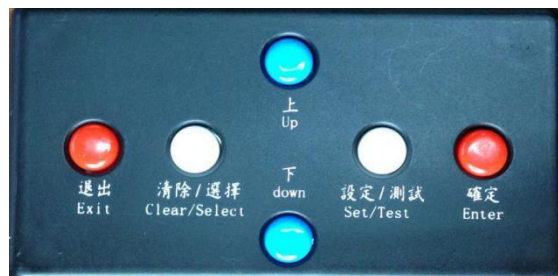

(Operating handle)

Press



enter background settings.

1: Account
2: Settings
3: Password
4: Version

6.1 Account

1	Press	
2	Press   enter account item. Permanent In : 000000 Out: 000000 Game: 000000	1: Account Temporary In : 000000 Out: 000000 Game: 000000



6.2 Parameter setting

1	Get into	
2	Press   enter item	2: Settings
3	Get into	
4	Screen prompt for password	Input Password Up and down keys 00000000 Select and Set
5	When the input is complete, press	
6	You can view the main interface for parameter settings	1. Input Value 2. Game Start 3. Difficulty 4. Free Mode 5. Game Time 6. Table Speed 7. Turntable 8. Location 9. Test 10. Music 11. Volume 12. Temporary 13. Factory



--	--	--

6.2.1 Press  each item that enters the parameter setting separately and adjust.

(Note: use of reference handle schematics)

Function	View	Instructions
1. Input Value	Coin acceptor1 1 Plus MUL x → 1 Bill acceptor1 1 Plus MUL x → 1	How much is a coin worth ? Range Values 1-10 How much is a paper currency worth? Range Values 1-10
2. Game Start	Game Start 1-10 1Coin 1 Play	1 coin X play: how many games for one coin? Range Values 1-10
3. Difficulty	Blue 1-30 → 30 Red 1-80 → 80 Yellow 1-50 → 50 Gift Pole 5-30 → 30	Blue Range Values 1-30 Yellow Range Values 1-50 Red Range Values 1-80 Gift Pole Range Values 5-30 How to win bouns gift: If the gift pole difficulty is set 5. It means adding 5 games to the difficulty sum of the 3 clips on the target panel to get the "bouns gift"





Target Panel		If the gift pole difficulty is set 10. It means adding 10 games to the difficulty sum of the 3 clips on the target panel to get the "bouns gift"
4. Free Mode	Free Mode Close	Free mode Range Values: Close Open
5. Game Time	Game Time Set 10-30 Second 10	Game time is optional for 10-30 seconds.. Range Values: 10-30
6. Table Speed	Table Speed Medium	Turntable speed Range Values : Fast, Medium , Slow
7. Turntable	Turntable Correcting Left: 000 Right:000	When the arrow avoids the clip, if the arrow is not in the middle of the two clips. You can use this option to fix to the middle. Range Values: Left:0-160 Range Values: Right:0-160



8. Location	Location Correcting Count : 2600	Positioning setting: Range Values: 500-4000
--	--	--



9. Test	1. Push Motor 2. Rotate Motor 3. Out Sense 4. SSR Test 5. Pole 1 Test 6. Pole 2 Test 7. Light Test 8. Burn Test Push Motor Stop 1 Signal: Yes Motor Test Stop Steps:00000 2 Signal: Yes Outlet Test 1 signal: None Pole 1 Test Pole 2 Test Light Board Test Close	Test motor 1 and detect whether the light eye is working properly Test motor 2 and detect whether the light eye is working properly Detection of the object mouth detects whether the light eye is working properly Pole 1、2 test Range Values: Close Open Light Board test Range Values: Close Open
10. Music	Standby Sound 5–20 Minute Close Open → Open	Music playing time: 5 minutes, 10 minutes, 15 minutes, 20 minutes, always turn off, always turn on. If 5 minutes is selected, music will stop playing after 5 minutes, and play again after 5 minutes, and so on.



11. Volume	Volume Set Volume 1-30 → 30	Volume adjustment can be directly adjusted in the background, there are 1-30 values optional. 1 for mute, the larger the number, the volume is higher, the maximum is 30.
12. Temporary	Temporary Sure press Enter CL press Exit	The account is cleared, and the key can be cleared by pressing the Enter key. Press the Exit key to exit the menu.
13. Factory	Factory Default Sure press Enter CL press Exit	The Factory Default , and the key can be cleared by pressing the Enter key. Press the Exit key to exit the menu. *Using factory Settings restores all Settings to their original state.

6.3 Password change

1	Get into	
2	Press   into Password change.	3: Password
3	Get into	




4	Password change interface	Input Password Up and Down Keys 00000000 Select and Set
5	When you have entered the old password, click	
6	New password interface	Password Set New Password 1000000 Up Down Select Set
7	When you have entered a new password, click	
8	Again input new password interface	Password Set Re New Password 1000000 Up Down Select Set
9	When the input is complete, press	
10	This interface indicates successful password modification	Password Set Password Success 1000000 Up Down Select Set



7. Board wire

7.1 Main board

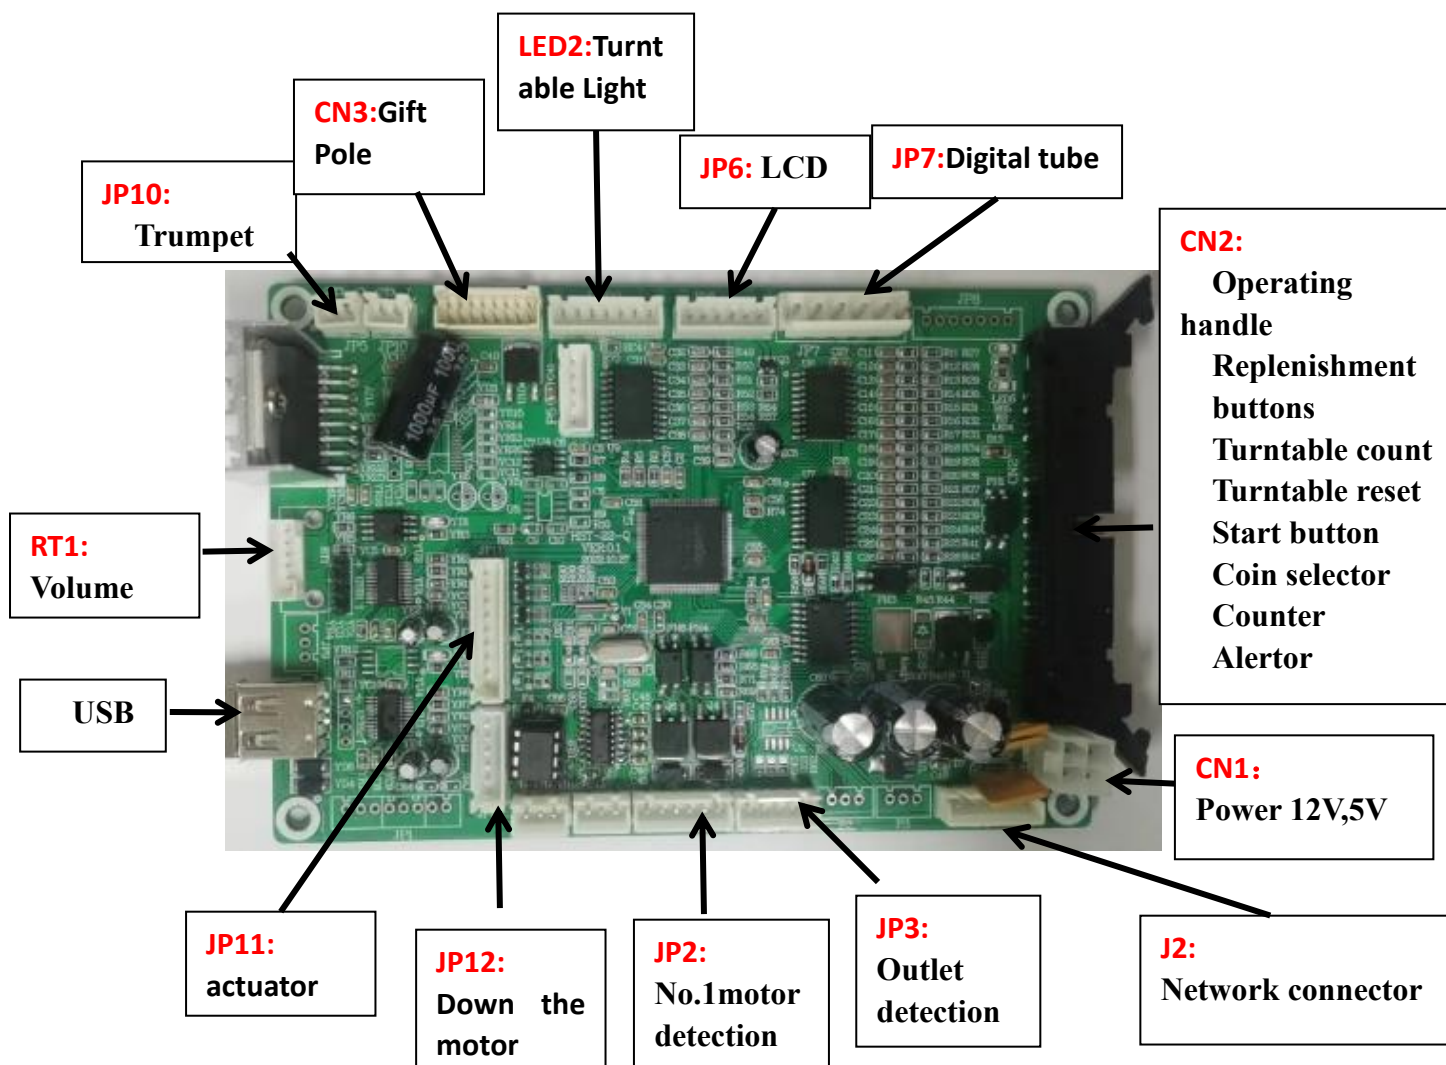

8. How to change demo music

If you want to change the DEMO music, The Main board USB unplug and then connected to the computer, Open USB file, 001.mp3, 002.mp3, 003.mp3, 004.mp3, music can be changed by request, but the file name and file format must be consistent with existing formats USB.

Note: 01 folder cannot be changed.



9. Error code

Error	How to eliminate
Coin Error	You need to turn the switch of the coin machine to NO
Move Alarm....	Restart the machine
Total Error	The revenue of the machine has reached the maximum of 99000; You need to go into the background and clear account
Poke Sensor Er	1、 Check whether the optical eye is normal 2、 Check that the motor is normal
Table Sensor Er	1、 Check whether the optical eye is normal 2、 Check that the motor is normal
Lack of gifts	Gift pole no more gift or microswitch fault

